

## 12.V-belt


### A: REMOVAL

1) Remove the collector cover.

#### NOTE:

Follow the steps below when removing the collector cover.


- (1) Pull up the two points at the rear (A).
- (2) Pull up the two points at the front (B) while moving them forward.

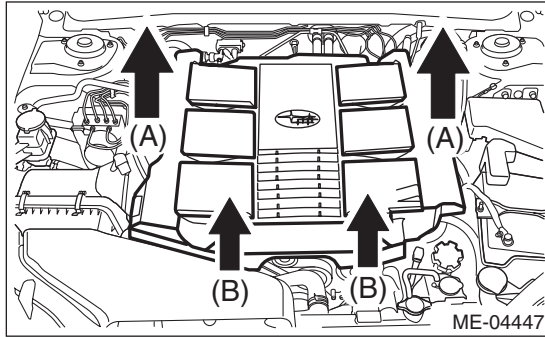

2) Remove the air intake duct. <Ref. to IN(H6DO)-8, REMOVAL, Air Intake Duct.>


3) Install the tool to the pulley bolt of the belt tension adjuster assembly.

4) Rotate the tool clockwise and loosen the V-belt to remove.

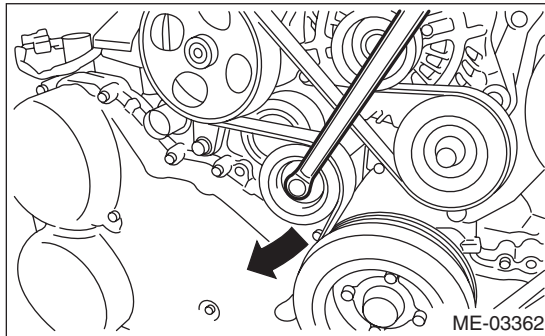

### B: INSTALLATION

Install in the reverse order of removal.

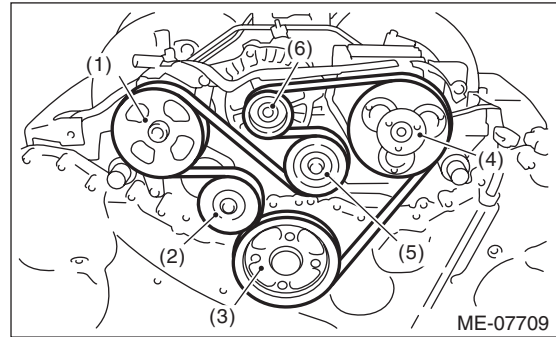


- (1) Power steering oil pump pulley
- (2) Belt tension adjuster ASSY
- (3) Crank pulley
- (4) A/C compressor pulley
- (5) Belt idler
- (6) Generator

### C: INSPECTION

1) Replace the V-belt, if cracks, fraying or wear is found.

2) Make sure that the V-belt automatic belt tension indicator (A) is within the range (D).

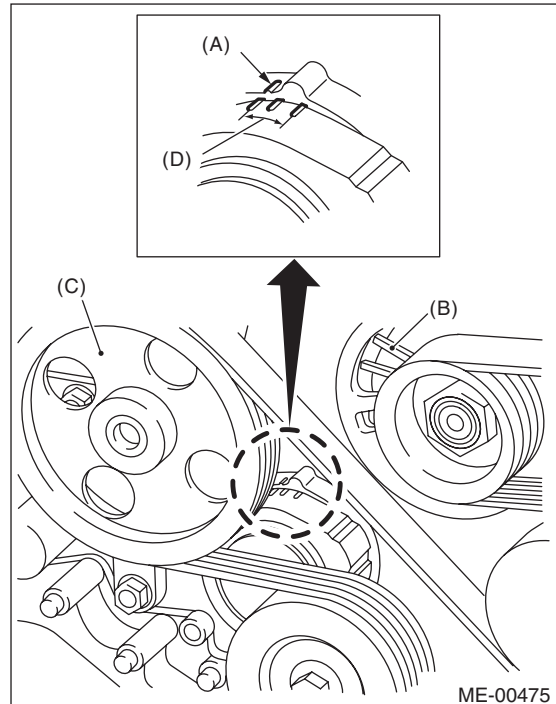

- (A) Indicator
- (B) Generator
- (C) Power steering oil pump pulley
- (D) Service limit