

22. Intake and Exhaust Valve

A: SPECIFICATION

Refer to "Cylinder Head" for removal and installation procedures of the intake and exhaust valves.
<Ref. to ME(H6DO)-92, REMOVAL, Cylinder Head.> <Ref. to ME(H6DO)-93, INSTALLATION, Cylinder Head.>