

24. Connecting Rod

A: SPECIFICATION

Refer to "Cylinder Block" for removal and installation procedures of connecting rods. <Ref. to ME(H6DO)-105, REMOVAL, Cylinder Block.>
<Ref. to ME(H6DO)-111, INSTALLATION, Cylinder Block.>