## 25.Crankshaft

## A: SPECIFICATION

Refer to "Cylinder Block" for removal and installation procedures of the crankshaft. <Ref. to ME(H6DO)-105, REMOVAL, Cylinder Block.> <Ref. to ME(H6DO)-111, INSTALLATION, Cylinder Block.>