

## 6. Engine Oil Pressure

### A: INSPECTION

- 1) Disconnect the ground cable from battery.
- 2) Remove the oil pressure switch from the oil pan upper. <Ref. to LU(H6DO)-15, REMOVAL, Oil Pressure Switch.>
- 3) Attach the oil pressure gauge to the oil pan upper.
- 4) Connect the battery ground terminal.
- 5) Start the engine, and check the oil pressure.

#### NOTE:

- If the oil pressure is out of specification, check oil pump, oil filter and lubrication line. <Ref. to LU(H6DO)-25, Engine Lubrication System Trouble in General.>
- If the oil pressure warning light is ON and oil pressure is within specification, check the oil pressure switch. <Ref. to LU(H6DO)-8, Oil Pressure System.> <Ref. to LU(H6DO)-15, Oil Pressure Switch.>

**Engine oil pressure (at oil temperature of 80°C (176°F)):**

#### **Standard**

**100 kPa (1.0 kgf/cm<sup>2</sup>, 15 psi) or more (at 700 rpm)**

**500 kPa (5.1 kgf/cm<sup>2</sup>, 73 psi) or more (at 5,000 rpm)**

- 6) After inspection, install the related parts in the reverse order of removal.