
1. General Description

A: SPECIFICATION

Item			Specifications
Vehicle model			AT
Starter	Туре		Reduction type
	Model		428000-5250
	Manufacturer		DENSO
	Voltage and output		12 V — 1.6 kW
	Direction of rotation		Counterclockwise (when observed from pinion)
	Number of pinion teeth		9
	No-load characteristics	Voltage	11 V
		Current	90 A or less
		Rotating speed	1,550 rpm or more
	Load characteristics	Voltage	8 V
		Current	370 A
		Torque	12.8 N·m (1.3 kgf-m, 9.4 ft-lb) or more
		Rotating speed	800 rpm or more
	Lock characteristics	Voltage	3 V
		Current	750 A or less
		Torque	19.0 N⋅m (1.9 kgf-m, 14.0 ft-lb) or more
Generator	Туре		Rotating-field three-phase type, voltage regulator built-in type, with load response control system
	Model		A3TJ3591
	Manufacturer		Mitsubishi Electric
	Voltage and output		12 V — 130 A
	Polarity on ground side		Negative
	Direction of rotation		Clockwise (when observed from pulley side)
	Stator connection		3-phase $ riangle$ type
	Output current		1,500 rpm — 55 A or more 2,500 rpm — 108 A or more 5,000 rpm — 127 A or more
	Regulated voltage		14.1 — 14.8 V [20°C (68°F)]
	Rotor slip ring outer diameter	Standard	22.7 mm (0.894 in)
		Limit	22.1 mm (0.870 in)
	Brush length	Standard	22.5 mm (0.886 in)
		Limit	5.0 mm (0.197 in)
Battery	Type and capacity		12 V — 52 AH (75D 23R)
	CCA		490A

B: COMPONENT

1. STARTER

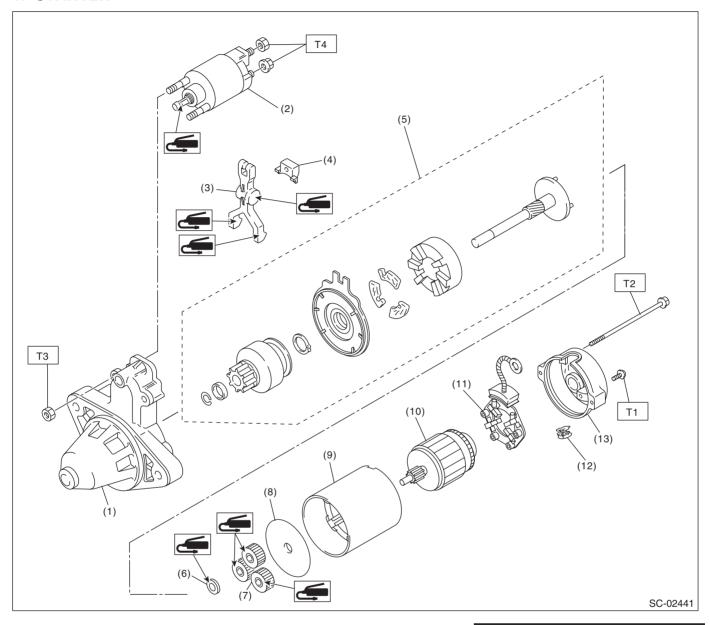

- (1) Starter housing
- (2) Magnet switch ASSY
- (3) Shift lever
- (4) Starter seal
- (5) Overrunning clutch ASSY
- (6) Washer
- (7) Planetary gear

- (8) Starter plate
- (9) Yoke
- (10) Armature
- (11) Brush holder ASSY
- (12) Drain duct
- (13) Starter cover

Tightening torque: N⋅m (kgf-m, ft-lb)


T1: 1.4 (0.1, 1.0)

T2: 6 (0.6, 4.4)

T3: 7.5 (0.8, 5.5)

T4: 10 (1.0, 7.4)

2. GENERATOR

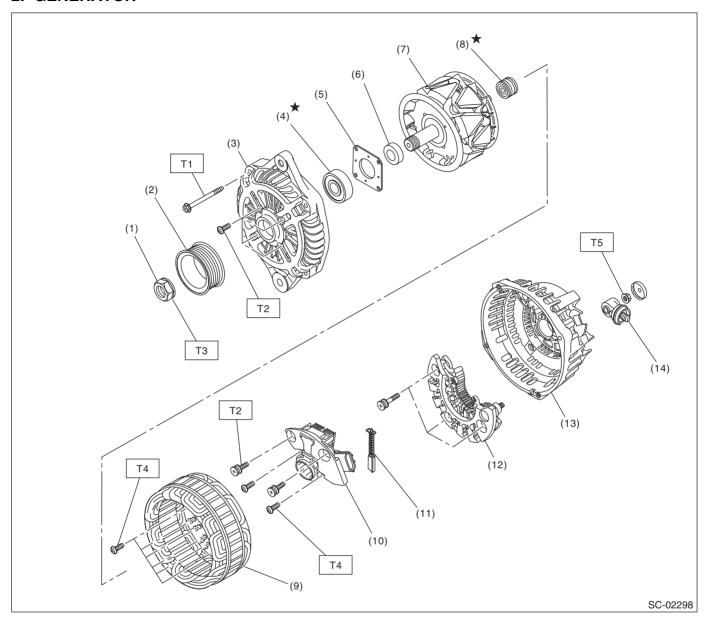

- (1) Pulley nut
- (2) Pulley
- (3) Front cover
- (4) Ball bearing
- (5) Bearing retainer
- (6) Spacer
- (7) Rotor

- (8) Bearing
- (9) Stator coil
- (10) IC regulator
- (11) Brush
- (12) Rectifier
- (13) Rear cover
- (14) Terminal B

Tightening torque: N⋅m (kgf-m, ft-lb)

T1: 4.4 (0.4, 3.2)


T2: 3.9 (0.4, 2.9)

T3: 117.5 (12.0, 86.7)

T4: 2 (0.2, 1.5)

T5: 8.9 (0.9, 6.6)

3. GENERATOR BRACKET

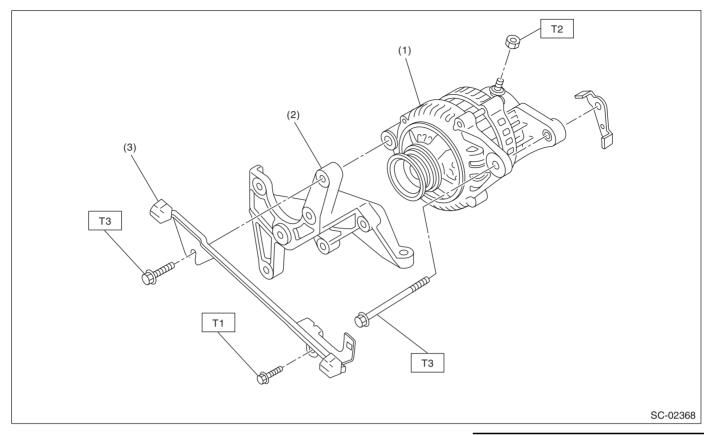

- (1) Generator
- (2) Power steering pump bracket
- (3) Collector cover bracket

Tightening torque: N⋅m (kgf-m, ft-lb)

T1: 6.4 (0.7, 4.7) T2: 16 (1.6, 11.8) T3: 25 (2.5, 18.4)

C: CAUTION

- Prior to starting work, pay special attention to the following:
 - 1. Always wear work clothes, a work cap, and protective shoes. Additionally, wear a helmet, protective goggles, etc. if necessary.
 - 2. Protect the vehicle using a seat cover, fender cover, etc.
 - 3. Prepare the service tools, clean cloth, containers to catch grease and oil, etc.
- Vehicle components are extremely hot immediately after driving. Be wary of receiving burns from heated parts.
- When performing a repair, identify the cause of trouble and avoid unnecessary removal, disassembly and replacement.
- Before disconnecting connectors of sensors or units, be sure to disconnect the ground cable from battery.
- Always use the jack-up point when the shop jacks or rigid racks are used to support the vehicle.
- Remove contamination including dirt and corrosion before removal, installation, disassembly or assembly.
- Keep the removed parts in order and protect them from dust and dirt.
- All removed parts, if to be reused, should be reinstalled in the original positions with attention to the correct directions, etc.
- Bolts, nuts and washers should be replaced with new parts as required.
- Be sure to tighten the fasteners including bolts and nuts to the specified torque.

D: PREPARATION TOOL

1. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance, voltage and current.