

8. Inspection Mode

A: PROCEDURE

1) Start the engine, and operate and release the electronic parking brake a few times with the vehicle at a standstill.

2) Check if the warning light illuminates or blinks, or DTC is displayed.

NOTE:

If the DTC is displayed, perform the diagnosis using “Diagnostic Procedure with Diagnostic Trouble Code (DTC)”. <Ref. to PB(diag)-32, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

3) Drive the vehicle at least 10 minutes, and operate and release the electronic parking brake a few times.

CAUTION:

Do not drive the vehicle with the warning light illuminated or blinked.