


Relay and Fuse

PARKING BRAKE

3. Relay and Fuse

A: LOCATION

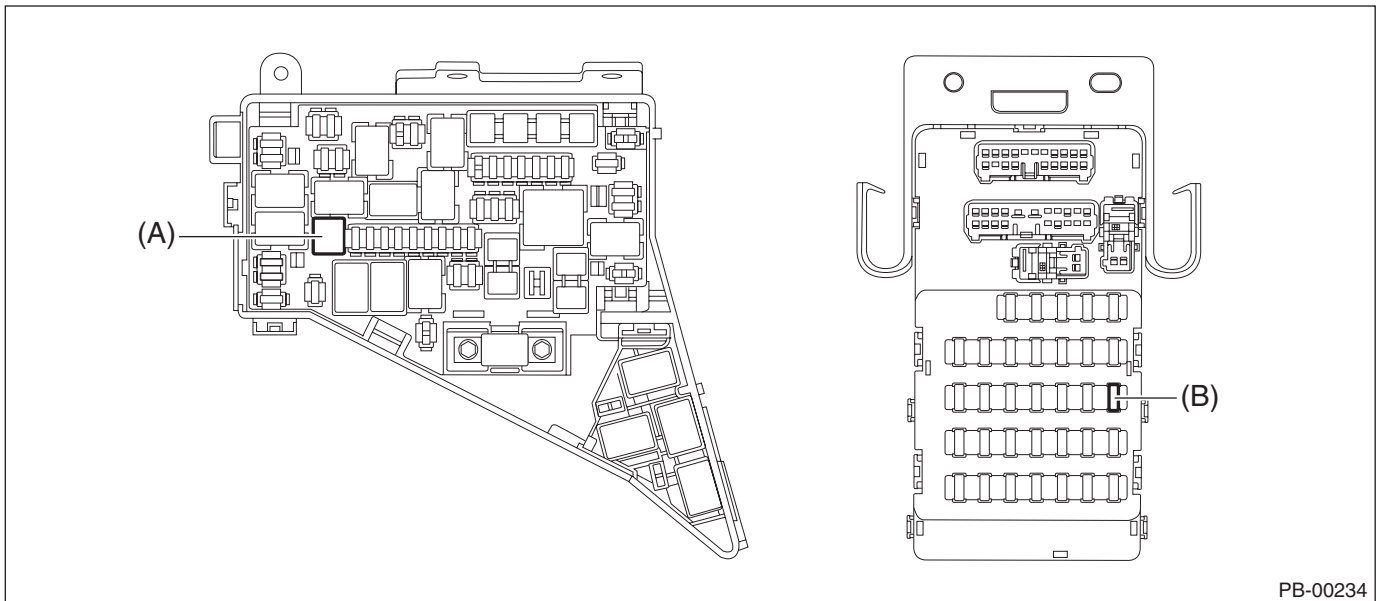

Main fuse box	Fuse 30A (EPB CM)	(A)
Relay & fuse box	Fuse 7.5A (hill hold switch, EPB CM)	(B)

NOTE:

For other related fuses, refer to the wiring diagram. <Ref. to WI-15, Power Supply Circuit.>

B: INSPECTION

1. CHECK FUSE

- 1) Remove the fuse and inspect visually.
- 2) If the fuse is blown out, replace the fuse.