

# General Diagnostic Table

PARKING BRAKE

---

## 8. General Diagnostic Table

### A: INSPECTION

Symptoms	Possible cause	Corrective action
Brake drag	Defective parking brake actuator	Replace.
	Parking brake cable does not move.	Replace.
	Parking brake shoe clearance is maladjusted.	Adjust.
	Return spring is faulty.	Replace.
Noise from brake	Return spring is faulty.	Replace.

# PARKING BRAKE (DIAGNOSTICS)

# *PB(diag)*

---

	<b>Page</b>
1. Basic Diagnostic Procedure .....	2
2. Check List for Interview .....	4
3. General Description .....	7
4. Electrical Component Location .....	9
5. Control Module I/O Signal .....	11
6. Subaru Select Monitor .....	13
7. Read Diagnostic Trouble Code (DTC) .....	21
8. Inspection Mode .....	22
9. Clear Memory Mode .....	23
10. Warning Light Illumination Pattern .....	24
11. List of Diagnostic Trouble Code (DTC) .....	30
12. Diagnostic Procedure with Diagnostic Trouble Code (DTC) .....	32
13. General Diagnostic Table .....	61