


4. Rear Trailing Link

A: REMOVAL

- 1) Lift up the vehicle, and then remove the rear wheels.
- 2) Remove the trailing link.
 - (1) Remove the bracket, and remove the parking brake cable from the guide (a).
 - (2) Remove the bolts and nuts, and then remove the trailing link.

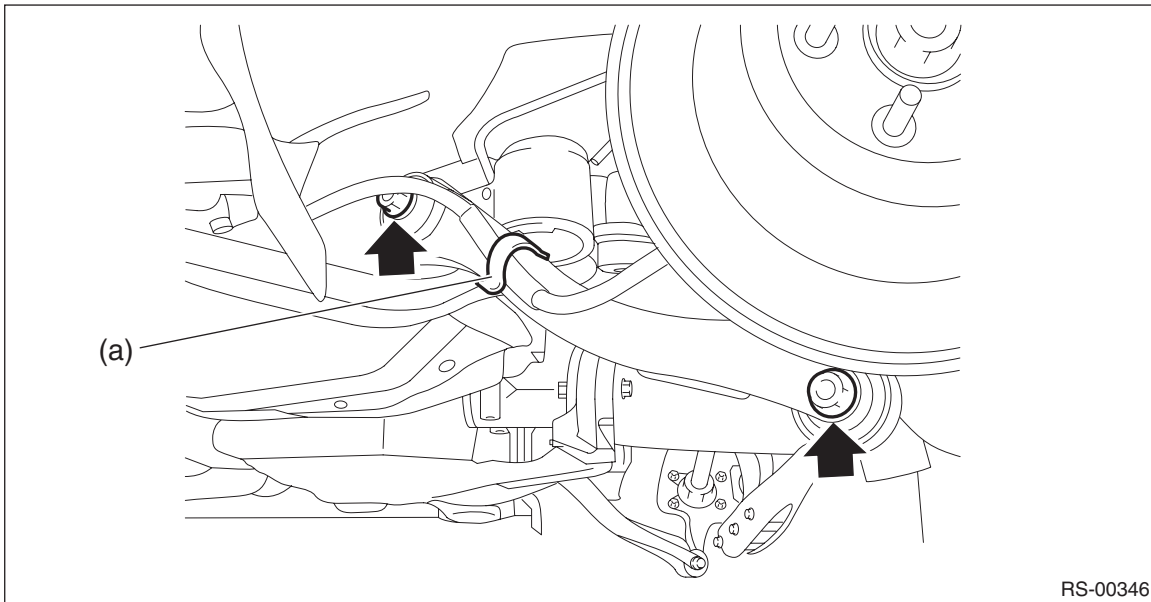

B: INSTALLATION

CAUTION:

- Be sure to use a new self-locking nut.
- Always tighten the bushing in the state where the vehicle is at curb weight and the wheels are in full contact with the ground.

Install each part in the reverse order of removal.

Tightening torque:

Trailing link — rear axle housing: 80 N·m (8.16 kgf-m, 59.0 ft-lb)

Trailing link — rear sub frame: 120 N·m (12.24 kgf-m, 88.5 ft-lb)

Rear Trailing Link

REAR SUSPENSION

C: DISASSEMBLY


1. TRAILING LINK BUSHING

Using the ST, push out the bushing.

PREPARATION TOOL:

ST-A: INSTALLER (899874100)

ST-B: PRESS (499755602)

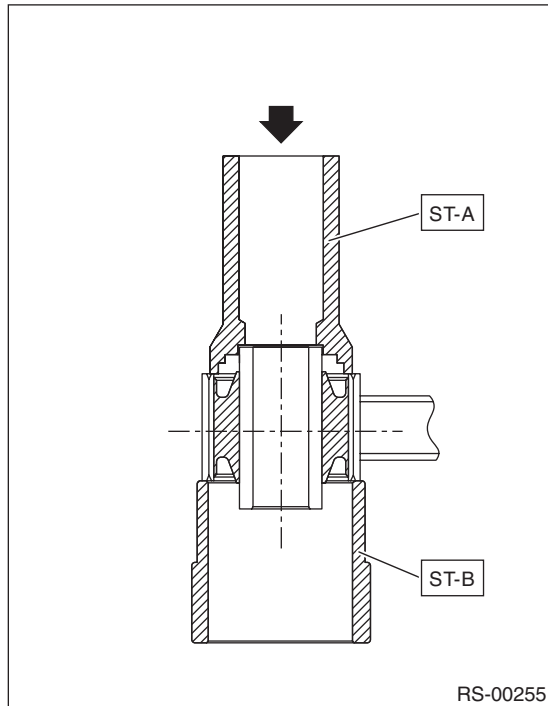


2. REAR AXLE HOUSING BUSHING

- 1) Remove the rear axle housing. <Ref. to DS-30, REMOVAL, Rear Axle.>
- 2) Using the ST and a hydraulic press, push out the bushing.

PREPARATION TOOL:

ST1: BUSHING REMOVER (20099FG000)

ST2: INSTALLER & REMOVER (BASE) (20099PA010)

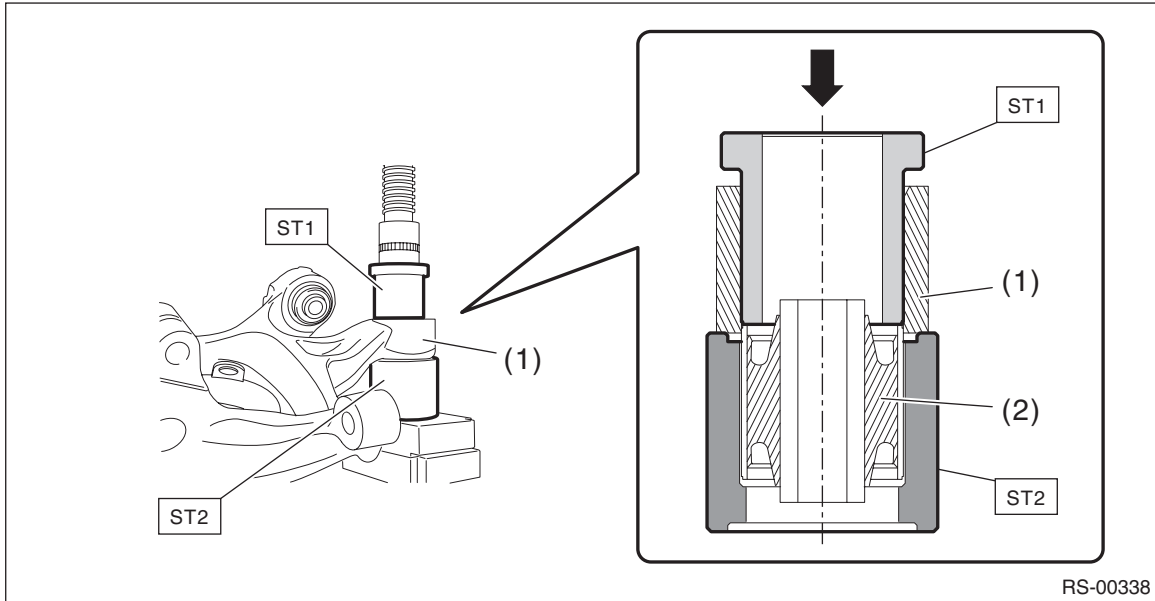

(1) Rear axle housing

(2) Bushing

Rear Trailing Link

REAR SUSPENSION

D: ASSEMBLY

1. TRAILING LINK BUSHING

- 1) Before assembly, inspect the following items and replace any faulty part with a new one.
 - Perform visual check for damage or bend on the trailing link.
 - Visually check the bushing for abnormal cracks, fatigue or damage.
- 2) Using the ST-A and ST-B, press-fit the bushing.


CAUTION:

Make sure to press the bushing straight in.

PREPARATION TOOL:

ST-A: INSTALLER (899874100)

ST-B: PRESS (499755602)

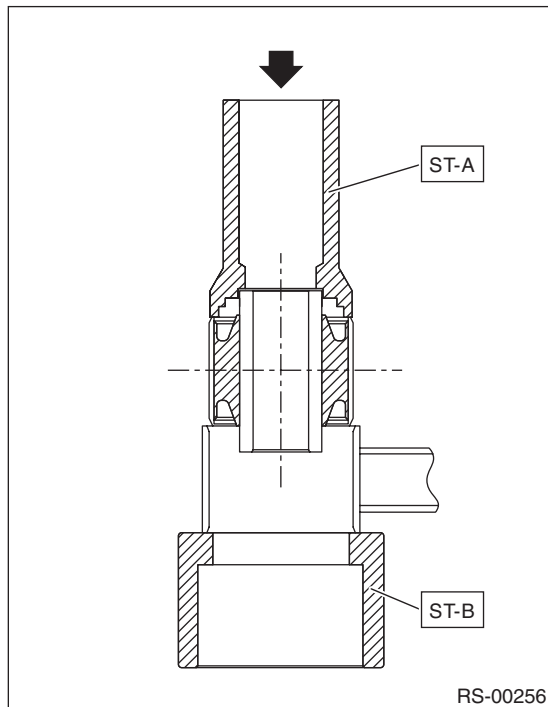

2. REAR AXLE HOUSING BUSHING

- 1) Before assembly, inspect the following items and replace any faulty part with a new one.
 - Perform visual check for damage or bend on the trailing link.
 - Visually check the bushing for abnormal cracks, fatigue or damage.
- 2) Press-fit the bushing using ST and the hydraulic press.


CAUTION:

Make sure to press the bushing straight in.

PREPARATION TOOL:

ST1: BUSHING REMOVER (20099FG000)

ST2: INSTALLER & REMOVER (BASE) (20099PA010)

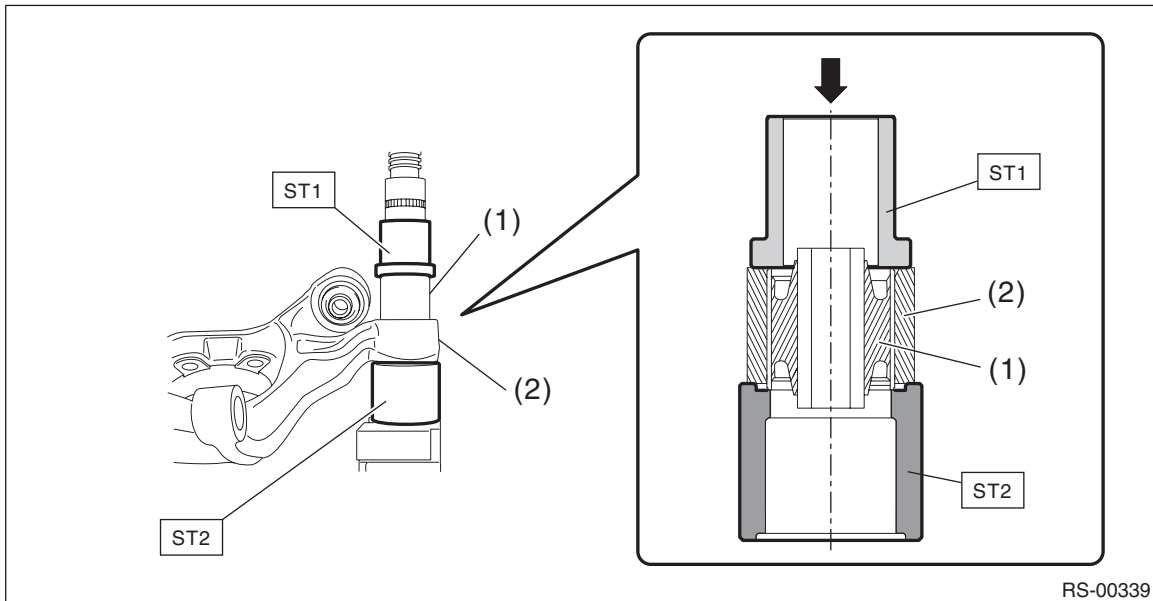

(1) Bushing

(2) Rear axle housing