

## **Display Transmitter (ID)**

TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

---

### **10.Display Transmitter (ID)**

#### **A: OPERATION**

For the operation procedure, refer to the “PC application help for Subaru Select Monitor”.