13.List of Diagnostic Trouble Code (DTC)

A: LIST

DTC	Item	Contents of diagnosis	Remarks
11	Tire 1 Air Pressure Decrease	Tire pressure of tire 1 is reduced.	<ref. 1="" 11="" air<br="" dtc="" tire="" to="" tpm(diag)-23,="">PRESSURE DECREASE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).></ref.>
12	Tire 2 Air Pressure Decrease	Tire pressure of tire 2 is reduced.	<ref. (dtc).="" 12="" 2="" air="" code="" decrease,="" diagnostic="" dtc="" pressure="" procedure="" tire="" to="" tpm(diag)-23,="" trouble="" with=""></ref.>
13	Tire 3 Air Pressure Decrease	Tire pressure of tire 3 is reduced.	<ref. (dtc).="" 13="" 3="" air="" code="" decrease,="" diagnostic="" dtc="" pressure="" procedure="" tire="" to="" tpm(diag)-23,="" trouble="" with=""></ref.>
14	Tire 4 Air Pressure Decrease	Tire pressure of tire 4 is reduced.	<ref. (dtc).="" 14="" 4="" air="" code="" decrease,="" diagnostic="" dtc="" pressure="" procedure="" tire="" to="" tpm(diag)-24,="" trouble="" with=""></ref.>
21	Transmitter 1 No Data	Data cannot be received from transmitter 1.	<ref. 1<br="" 21="" dtc="" to="" tpm(diag)-24,="" transmitter="">NO DATA, Diagnostic Procedure with Diagnostic Trouble Code (DTC).></ref.>
22	Transmitter 2 No Data	Data cannot be received from transmitter 2.	<ref. 22="" 2<br="" dtc="" to="" tpm(diag)-24,="" transmitter="">NO DATA, Diagnostic Procedure with Diagnostic Trouble Code (DTC).></ref.>
23	Transmitter 3 No Data	Data cannot be received from transmitter 3.	<ref. 23="" 3<br="" dtc="" to="" tpm(diag)-24,="" transmitter="">NO DATA, Diagnostic Procedure with Diagnostic Trouble Code (DTC).></ref.>
24	Transmitter 4 No Data	Data cannot be received from transmitter 4.	<ref. 24="" 4<br="" dtc="" to="" tpm(diag)-25,="" transmitter="">NO DATA, Diagnostic Procedure with Diagnostic Trouble Code (DTC).></ref.>
31	Transmitter 1 Pressure Data Abnormal	Transmitter 1 data contents are abnormal.	<ref. (dtc).="" 1="" 31="" abnormal,="" code="" data="" diagnostic="" dtc="" pressure="" procedure="" to="" tpm(diag)-26,="" transmitter="" trouble="" with=""></ref.>
32	Transmitter 2 Pressure Data Abnormal	Transmitter 2 data contents are abnormal.	<ref. 2<br="" 32="" dtc="" to="" tpm(diag)-26,="" transmitter="">PRESSURE DATA ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).></ref.>
33	Transmitter 3 Pressure Data Abnormal	Transmitter 3 data contents are abnormal.	<ref. 33="" 3<br="" dtc="" to="" tpm(diag)-26,="" transmitter="">PRESSURE DATA ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).></ref.>
34	Transmitter 4 Pressure Data Abnormal	Transmitter 4 data contents are abnormal.	<ref. 34="" 4<br="" dtc="" to="" tpm(diag)-27,="" transmitter="">PRESSURE DATA ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).></ref.>
41	Transmitter 1 Function Code Abnormal	Function code has error.	<ref. (dtc).="" 1="" 41="" abnormal,="" code="" diagnostic="" dtc="" function="" procedure="" to="" tpm(diag)-28,="" transmitter="" trouble="" with=""></ref.>
42	Transmitter 2 Function Code Abnormal	Function code has error.	<ref. (dtc).="" 2="" 42="" abnormal,="" code="" diagnostic="" dtc="" function="" procedure="" to="" tpm(diag)-28,="" transmitter="" trouble="" with=""></ref.>
43	Transmitter 3 Function Code Abnormal	Function code has error.	<ref. (dtc).="" 3="" 43="" abnormal,="" code="" diagnostic="" dtc="" function="" procedure="" to="" tpm(diag)-28,="" transmitter="" trouble="" with=""></ref.>
44	Transmitter 4 Function Code Abnormal	Function code has error.	<ref. 44="" 4<br="" dtc="" to="" tpm(diag)-29,="" transmitter="">FUNCTION CODE ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).></ref.>
51	Transmitter 1 Battery Voltage Decrease	Transmitter battery voltage is low.	<ref. 1<br="" 51="" dtc="" to="" tpm(diag)-30,="" transmitter="">BATTERY VOLTAGE DECREASE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).></ref.>

List of Diagnostic Trouble Code (DTC)

TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

DTC	Item	Contents of diagnosis	Remarks
52	Transmitter 2 Battery Voltage Decrease	Transmitter battery voltage is low.	<ref. 2<br="" 52="" dtc="" to="" tpm(diag)-30,="" transmitter="">BATTERY VOLTAGE DECREASE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).></ref.>
53	Transmitter 3 Battery Voltage Decrease	Transmitter battery voltage is low.	<ref. 3<br="" 53="" dtc="" to="" tpm(diag)-30,="" transmitter="">BATTERY VOLTAGE DECREASE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).></ref.>
54	Transmitter 4 Battery Voltage Decrease	Transmitter battery voltage is low.	<ref. (dtc).="" 4="" 54="" battery="" code="" decrease,="" diagnostic="" dtc="" procedure="" to="" tpm(diag)-31,="" transmitter="" trouble="" voltage="" with=""></ref.>
61	Vehicle Speed is Abnormal	Vehicle speed signal is not input to the control module when the vehicle speed is 6 km/h (3.7 MPH) or more.	<ref. (dtc).="" 61="" abnormal,="" code="" diagnostic="" dtc="" is="" procedure="" speed="" to="" tpm(diag)-32,="" trouble="" vehicle="" with=""></ref.>