

General Diagnostic Table

TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

15. General Diagnostic Table

A: INSPECTION

Symptoms		Faulty parts
Tire pressure warning light illuminates.	Tire pressure is reduced.	<ul style="list-style-type: none">• Improper tire pressure adjustment.• Punctured tire
Tire pressure warning light blinks 25 times and then illuminates.	Tire pressure monitoring system has malfunction.	<ul style="list-style-type: none">• Air pressure sensor malfunction• Air pressure sensor is out of battery.• Defective TPMS & keyless entry CM or TPMS CM• Defective vehicle harness• Defective combination meter
Tire pressure is dropping but the warning light does not illuminate.	Tire pressure warning light does not illuminate.	<ul style="list-style-type: none">• Air pressure sensor is faulty.• Defective TPMS & keyless entry CM or TPMS CM• Defective combination meter

General Diagnostic Table

TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

DIFFERENTIALS

DI

	Page
1. General Description	2
2. Differential Gear Oil	22
3. Front Differential Assembly	25
4. Rear Differential (T-type)	26
5. Rear Differential (VA-type)	45
6. Rear Differential Front Oil Seal	73
7. Rear Differential Side Oil Seal	75
8. Rear Differential Front Member	76
9. Rear Differential Mount Bushing	77
10. Rear Differential Inspection Mode	81
11. General Diagnostic Table	82