

Center Differential

TRANSFER CASE

11.Center Differential

A: NOTE

For removal, installation and inspection, refer to "6MT" section. <Ref. to 6MT-49, Center Differential.>