

## 3. Transfer Clutch

### A: NOTE

For removal, installation and inspection, refer to "5AT" or "CVT" section.

5AT model:

<Ref. to 5AT-66, Transfer Clutch.>

CVT model:

<Ref. to CVT-167, Transfer Clutch.>