

5. Oil Seal

A: NOTE

For replacement and inspection, refer to “5AT”, “CVT” or “6MT” section.

5AT model:

<Ref. to 5AT-47, Extension Case Oil Seal.>

CVT model:

<Ref. to CVT-90, Extension Case Oil Seal.>

6MT model:

<Ref. to 6MT-34, Oil Seal.>