12.List of Diagnostic Trouble Code (DTC)

A: LIST

DTC	Item	Content of diagnosis	Note
None	Communication for Initializing Impossible	Subaru Select Monitor communication is open or shorted.	<ref. (dtc).="" code="" communication="" diagnostic="" for="" impossible,="" initializing="" lan(diag)-70,="" procedure="" to="" trouble="" with=""></ref.>
B1100	Integ. Unit System Error	Body integrated unit internal error	<ref. (dtc).="" b1100="" bc(diag)-25,="" code="" diagnostic="" dtc="" error,="" integ.="" procedure="" system="" to="" trouble="" unit="" with=""></ref.>
B1101	BATT P/Supply Malfunction Cont	Voltage malfunction caused by poor contact of battery power supply con- trol circuits	<ref. b1101="" batt="" bc(diag)-26,="" dtc="" p="" sup-<br="" to="">PLY MALFUNCTION CONT, Diagnostic Proce- dure with Diagnostic Trouble Code (DTC).></ref.>
B1102	BATT P/Supply Malfunction Backup	Voltage malfunction caused by poor contact of battery power supply backup circuits	<ref. b1102="" batt="" bc(diag)-28,="" dtc="" p="" sup-<br="" to="">PLY MALFUNCTION BACKUP, Diagnostic Pro- cedure with Diagnostic Trouble Code (DTC).></ref.>
B1103	Ignition Power Failure	Voltage malfunction caused by poor contact of IGN power supply circuits	<ref. (dtc).="" b1103="" bc(diag)-30,="" code="" diagnostic="" dtc="" failure,="" ignition="" power="" procedure="" to="" trouble="" with=""></ref.>
B1104	ACC Power Failure	Voltage malfunction caused by poor contact of ACC power supply circuits	<ref. (dtc).="" acc="" b1104="" bc(diag)-32,="" code="" diagnostic="" dtc="" failure,="" power="" procedure="" to="" trouble="" with=""></ref.>
B1106	Shift Lock Circuit Failure	Voltage malfunction caused by poor contact of shift lock circuits	<ref. (dtc).="" b1106="" bc(diag)-34,="" circuit="" code="" diagnostic="" dtc="" failure,="" lock="" procedure="" shift="" to="" trouble="" with=""></ref.>
B1401	M Collation NG	Malfunction related immobilizer	<ref. b1401="" bc(diag)-36,="" colla-<br="" dtc="" m="" to="">TION NG, Diagnostic Procedure with Diagnos- tic Trouble Code (DTC).></ref.>
B1402	Immobilizer Key Collation NG	Malfunction related immobilizer	<ref. b1402="" bc(diag)-36,="" dtc="" immobi-<br="" to="">LIZER KEY COLLATION NG, Diagnostic Proce- dure with Diagnostic Trouble Code (DTC).></ref.>
B1405	SCU Collation NG	Malfunction related immobilizer	<ref. b1405="" bc(diag)-36,="" colla-<br="" dtc="" scu="" to="">TION NG, Diagnostic Procedure with Diagnos- tic Trouble Code (DTC).></ref.>
B1406	SCU_EEPROM_NG	Malfunction related immobilizer	<ref. b1406<br="" bc(diag)-36,="" dtc="" to="">SCU_EEPROM_NG, Diagnostic Procedure with Diagnostic Trouble Code (DTC).></ref.>
B1500	Keyless UART Com. Malfunction	Open or short circuit in keyless UART circuit	<ref. (dtc).="" b1500="" bc(diag)-37,="" code="" com.="" diagnostic="" dtc="" keyless="" malfunction,="" procedure="" to="" trouble="" uart="" with=""></ref.>