

General Diagnostic Table

BODY CONTROL SYSTEM (DIAGNOSTICS)

14. General Diagnostic Table

A: INSPECTION

Using the Subaru Select Monitor, read DTC, or check the following data on the current data display to make judgments.

Item	Operation	Specifications		Note
		YES	NO	
Diagnostic trouble code	DTC is not displayed when inspecting all DTCs.	DTC is not displayed.	Perform the diagnosis according to DTC.	—
Remaining fuel level	Fuel gauge displays correctly.	System is normal.	Check the combination meter system and LAN system.	—
	Remaining fuel level warning light is not illuminating.	System is normal.		
Clearance light (Low beam) (High beam)	Clearance light and low/high beams illuminate normally when the switch is operated. Indicator in the meter illuminates at the same time.	System is normal.	Check the lighting system, combination meter system and LAN system.	—
Fog light	Front fog light illuminates when the switch is operated. Indicator in the meter illuminates at the same time.	System is normal.	Check the lighting system, combination meter system and LAN system.	—
Rear defogger	Rear defogger operates when the switch is operated. The indicator illuminates at the same time.	System is normal.	Check the rear window defogger system and A/C system.	—
Wiper deicer	Wiper deicer operates when the switch is operated. The indicator illuminates at the same time. When the ambient temperature is 5°C (41°F) or higher, press the switch 3 seconds or more to forcibly activate the system.	System is normal.	Check the wiper deicer system and A/C system.	Wiper deicer operates when “Wiper deicer setting” of the body integrated unit is set to on.
DRL	After starting the engine and releasing the parking brake, the DRL illuminates.	System is normal.	Check the lighting system and LAN system.	—
Rear wiper	Rear wiper operates when the switch is operated.	System is normal.	Check wiper or washer system.	Depending on user customizing “Sedan/Wagon Setting” of the body integrated unit, vehicle sensory time varies.
Key interlock	<ul style="list-style-type: none"> Key cannot be removed in other than P range. Key can be removed in other than P range. 	System is normal.	Check the body control system.	—
Shift lock	The select lever can be moved from the P range to other ranges only when the brake pedal is depressed with IG ON.	System is normal.	Check the body control system.	—
Key warning switch alarm	When the driver’s door is open without the key removed, the buzzer sounds.	System is normal.	Check the combination meter and body control system.	—

General Diagnostic Table

BODY CONTROL SYSTEM (DIAGNOSTICS)

Item	Operation	Specifications		Note
		YES	NO	
Seat belt warning alarm	Indicator in the meter blinks and the alarm sounds when the driver's seat belt is not fastened. Indicator in the clock blinks when the passenger's seat is occupied without the passenger's seat belt fastened. When the vehicle speed exceeds 15 km/h (9 MPH) with the belt unfastened, the buzzer sounds.	System is normal.	Check the seat belt system and combination meter LAN system.	—
Door lock	The doors lock/unlock when the door switch is operated. Rear gate/trunk opens when the rear gate/trunk release switch is operated.	System is normal.	Check the security & lock and body control system.	If user customizing "Sedan/Wagon Setting" is different, trunk and rear gate do not open.
Keyless entry	The lock locks/unlocks when the keyless transmitter is operated. Trunk/rear gate unlocks when trunk/rear gate unlock button is operated.	System is normal.	Check the keyless entry and body control system.	—
Keyless access	The lock locks/unlocks when the access key is operated. With the access key held, the request switch operation locks/door touch sensor operation unlocks. Trunk/rear gate unlocks when trunk/rear gate unlock button is operated.	System is normal.	Check the keyless access and body control system.	—
Answer back	Answer-back operates when the keyless entry or keyless access locks/unlocks.	System is normal.	Check the security & lock system, keyless access, and LAN system.	—
Room light	The light illuminates/goes off according to the door open/close.	System is normal.	Check the room light system, security & lock system, and LAN system.	—
Map light	The light illuminates/goes off according to the door open/close. (Except for rear gate)	System is normal.	Check the spot map light, security & lock system, and LAN system.	—
Luggage/trunk light	The light illuminates/goes off according to the rear gate open/close.	System is normal.	Check the luggage/trunk light, security & lock system, and LAN system.	—
Key illumination	The light illuminates/goes off according to the driver's door open/close.	System is normal.	Check the ignition switch illumination, security & lock, and LAN system.	—
Illumination control	Illumination volume control is available.	System is normal.	Check the illumination control switch, combination meter, and body control system.	Illumination volume control is not available when user customizing "Illumination Control On/Off" of the body integrated unit is set to off.
Engine start	Engine starts.	System is normal.	Check the engine system, immobilizer, and LAN system.	—

General Diagnostic Table

BODY CONTROL SYSTEM (DIAGNOSTICS)

Item	Operation	Specifications		Note
		YES	NO	
Vehicle security	Security monitoring/security canceling can be performed by operating the keyless entry/keyless access.	System is normal.	Check the security & lock system, keyless access, and LAN system.	Security monitoring starts and at the same time the warning buzzer sounds, when impact sensor is not connected and user customizing "Impact Sensor" of the body integrated unit is set to on.

General Diagnostic Table

BODY CONTROL SYSTEM (DIAGNOSTICS)

WIRING SYSTEM SECTION

WIRING SYSTEM

WI

This service manual has been prepared to provide SUBARU service personnel with the necessary information and data for the correct maintenance and repair of SUBARU vehicles.

This manual includes the procedures for maintenance, disassembling, reassembling, inspection and adjustment of components and diagnostics for guidance of experienced mechanics.

Please peruse and utilize this manual fully to ensure complete repair work for satisfying our customers by keeping their vehicle in optimum condition. When replacement of parts during repair work is needed, be sure to use SUBARU genuine parts.

All information, illustration and specifications contained in this manual are based on the latest product information available at the time of publication approval.

WIRING SYSTEM



	Page
1. Basic Diagnostic Procedure	3
2. Working Precautions	14
3. Power Supply Circuit	15
4. Ground Circuit	34
5. Airbag System	46
6. Air Conditioning System	51
7. AT Control System	60
8. Audio System	67
9. Back-up Light System	80
10. CAN Communication System	83
11. Charging System	86
12. Clearance Light and Illumination Light System	87
13. Clock System	94
14. Combination Meter System	96
15. Coolant Temperature System	106
16. Cruise Control System	108
17. CVT Control System	114
18. Engine Electrical System	122
19. EyeSight System	182
20. Front Accessory Power Supply Socket System	190
21. Front Fog Light System	191
22. Front Wiper and Washer System	193
23. Fuel Gauge System	195
24. Headlight System	196
25. Horn System	199
26. Immobilizer System	200
27. Interior Light System	204
28. Keyless Access System	208
29. Keyless Entry System	215
30. Navigation System	219
31. Occupant Detection System	227
32. Oil Pressure Warning Light System	228
33. Parking Brake / Brake Fluid Level Warning Light System	229
34. Power Seat System	233
35. Power Window System	237
36. Push Button Start System	245
37. Radiator Fan System	249
38. Rear Accessory Power Supply Socket System	251
39. Rear Defogger System	252
40. Rearview Camera System	253
41. Rearview Mirror System	257
42. Rear Wiper and Washer System	259
43. Remote Control Mirror System	261
44. Remote Engine Start System	263
45. Seat Belt Warning System	271

46.	Seat Heater System	275
47.	Security System	277
48.	Shift Lock Control System	280
49.	Speedometer System	282
50.	Starter System	283
51.	Stop Light System	287
52.	Sunroof Control System	294
53.	Tire Pressure Monitoring System	295
54.	Turn Signal Light and Hazard Light System	296
55.	Vehicle Dynamics Control System	298
56.	Wiper Deicer System	302
57.	Harness Components Location	303
58.	Front Wiring Harness	305
59.	Bulkhead Wiring Harness (In Engine Compartment)	306
60.	Bulkhead Wiring Harness (In Compartment)	310
61.	Engine Wiring Harness and Transmission Cord	316
62.	Instrument Panel Wiring Harness	321
63.	Rear Wiring Harness	324
64.	Door Cord	330
65.	Rear Wiring Harness and Trunk Lid Cord	332
66.	Rear Wiring Harness and Rear Gate Cord	334