

# Horn System

COMMUNICATION SYSTEM

---

## 3. Horn System

### A: WIRING DIAGRAM

Refer to “Horn System” in the wiring diagram. <Ref. to WI-199, WIRING DIAGRAM, Horn System.>

### B: INSPECTION

Symptoms	Inspection steps
Horn does not sound	1. Check the fuse.
	2. Check the horn relay.
	3. Check the role connector.
	4. Check the horn switch.
	5. Check the horn assembly.
	6. Check the harness.

### C: NOTE

For operation procedures of each component of the horn system, refer to the respective section.

- Horn ASSY: <Ref. to COM-5, Horn.>
- Horn switch: <Ref. to COM-8, Horn Switch.>