

11.Neutral Position Switch

A: NOTE

For neutral position switch, refer to “MANUAL TRANSMISSION AND DIFFERENTIAL” section. <Ref. to 6MT-36, Switches and Harness.>

Neutral Position Switch

CRUISE CONTROL SYSTEM

CRUISE CONTROL SYSTEM (DIAGNOSTICS)

CC(*diag*)

	Page
1. Basic Diagnostic Procedure	2
2. General Description	5
3. Electrical Component Location	6
4. Engine Control Module (ECM) I/O Signal	7
5. Subaru Select Monitor	8
6. Read Cancel Code	9
7. Real-time Diagnosis	10
8. Diagnostics with Phenomenon	11
9. List of Cancel Code	13
10. Diagnostic Procedure with Cancel Code	16