


Relay and Fuse

CRUISE CONTROL SYSTEM

2. Relay and Fuse

A: LOCATION

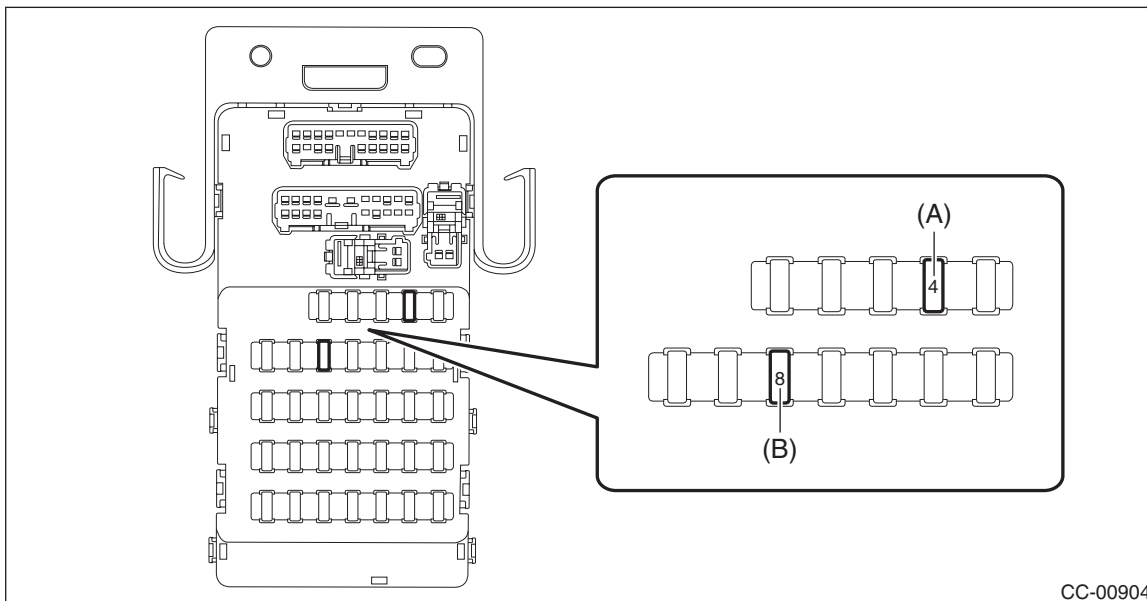

| | | |
|------------------|---|-----|
| Relay & fuse box | Fuse 7.5A (ECM, stop light & brake switch, clutch switch) | (A) |
| | Fuse 15A (stop light & brake switch) | (B) |

NOTE:

For other related fuses, refer to the wiring diagram. <Ref. to WI-15, Power Supply Circuit.>

B: INSPECTION

1. CHECK FUSE

- 1) Remove the fuse and inspect visually.
- 2) If the fuse is blown out, replace the fuse.

NOTE:

If the fuse is blown again, check the system wiring harness.