

# Cruise Control Module

## CRUISE CONTROL SYSTEM

---

### 4. Cruise Control Module

#### A: NOTE

The control of cruise control system is carried out in engine control module (ECM).

#### B: REMOVAL

- H4 model: <Ref. to FU(H4DO)-101, REMOVAL, Engine Control Module (ECM).>
- H6 model: <Ref. to FU(H6DO)-54, REMOVAL, Engine Control Module (ECM).>

#### C: INSTALLATION

- H4 model:<Ref. to FU(H4DO)-102, INSTALLATION, Engine Control Module (ECM).>
- H6 model:<Ref. to FU(H6DO)-54, INSTALLATION, Engine Control Module (ECM).>