


10.Noise Suppressor

A: REMOVAL


1. SEDAN MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear shelf trim. <Ref. to EI-123, REMOVAL, Rear Shelf Trim.>
- 3) Remove the noise suppressor.
 - (1) Disconnect harness connector from noise suppressor.
 - (2) Remove the harness clamps and bolts and detach the noise suppressor.

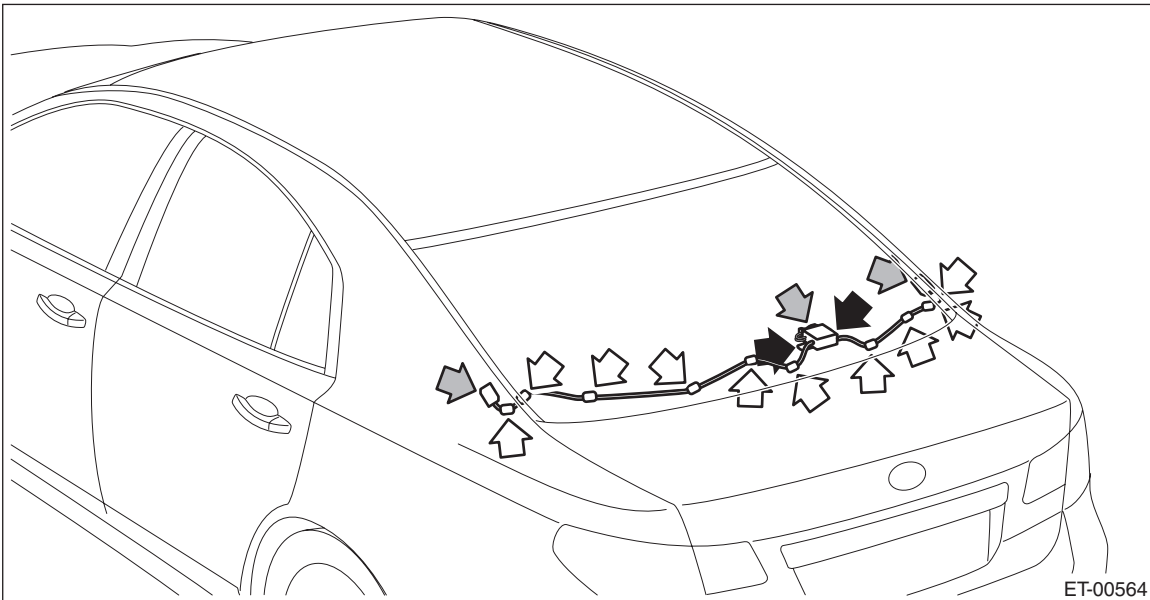

2. OUTBACK MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear gate trim. <Ref. to EI-166, REMOVAL, Rear Gate Trim.>
- 3) Remove the noise suppressor.
 - (1) Disconnect harness connector from noise suppressor.
 - (2) Remove the harness clamps and bolts and detach the noise suppressor.

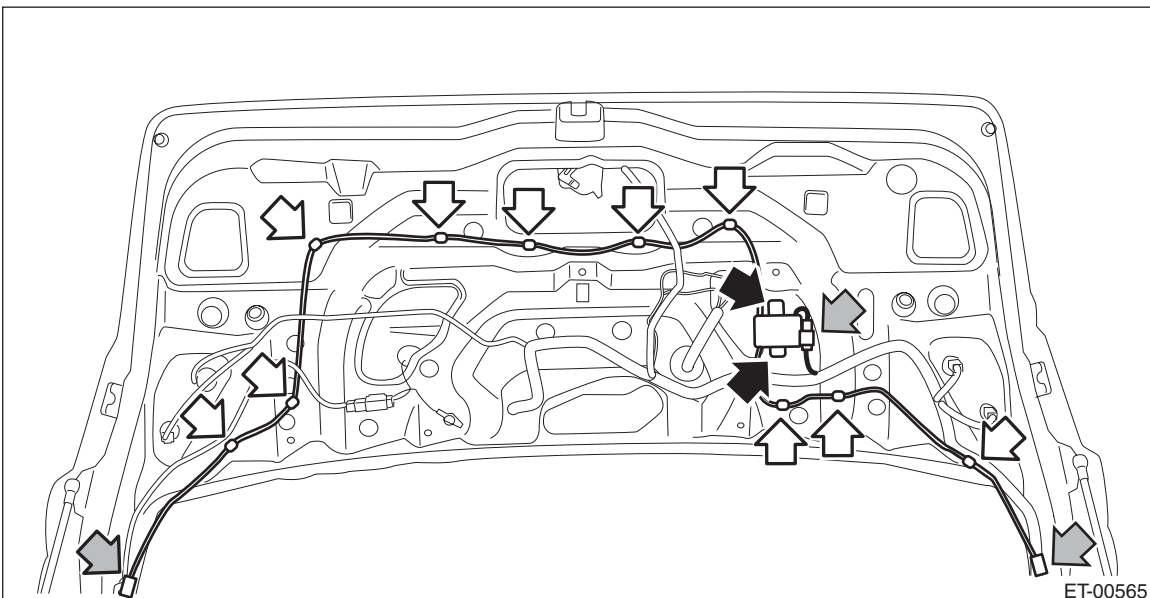

Noise Suppressor

ENTERTAINMENT

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:

Noise suppressor: 12 N·m (1.22 kgf-m, 8.9 ft-lb)