

## 13.GPS Antenna


### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the center panel assembly.

#### CAUTION:

**Do not put your finger on the fin of the air vent grille. Doing so may damage the fin.**


- (1) Attach the protective tape (a) to the meter visor.

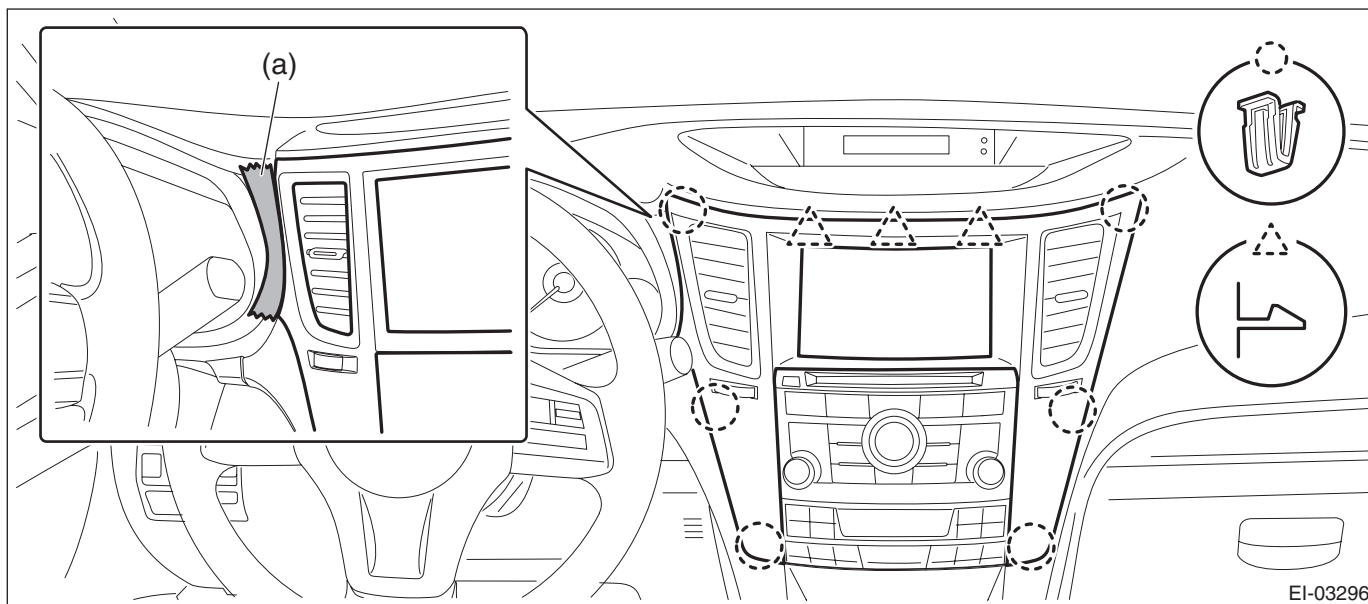

## GPS Antenna

### ENTERTAINMENT

- (2) Insert a finger into the air vent grille and release the left and right clips at the top of the center panel.  
(A), (B)
- (3) Insert a finger into the air vent grille and release the left and right clips at the center of the center panel.  
(C), (D)
- (4) Release the clips at the bottom of the center panel and remove the center panel assembly.

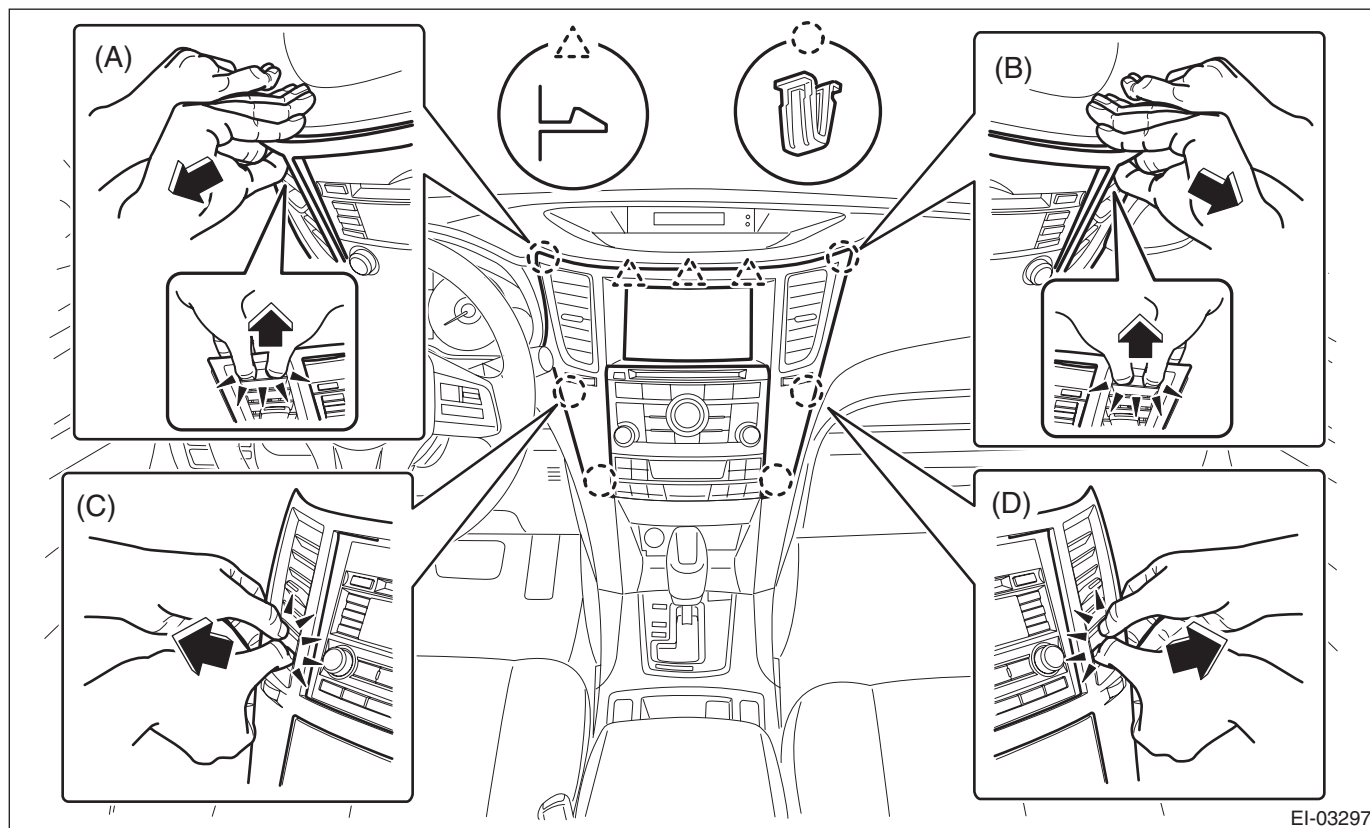


- 3) Remove the combination meter assembly.


#### CAUTION:

- Be careful not to damage the meter or instrument panel.
- Pay particular attention to avoid damaging the meter glass.


- (1) Release the lock, tilt the steering column to the lowest end and fully extend the column by the telescopic system.

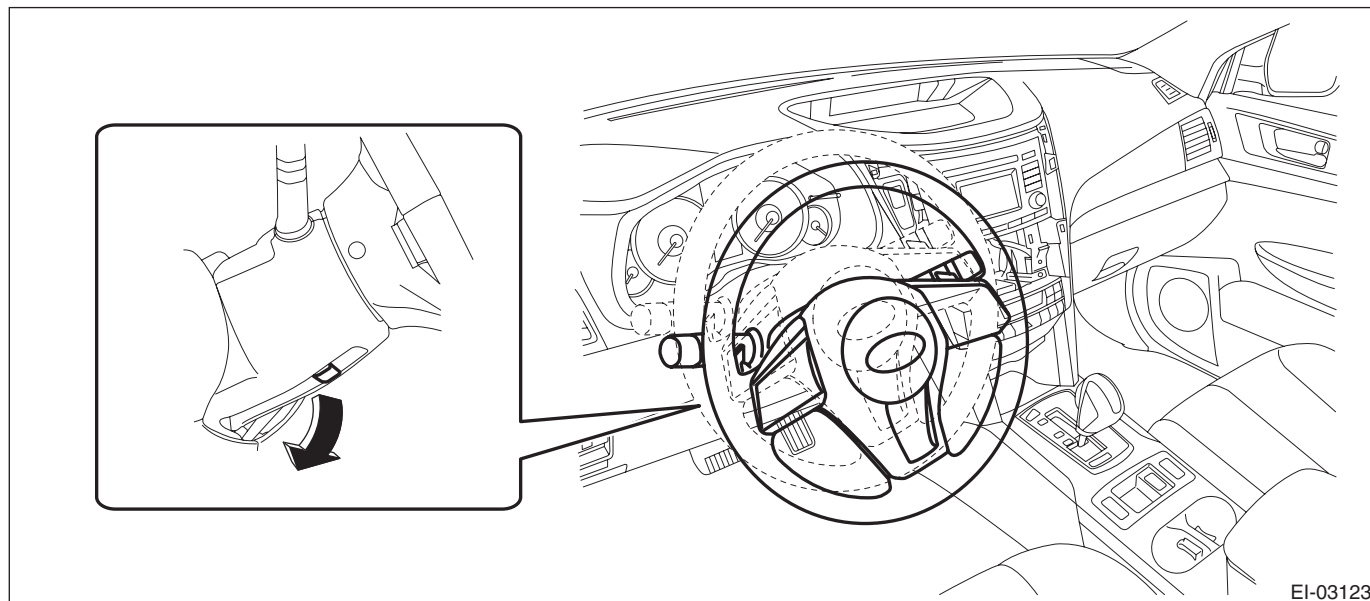

(2) Release the screws and clips, then detach the meter visor assembly.

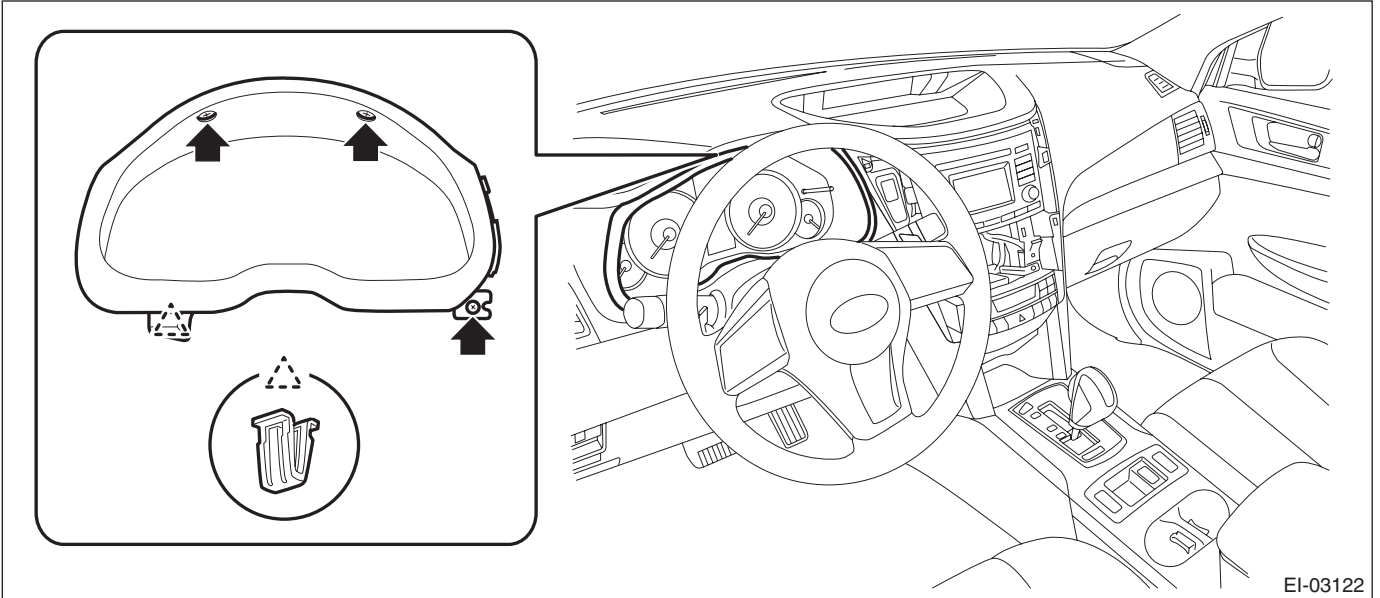


(3) Remove the screws and pull the steering COMPL upper cover toward you.

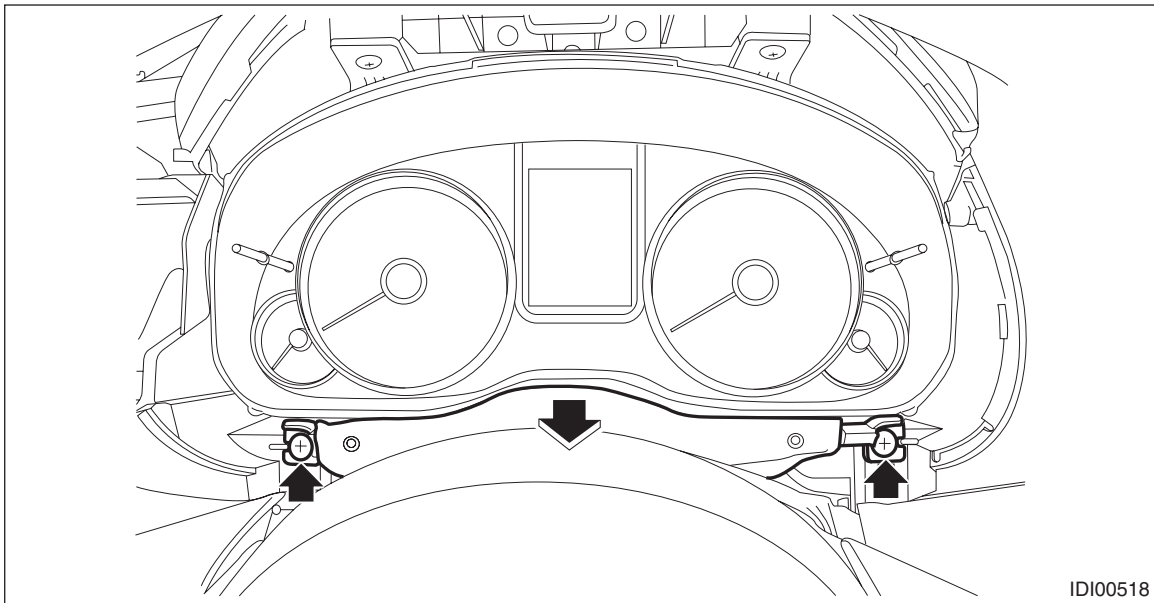


## GPS Antenna

### ENTERTAINMENT


- (4) Remove the screws and pull out the combination meter toward you to disconnect the connectors.

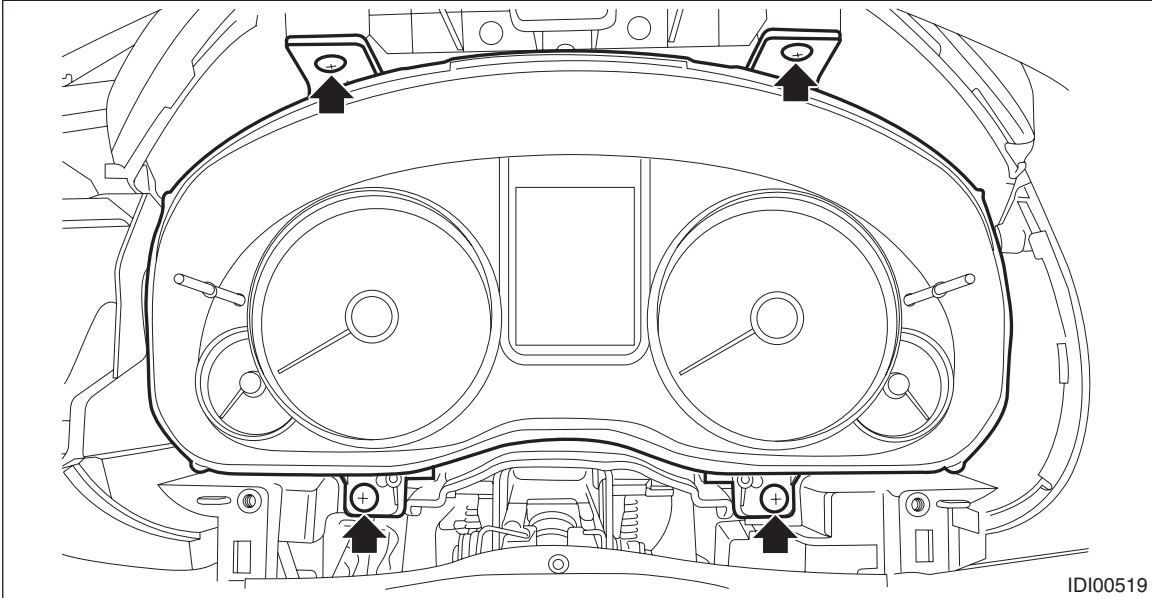


- (5) Remove the combination meter assembly as shown in the figure.

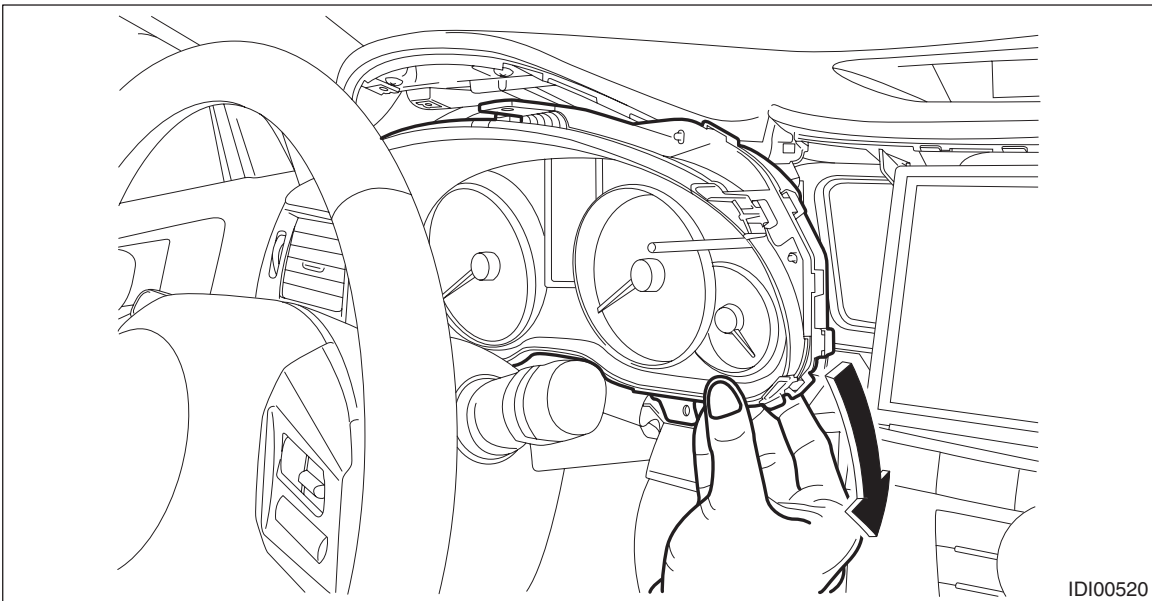

- 4) Remove the navigation assembly.
- (1) Remove the left and right screws.
  - (2) Disconnect the connectors, and remove the navigation assembly.

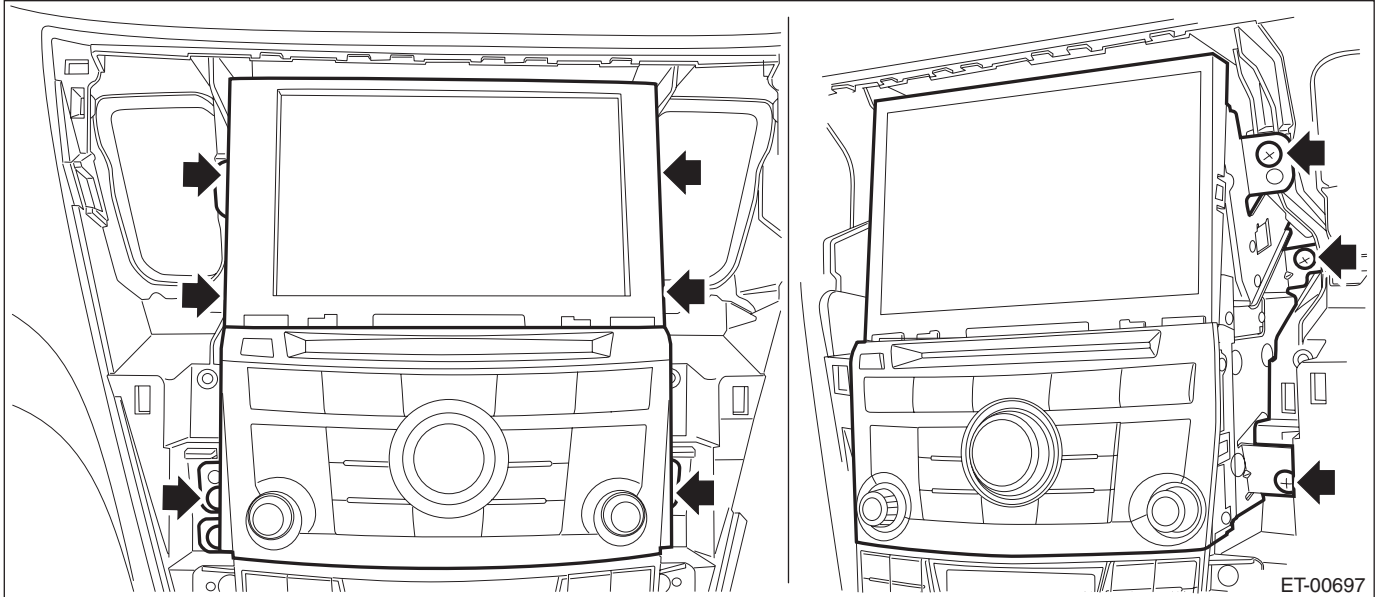

- 5) Remove the GPS antenna.

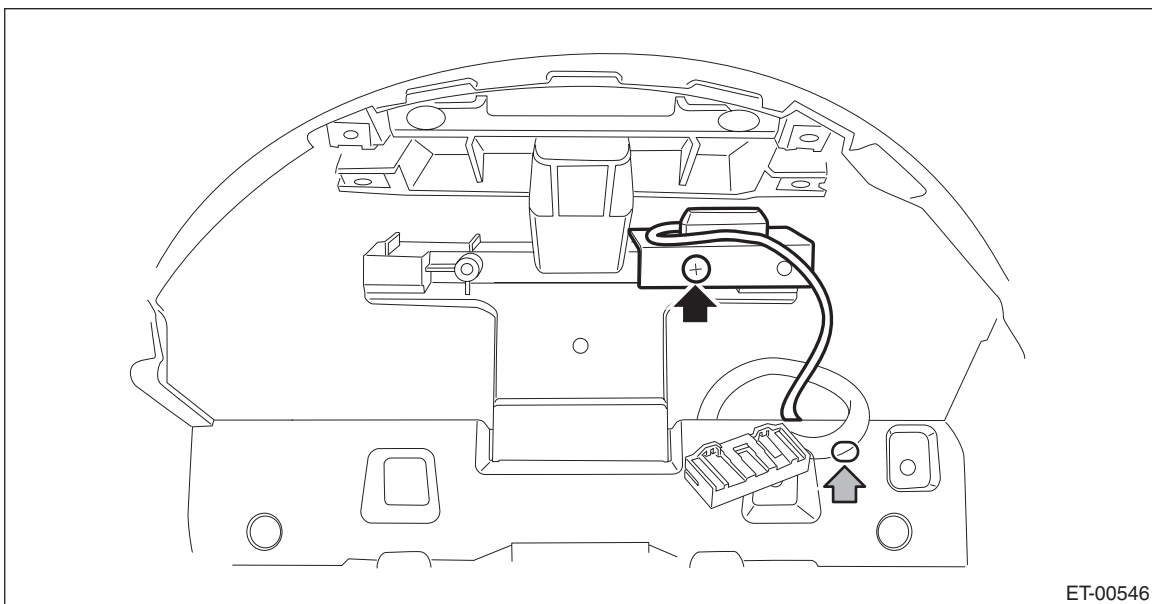

- (1) Tie a string to the GPS antenna harness connector on the navigation assembly side.

**NOTE:**

A string makes operation easier during installation.

- (2) Remove the screw and harness clamp to remove the GPS antenna.
- (3) When the GPS antenna is pulled out, remove the string attached to the connector in step (1).

**B: INSTALLATION**

Install each part in the reverse order of removal.