

15. Front Accessory Power Supply Socket

A: WIRING DIAGRAM

Refer to "Front Accessory Power Supply Socket System" in the wiring diagram. <Ref. to WI-190, WIRING DIAGRAM, Front Accessory Power Supply Socket System.>


B: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the center panel assembly.

CAUTION:

Do not put your finger on the fin of the air vent grille. Doing so may damage the fin.

- (1) Attach the protective tape (a) to the meter visor.

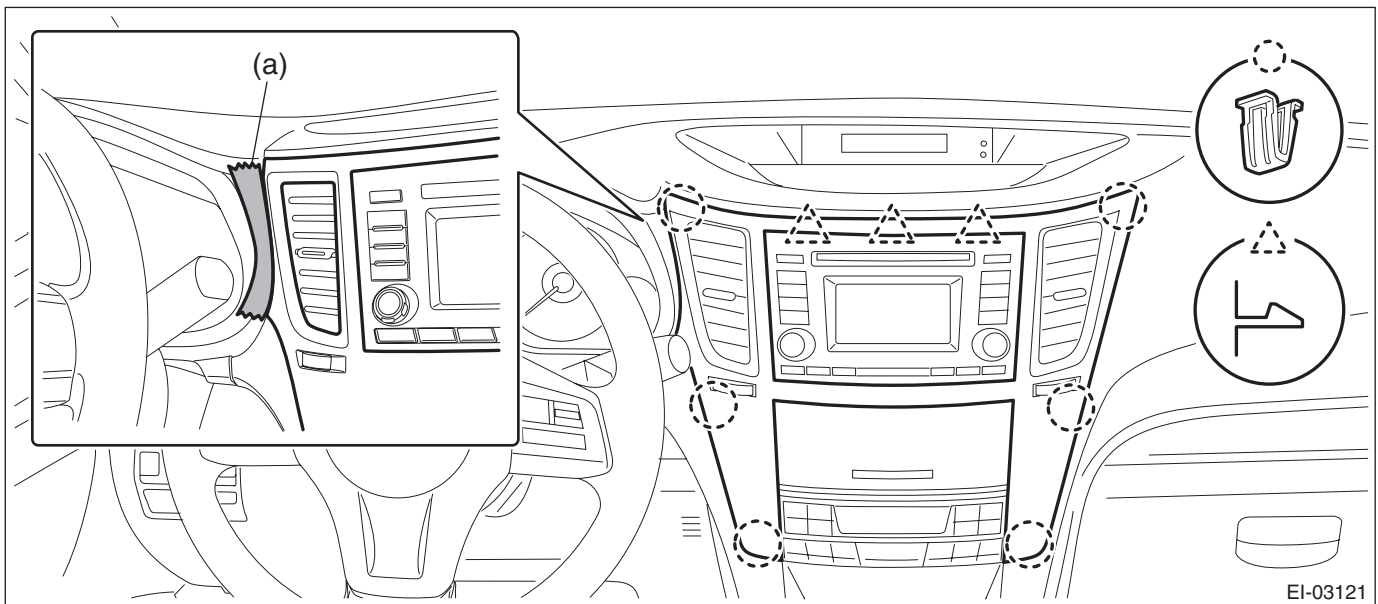


EI-03121

Front Accessory Power Supply Socket


ENTERTAINMENT

- (2) Insert a finger into the air vent grille and release the left and right clips at the top of the center panel.
(A), (B)
- (3) Insert a finger into the air vent grille and release the left and right clips at the center of the center panel.
(C), (D)
- (4) Release the clips at the bottom of the center panel and remove the center panel assembly.

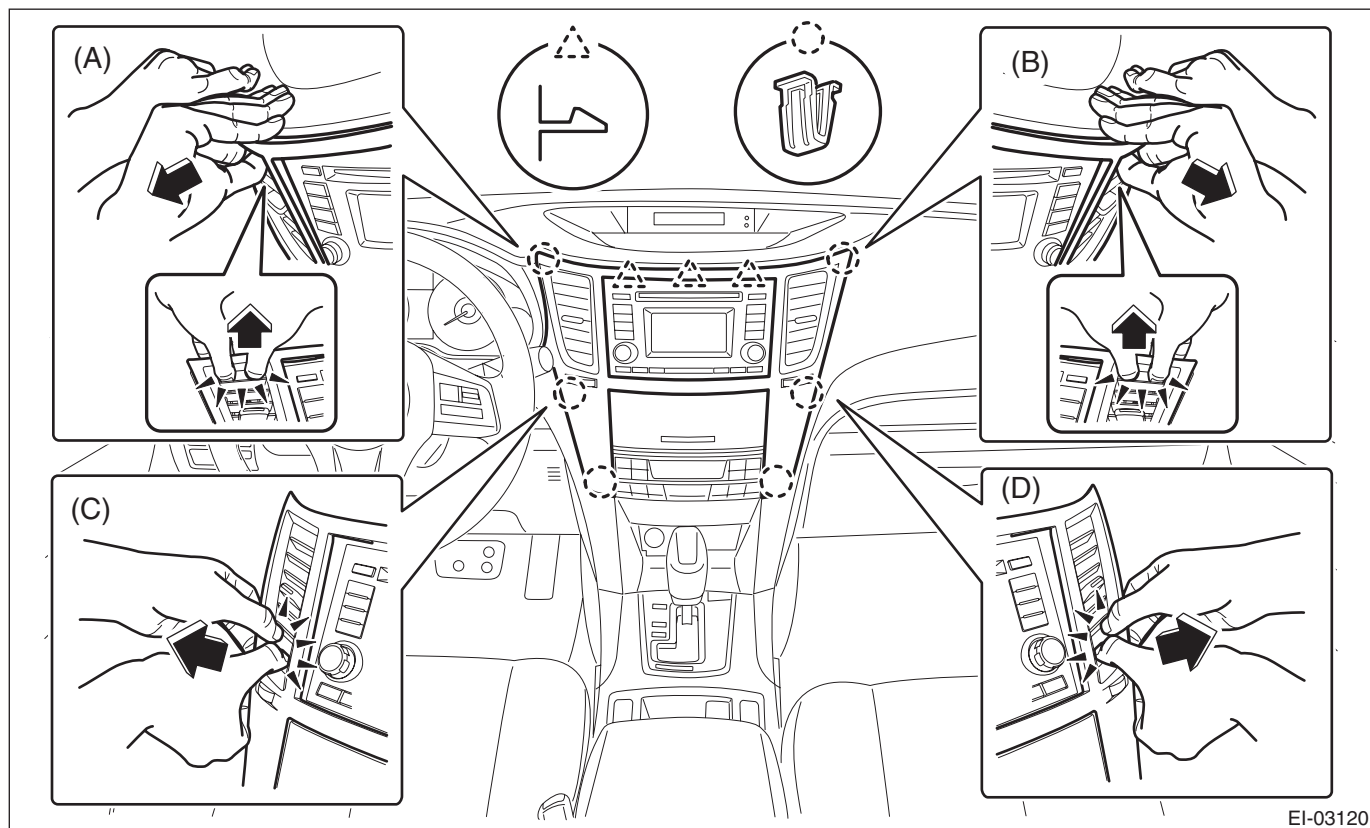


3) Remove the audio assembly.


- (1) Remove the left and right screws, and partially pull the audio out from center console.
- (2) Disconnect the connectors, and remove the audio assembly.

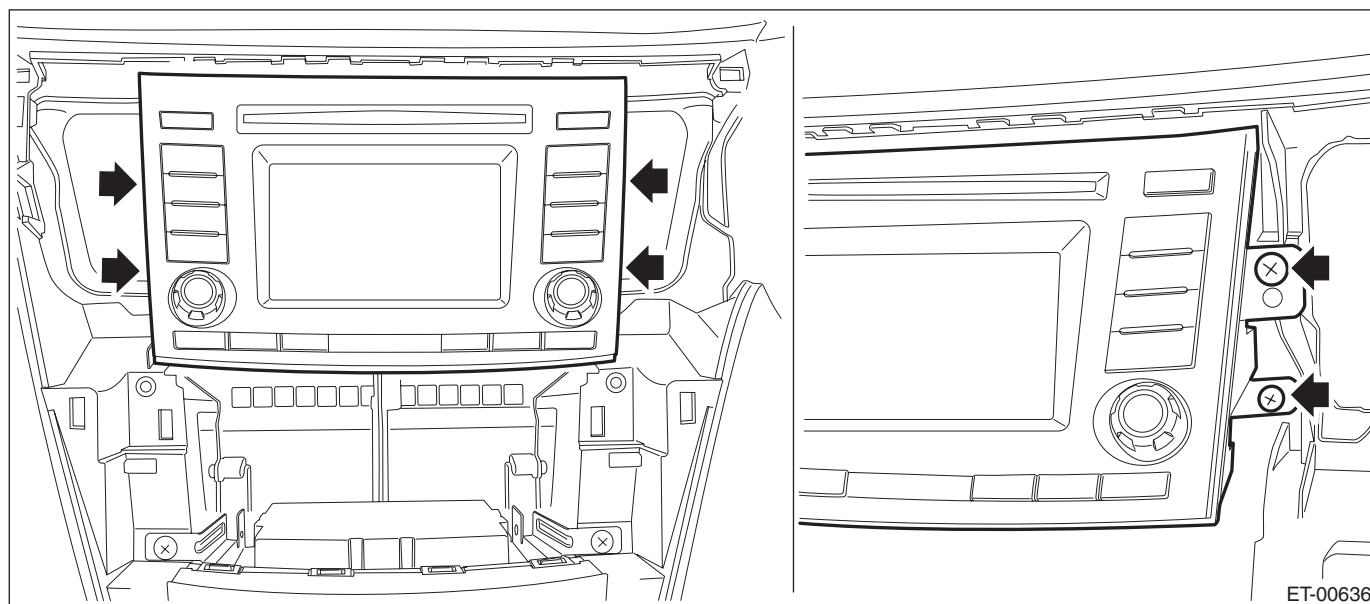

- 4) Remove the navigation assembly. (model with navigation)
 - (1) Remove the left and right screws.
 - (2) Disconnect the connectors, and remove the navigation assembly.

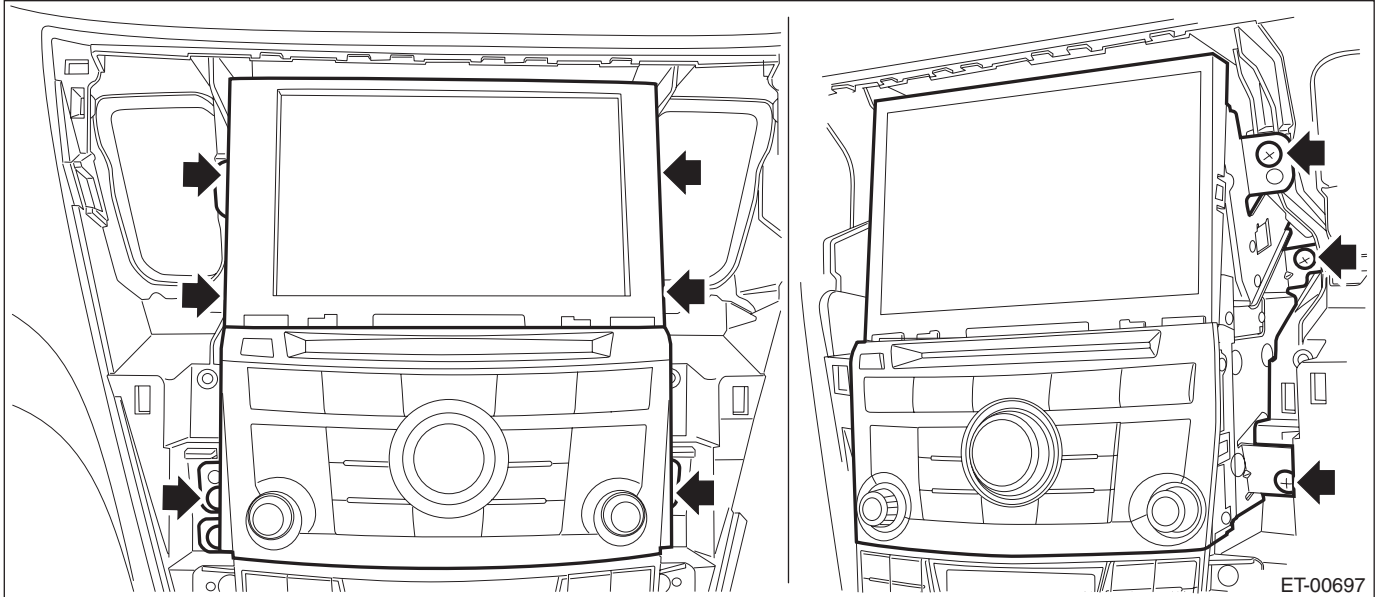


- 5) Remove the control panel assembly.
 - (1) Remove the screws, and pull out the control panel assembly toward you.
 - (2) Disconnect the connector, and remove the control panel assembly.

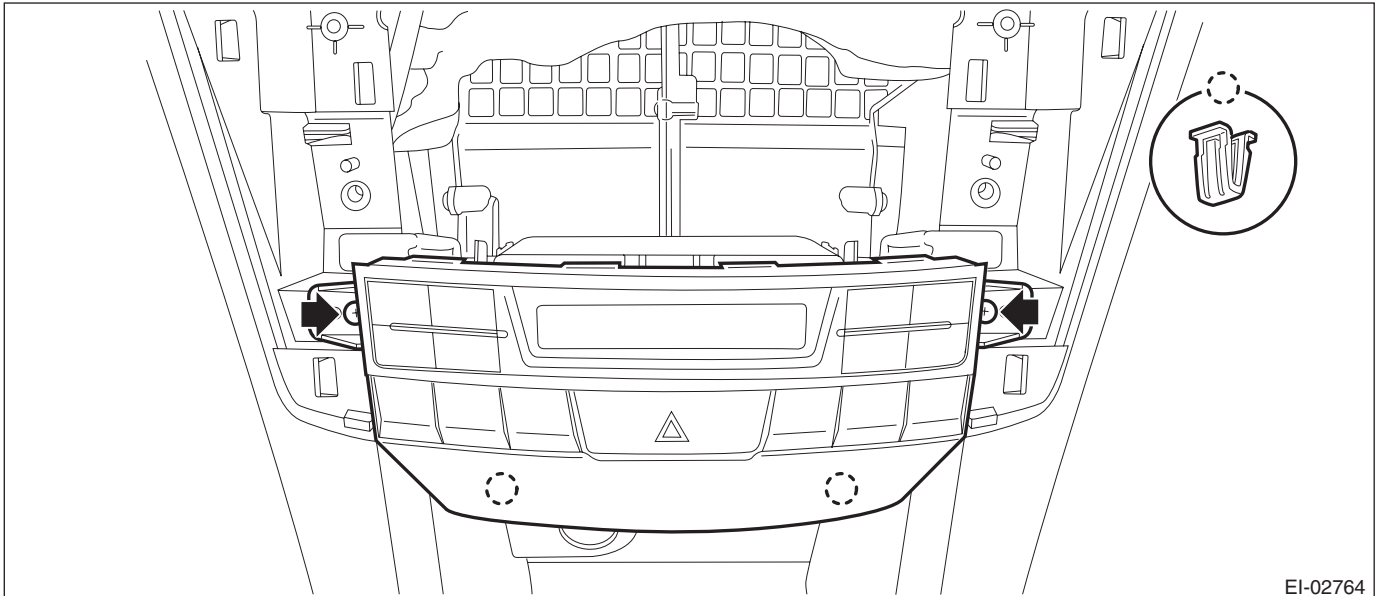

Front Accessory Power Supply Socket

ENTERTAINMENT

- 6) Remove the front accessory power supply socket.
 - (1) Disconnect the connector and turn the securing cover to remove it.
 - (2) Pull the accessory power supply socket out to remove.

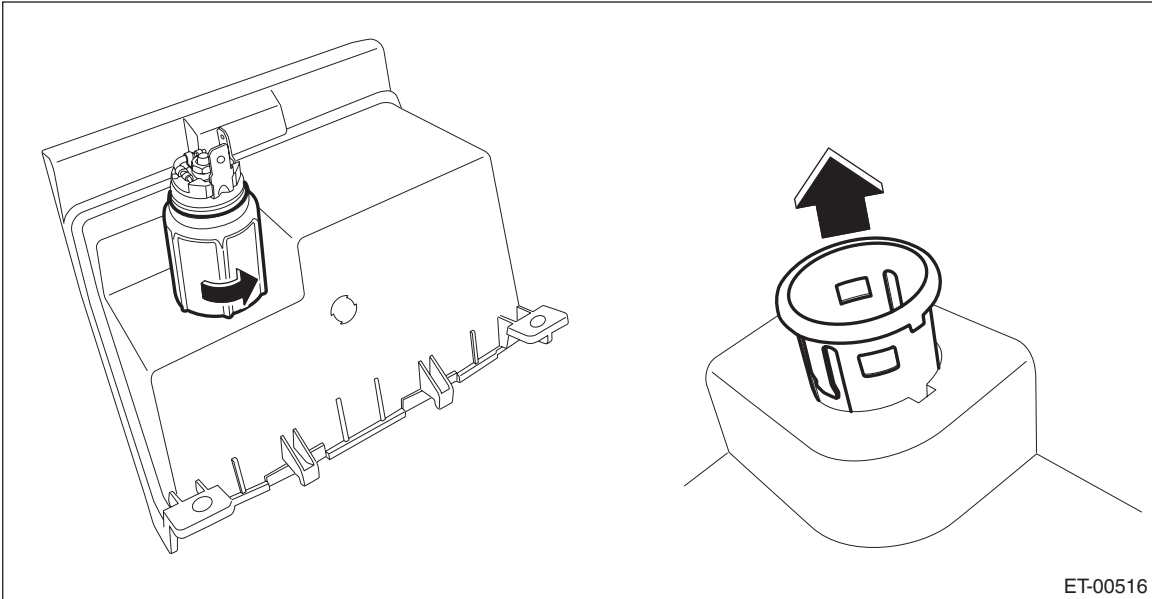

ET-00516

C: INSTALLATION

Install each part in the reverse order of removal.