

# Roof Rail

EXTERIOR/INTERIOR TRIM


## 12.Roof Rail

### A: REMOVAL

- 1) Remove the roof trim. <Ref. to EI-148, OUTBACK MODEL, REMOVAL, Roof Trim.>
- 2) Remove the curtain airbag module. <Ref. to AB-70, OUTBACK MODEL, REMOVAL, Curtain Airbag Module.>

#### CAUTION:

- Refer to “CAUTION” of “General Description” before handling the airbag module. <Ref. to AB-10, CAUTION, General Description.>
  - Be careful not to damage the curtain airbag module during removal.
- 3) Remove the eight installing nuts.

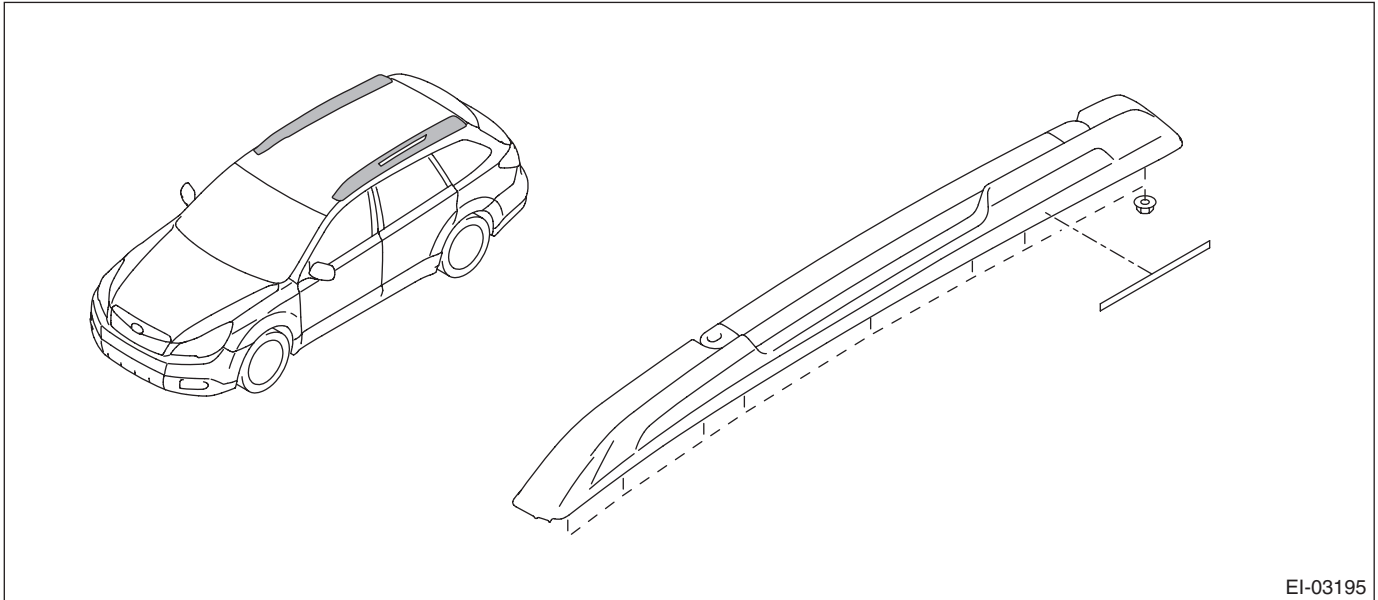

### B: INSTALLATION

#### CAUTION:

When removing or installing the roof rail, be careful not to scratch the body panel with the stud bolt of roof rail.

Install each part in the reverse order of removal.

#### Tightening torque:

**7.5 N·m (0.76 kgf·m, 5.5 ft·lb)**