

Front Grille


EXTERIOR/INTERIOR TRIM

2. Front Grille

A: REMOVAL


1) Remove the front bumper face assembly.

(1) Remove the clips and turn over the front end of front mud guard. (Model with fog light)

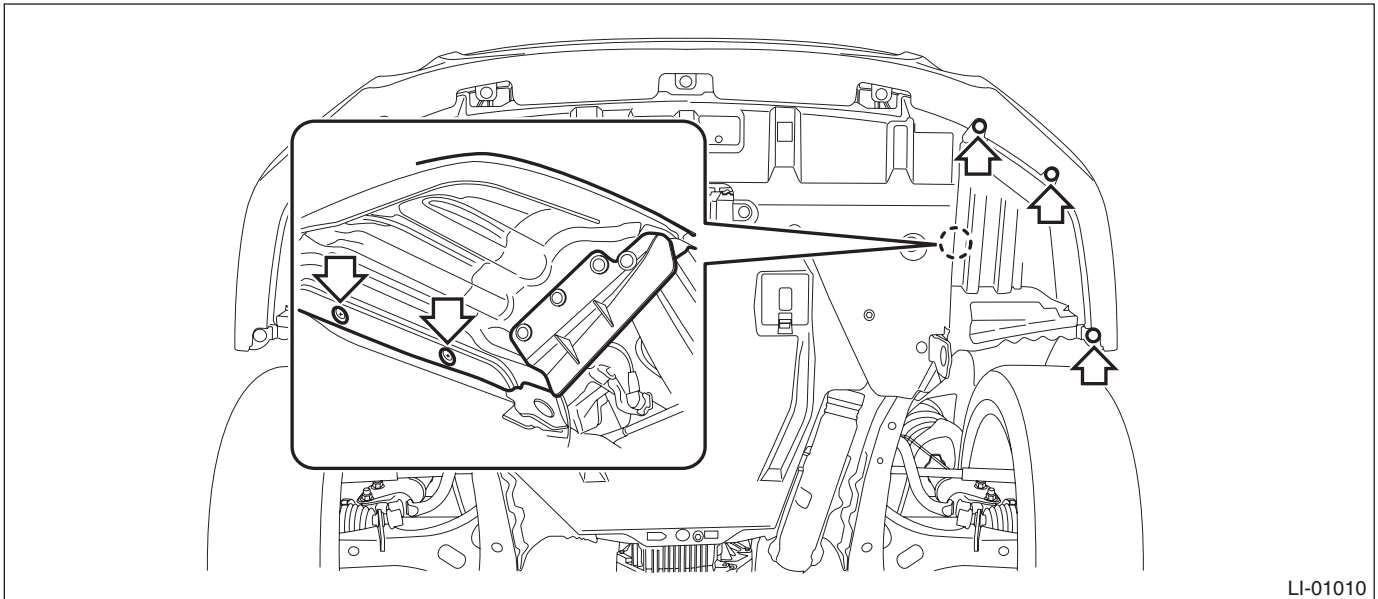

LI-01010

(2) Disconnect the front fog light connector. (Model with fog light)

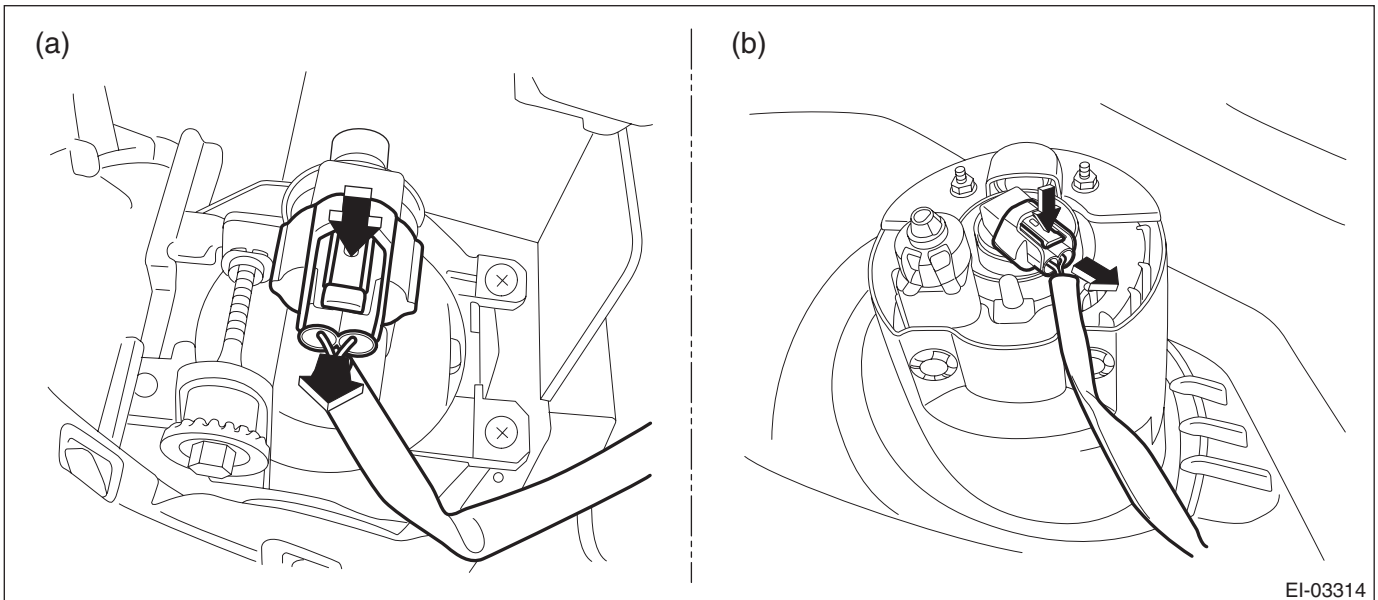

EI-03314


(a) Sedan model

(b) OUTBACK model

(3) Remove the clips at the upper side of the bumper.

(4) Remove the clips from the fender.

(5) Remove the clips at the lower side of bumper.

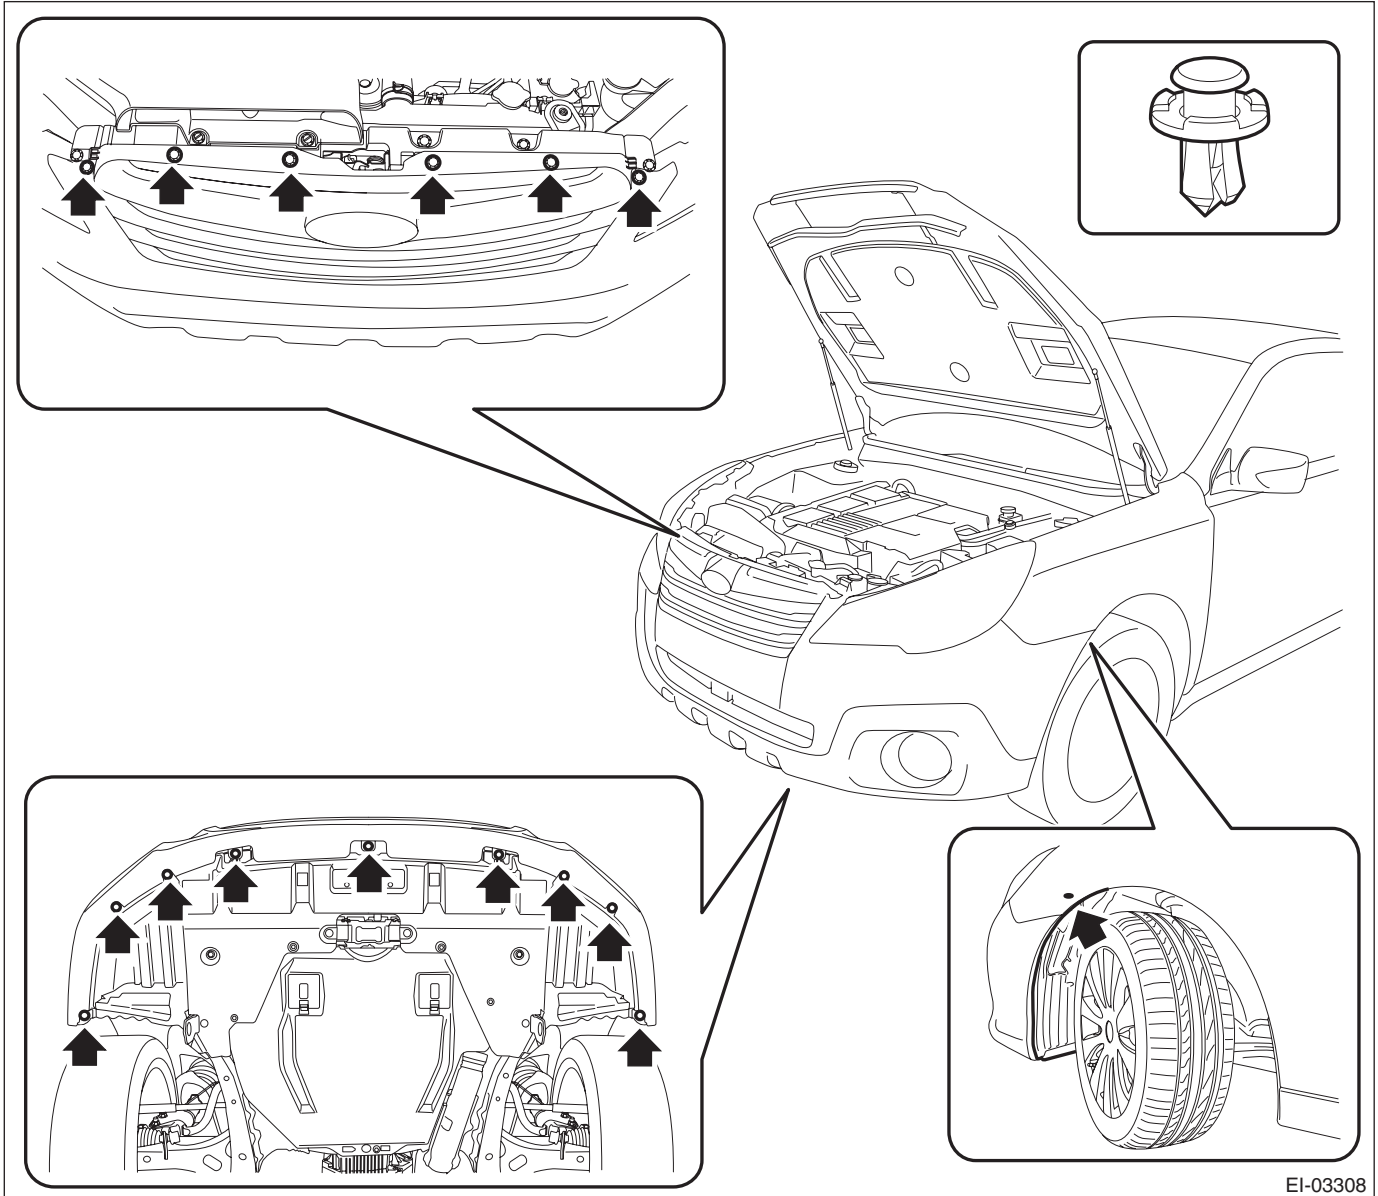

EI-03308


Front Grille

EXTERIOR/INTERIOR TRIM

(6) Detach the flange section on the bumper face side from the bracket side front UPR.

CAUTION:

Do not pull forcibly. It may damage the flange section on the bumper face - front side when it comes off from the claws of bracket side front UPR.

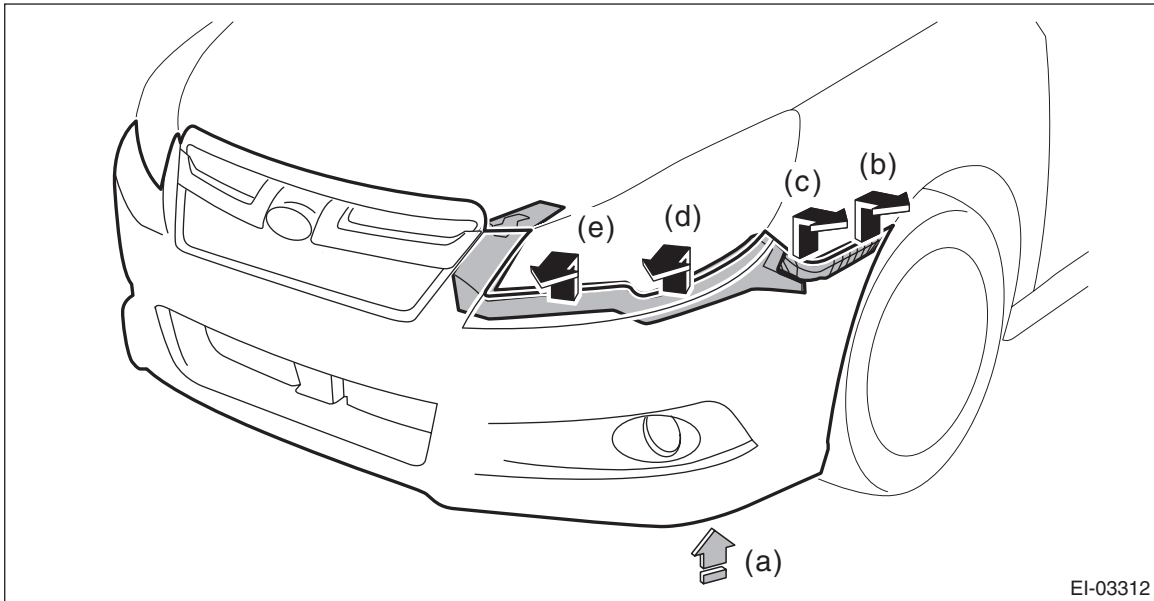

EI-03312

NOTE:


Pushing up the lower side (a) of the fog light, remove from (b) to (e).

Detach the opposite side in the same manner.

2) Remove the front grille assembly.

(1) Remove the clips and screws from the back side of bumper face.

(2) Release the claws, and remove the front grille assembly.

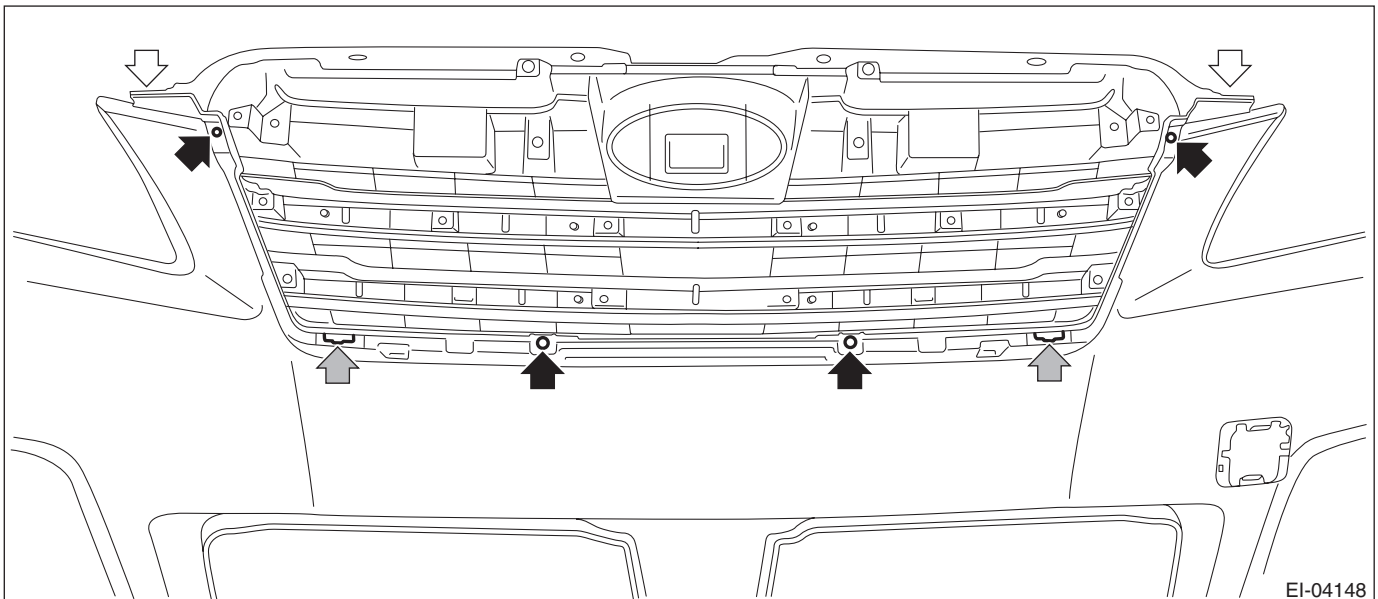


EI-04148

B: INSTALLATION

CAUTION:

- Install the bumper face so that the under cover front end (b) comes inside the front bumper face (a).

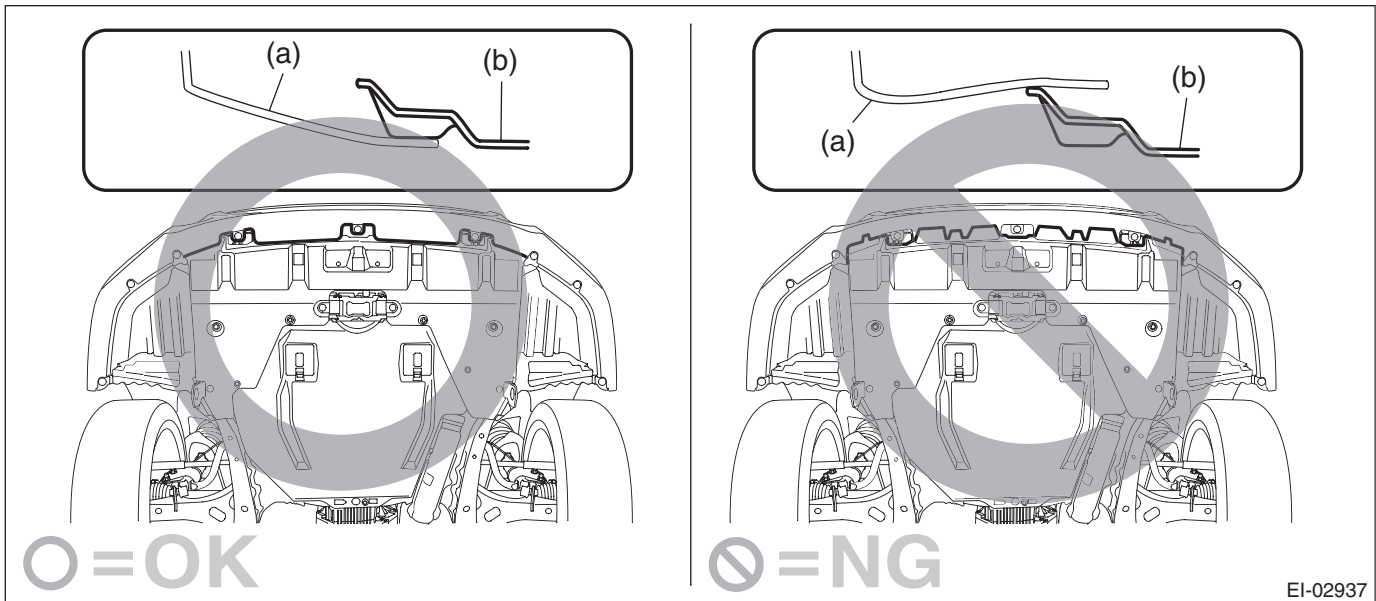

- Before installing the bumper face, match the claws on the bracket - front bumper with the engaging position of flange section on the bumper face side. If the engaging position is not correct, the flange section may be broken or the clearance between fender panel and bumper face may not be uniform.

1) Install each part in the reverse order of removal.

2) Adjust the fog light beam. (Model with fog light)<Ref. to LI-42, FOG LIGHT AIMING, ADJUSTMENT, Front Fog Light Assembly.>