


Sun Visor

EXTERIOR/INTERIOR TRIM

24.Sun Visor

A: REMOVAL

- 1) Remove the cover, loosen the screws, and remove the sun visor assembly.
- 2) Remove the sun visor hook.
 - (1) Press both sides using a flat tip screwdriver.
 - (2) Remove the sun visor hook by pulling toward you.

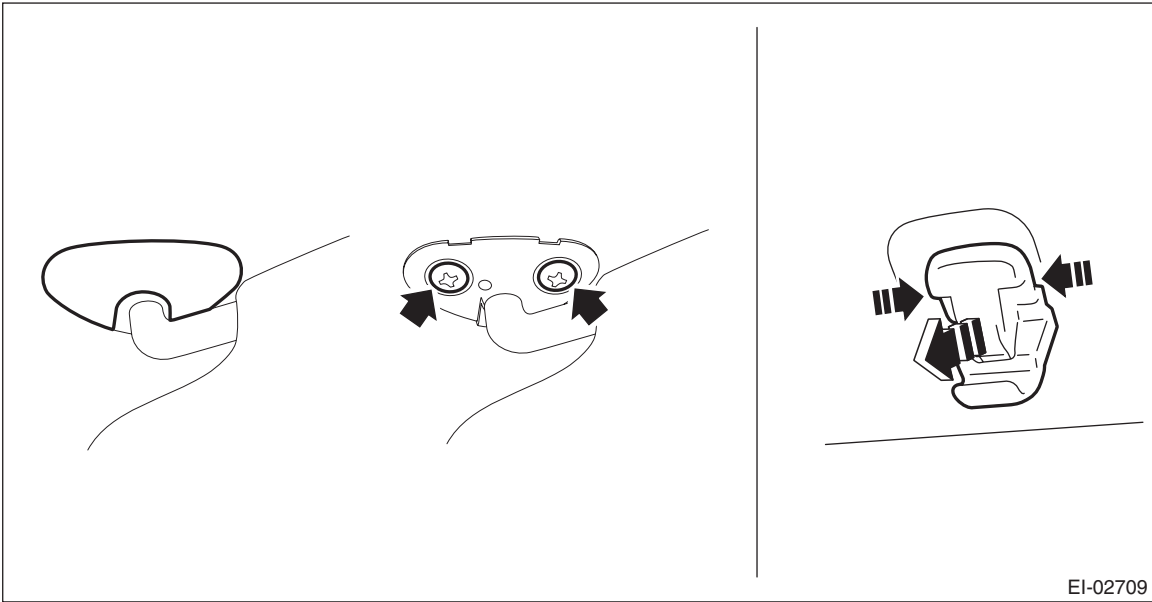

B: INSTALLATION

Install each part in the reverse order of removal.