


Trunk Lid Garnish

EXTERIOR/INTERIOR TRIM


29. Trunk Lid Garnish

A: REMOVAL

- 1) Remove the trunk lid trim.
 - (1) Remove the trunk handle.
 - (2) Remove the clips and the trunk lid trim.

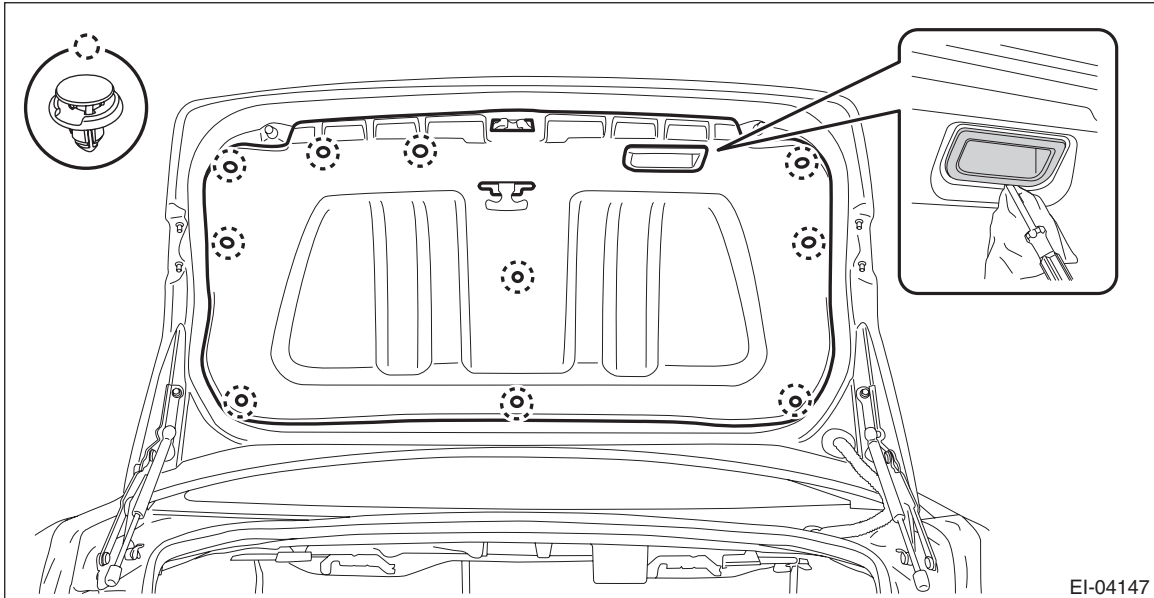

- 2) Remove the trunk lid garnish.
 - (1) Remove the nut.
 - (2) Remove the clips and the trunk lid garnish.

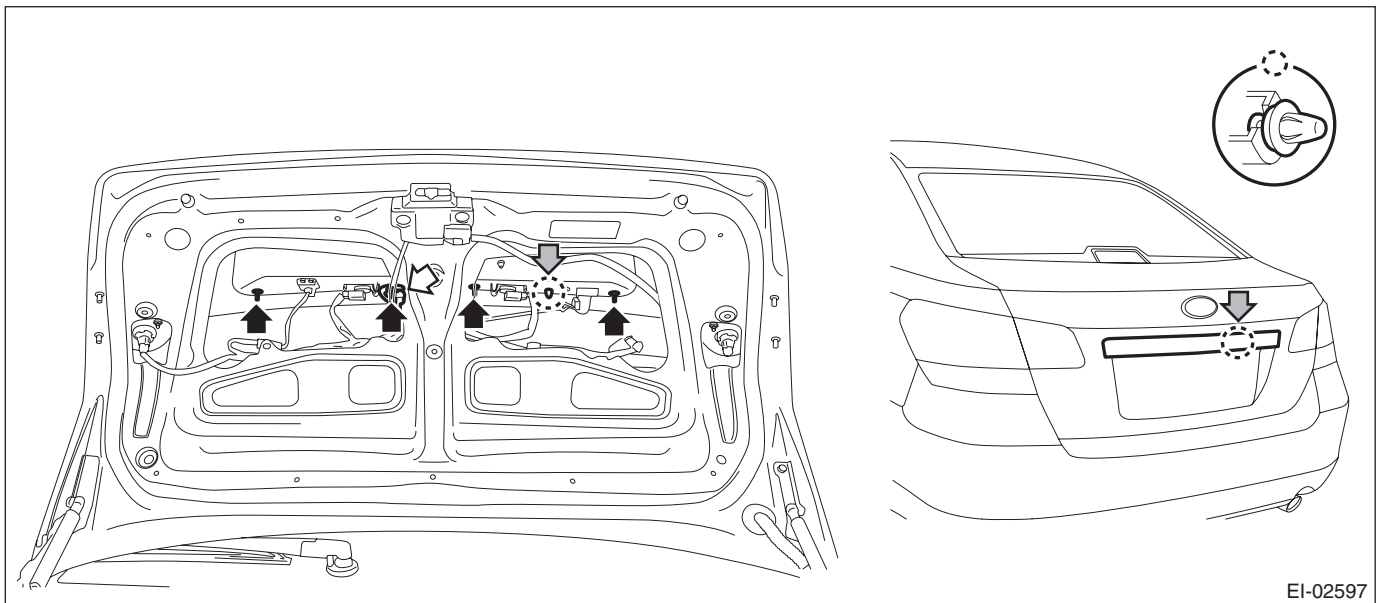

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:

4.5 N·m (0.46 kgf-m, 3.3 ft-lb)