

# Heat Shield Cover

EXTERIOR/INTERIOR TRIM

## 31.Heat Shield Cover


### A: REMOVAL

#### 1. FRONT HEAT SHIELD COVER

NOTE:

For 2.5 L non-turbo model, refer to “EXHAUST SYSTEM” section.

- 1) Remove the rear exhaust pipe and muffler. (H6 model)
  - Rear exhaust pipe <Ref. to EX(H6DO)-10, REMOVAL, Muffler.>
  - Muffler <Ref. to EX(H6DO)-10, REMOVAL, Muffler.>
- 2) Remove the four bolts to remove the front heat shield cover.

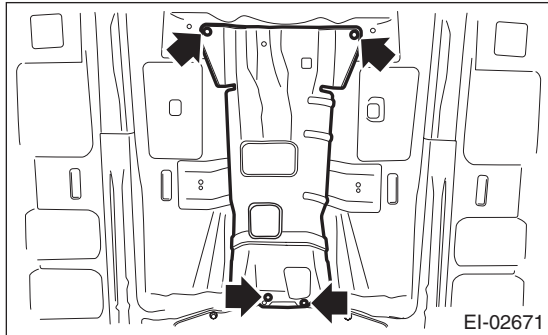


#### 2. REAR HEAT SHIELD COVER

NOTE:

For 2.5 L non-turbo model, refer to “EXHAUST SYSTEM” section.

- 1) Remove the muffler. (H6 model) <Ref. to EX(H6DO)-10, REMOVAL, Muffler.>
- 2) Remove the bolts, and remove the rear heat shield cover. (H6 model)

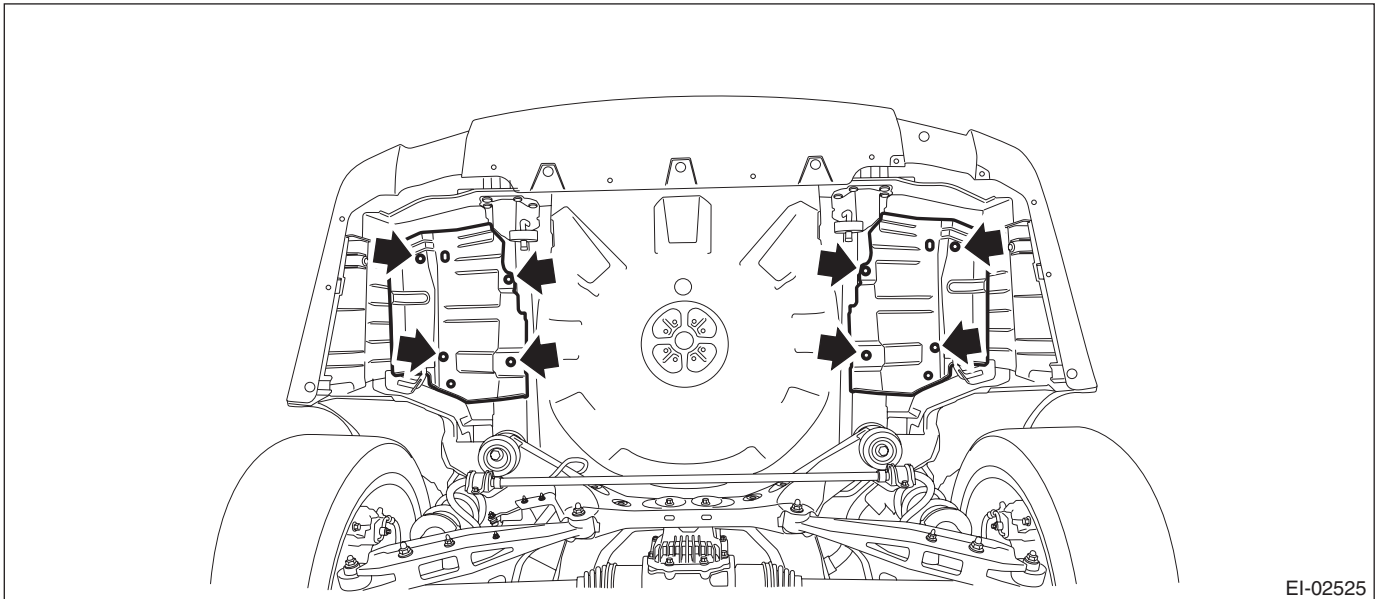

### B: INSTALLATION

Install each part in the reverse order of removal.

**Tightening torque:**

**Refer to “COMPONENT” of “General Description”. <Ref. to EI-24, HEAT SHIELD COVER, COMPONENT, General Description.>**