


6. Fuel Tank Protector

A: REMOVAL

- 1) Lift up the vehicle.
- 2) Remove the fuel tank protector.
 - (1) Remove the bolt and nuts and remove the fuel tank protector.
 - (2) Remove the clips. (H6 model only)

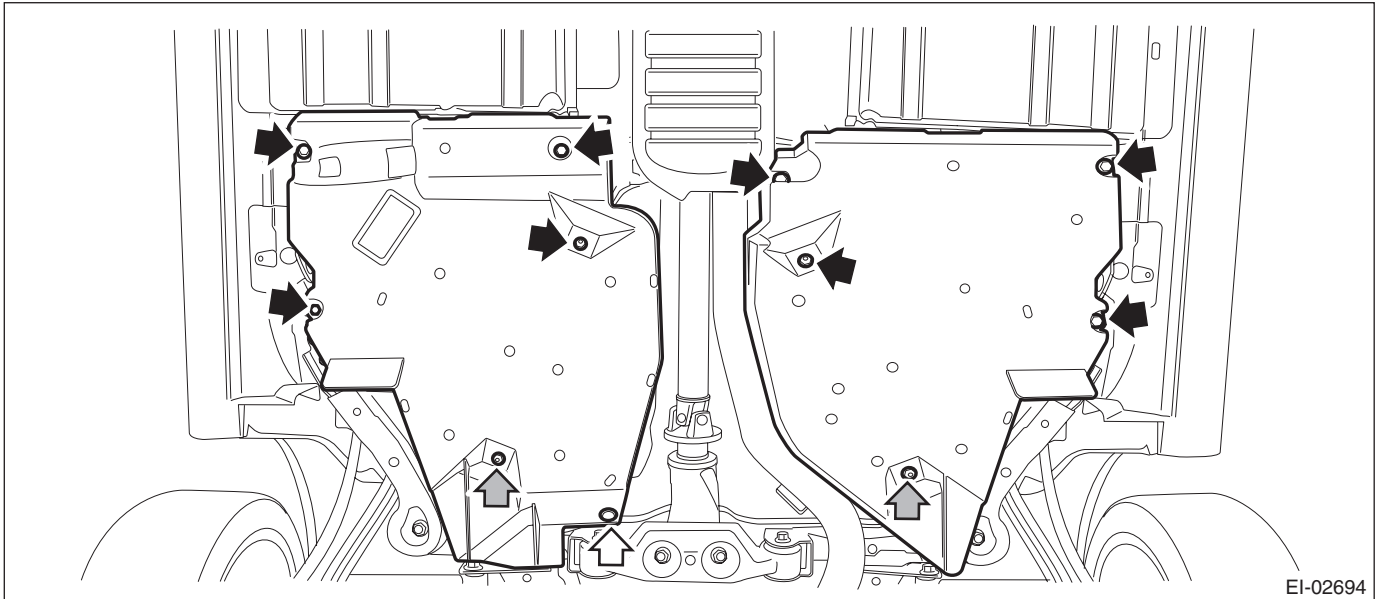

EI-02694

B: INSTALLATION

CAUTION:

Do not reuse the nut (self locking nut). Always replace with a new part.

Install each part in the reverse order of removal.

Tightening torque:

Refer to "COMPONENT" of "General Description".

H4 model:<Ref. to FU(H4DO)-7, FUEL TANK, COMPONENT, General Description.>

H6 model:<Ref. to FU(H6DO)-11, FUEL TANK, COMPONENT, General Description.>