

## 10. Real-time Diagnosis

### A: OPERATION

- 1) On «EyeSight (from 2009MY)» display, select {Current Data Display & Save}.
- 2) Check that the display changes and the contents are correct when performing the operations as follows.
  - Depress and release the brake pedal. (Stop light switch and brake switch are turned ON.)
    - Subaru Select Monitor display item “Brake lamp SW signal”, “Brake status”, “BLS Signal status”
  - Turn the main switch to ON.
    - Subaru Select Monitor display item “Cruise main switch status”
  - Turn the “CANCEL” switch to ON.
    - Subaru Select Monitor display item “Cruise command switch status”
  - Turn the “SET/-” switch to ON.
    - Subaru Select Monitor display item “Cruise command switch status”
  - Turn the “RES/+” switch to ON.
    - Subaru Select Monitor display item “Cruise command switch status”
  - Turn the “Vehicle distance” switch to ON.
    - Subaru Select Monitor display item “Cruise command switch status”
  - Operate the shift lever.
    - Subaru Select Monitor display item “Current gear position”
  - Press and hold the pre-collision brake OFF switch.
    - Subaru Select Monitor display item “P-CR OFF indicator on flag”
  - Press and hold the lane departure warning OFF switch.
    - Subaru Select Monitor display item “LANE OFF indicator on flag”

NOTE:

For detailed operation procedures, refer to “PC application help for Subaru Select Monitor”.