

3. EyeSight System

A: WIRING DIAGRAM

Refer to “EyeSight System” in the wiring diagram. <Ref. to WI-182, WIRING DIAGRAM, EyeSight System.>

B: INSPECTION

Refer to “Basic Diagnostic Procedure” of “EyeSight (DIAGNOSTICS)” section. <Ref. to ES(diag)-2, Basic Diagnostic Procedure.>

C: NOTE

For procedure of each component in the EyeSight system, refer to the respective section.

- Control module:<Ref. to ES-7, Control Unit.>
- Stereo camera:<Ref. to ES-8, Stereo Camera.>
- Cruise control command switch:<Ref. to ES-16, Cruise Control Command Switch.>
- Combination meter:<Ref. to ES-21, Combination Meter.>
- Transmission control module (TCM):<Ref. to ES-22, Transmission Control Module (TCM).>
- Stop light and brake switch:<Ref. to ES-23, Stop Light & Brake Switch.>
- Brake light relay:<Ref. to ES-24, Brake Lamp Relay.>
- VDC control module & hydraulic control unit (VDCCM&H/U):<Ref. to ES-25, VDC Control Module and Hydraulic Control Unit (VDCCM&H/U).>
- Parking brake actuator:<Ref. to ES-26, Parking Brake Actuator.>
- Switches and harness:<Ref. to ES-15, Switches and Harness.>