

# Rear Door Glass

GLASS/WINDOWS/MIRRORS

## 10.Rear Door Glass

### A: REMOVAL


- 1) Remove the rear door trim. <Ref. to EI-60, REAR DOOR, REMOVAL, Door Trim.>
- 2) Remove the sealing cover.

#### CAUTION:


- Carefully remove the butyl tape. Excessive force will easily break the cover.
- If cover gets broken, replace it with a new part.



- 3) Attach the battery ground cable and power window switch and turn the ignition to ON.
- 4) Remove the rear door glass.
  - (1) Operate the power window switch to move the rear door glass to the lowest position where the mounting bolts can be seen.
  - (2) Remove the screw and bolt and remove the door sash.

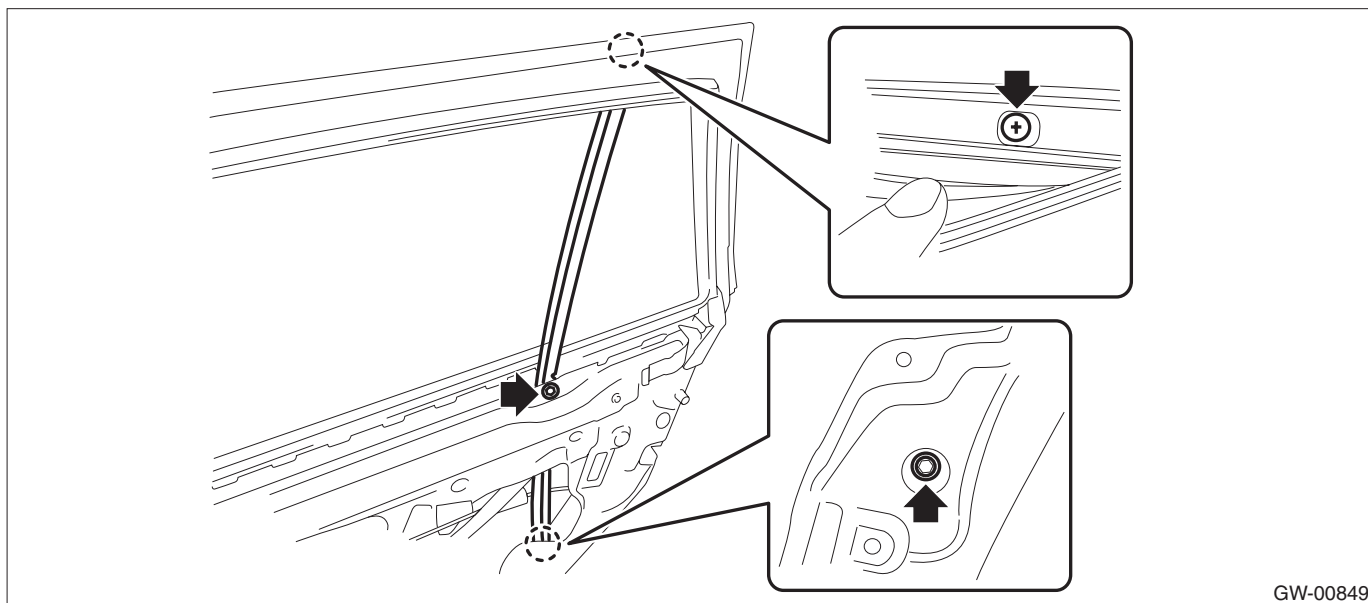


(3) Remove the bolt.

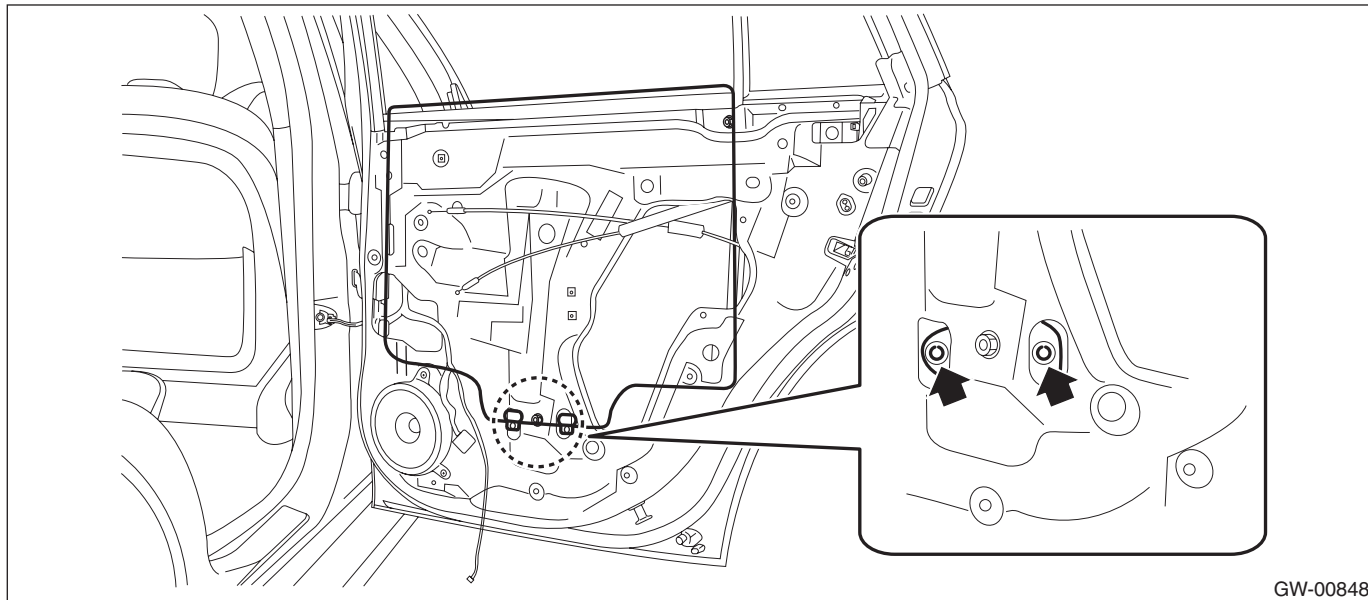

(4) Remove the rear door glass.

**CAUTION:**  
Avoid impact and damage to the glass.

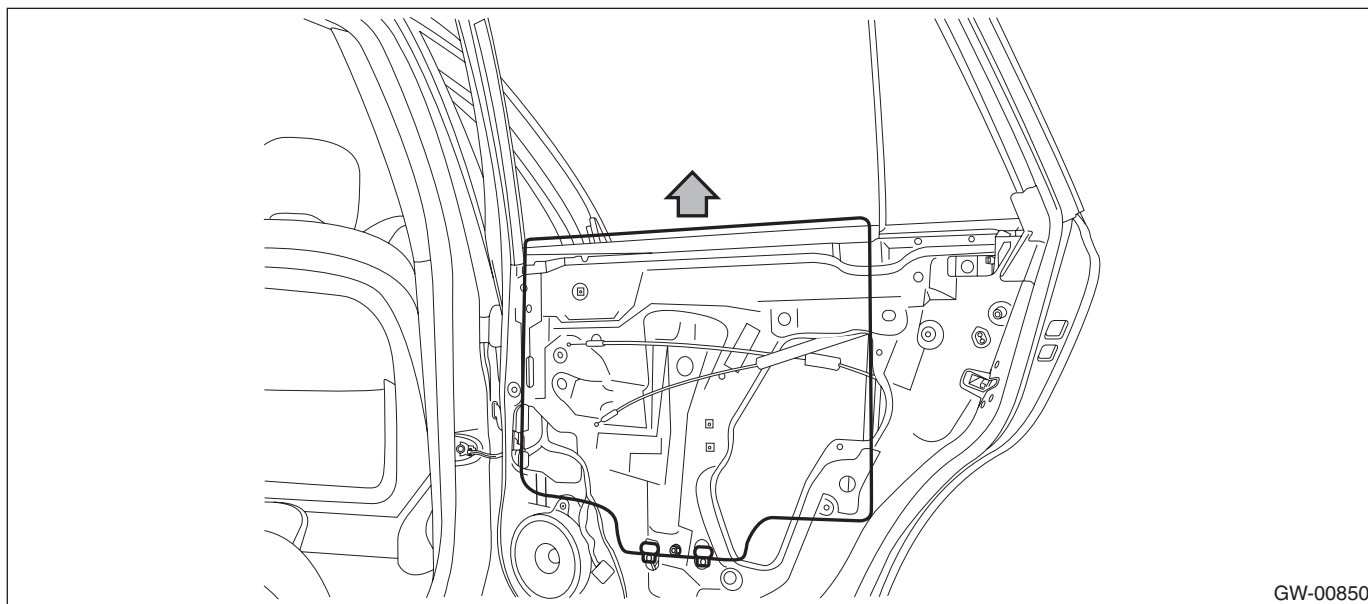

## B: INSTALLATION

**CAUTION:**  
Make sure that the glass run rubber is placed securely in the door frame and sash.  
Install each part in the reverse order of removal.

**Tightening torque:**  
Refer to "COMPONENT" of "General Description". <Ref. to GW-5, REAR DOOR GLASS, COMPONENT, General Description.>