

# Front Door Glass

GLASS/WINDOWS/MIRRORS


## 5. Front Door Glass

### A: REMOVAL


- 1) Remove the front door trim. <Ref. to EI-59, FRONT DOOR, REMOVAL, Door Trim.>
- 2) Remove the sealing cover.

#### CAUTION:

- Carefully remove the butyl tape. Excessive force will easily break the cover.
- If cover gets broken, replace it with a new part.

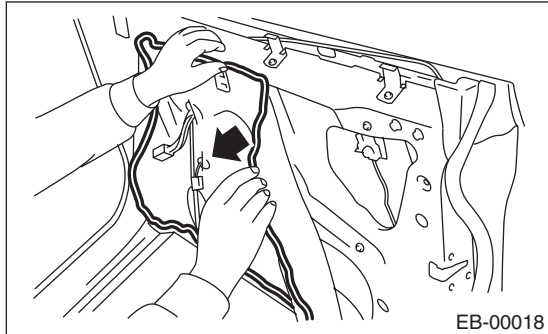


- 3) Remove the inner pad.
- 4) Attach the battery ground cable and power window switch and turn the ignition to ON.
- 5) Remove the front door glass.
  - (1) Operate the power window switch to move the front door glass to the position where the mounting bolts can be seen.
  - (2) Remove the bolt.

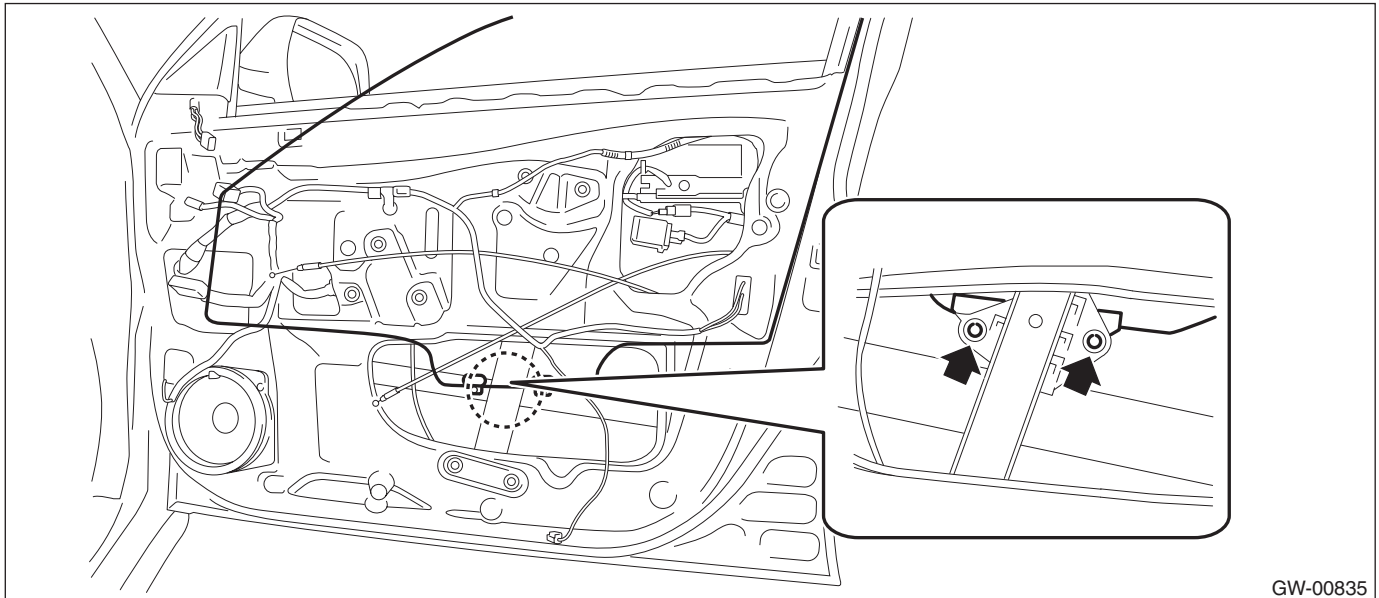

(3) While tilting the glass, remove the windshield glass.

**CAUTION:**

**Avoid impact and damage to the glass.**

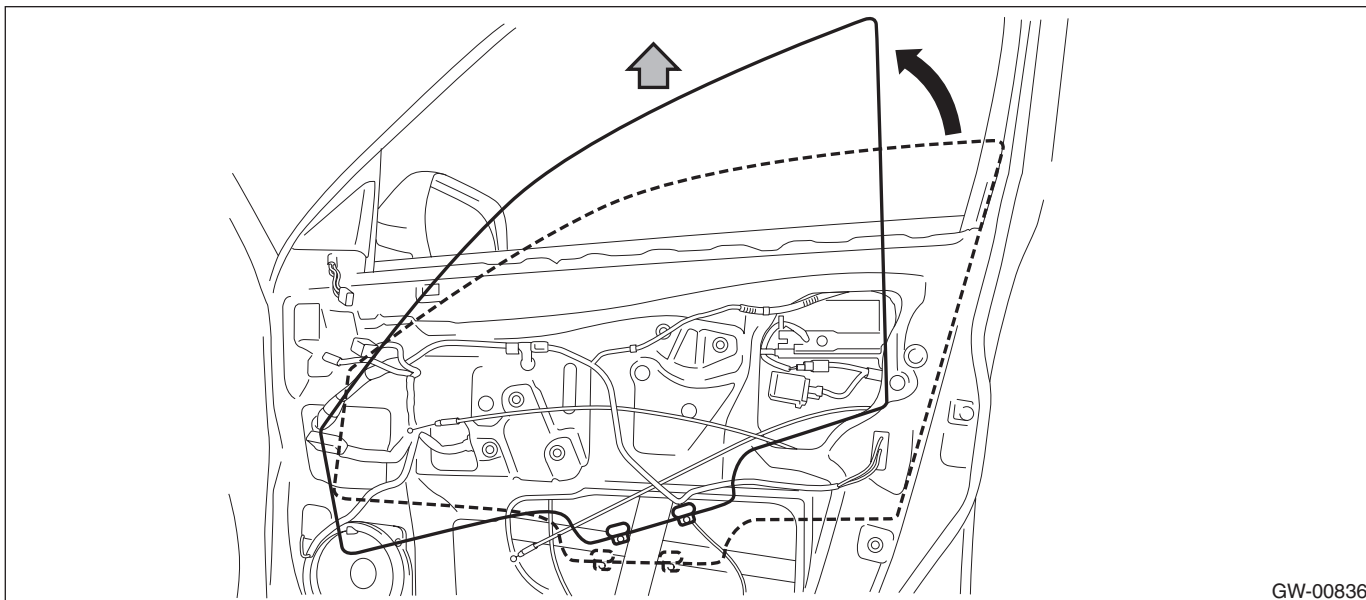

**B: INSTALLATION**

**CAUTION:**

**Make sure that the glass run rubber is placed securely in the door frame and sash.**

Install each part in the reverse order of removal.

**Tightening torque:**

**Refer to "COMPONENT" of "General Description". <Ref. to GW-4, FRONT DOOR GLASS, COMPONENT, General Description.>**