

Read Diagnostic Trouble Code (DTC)

HVAC SYSTEM (DIAGNOSTICS)

8. Read Diagnostic Trouble Code (DTC)

A: OPERATION

For details concerning the operation procedure, refer to “PC application help for Subaru Select Monitor”.