


Electrical Component Location

IMMOBILIZER (DIAGNOSTICS)

3. Electrical Component Location

A: LOCATION

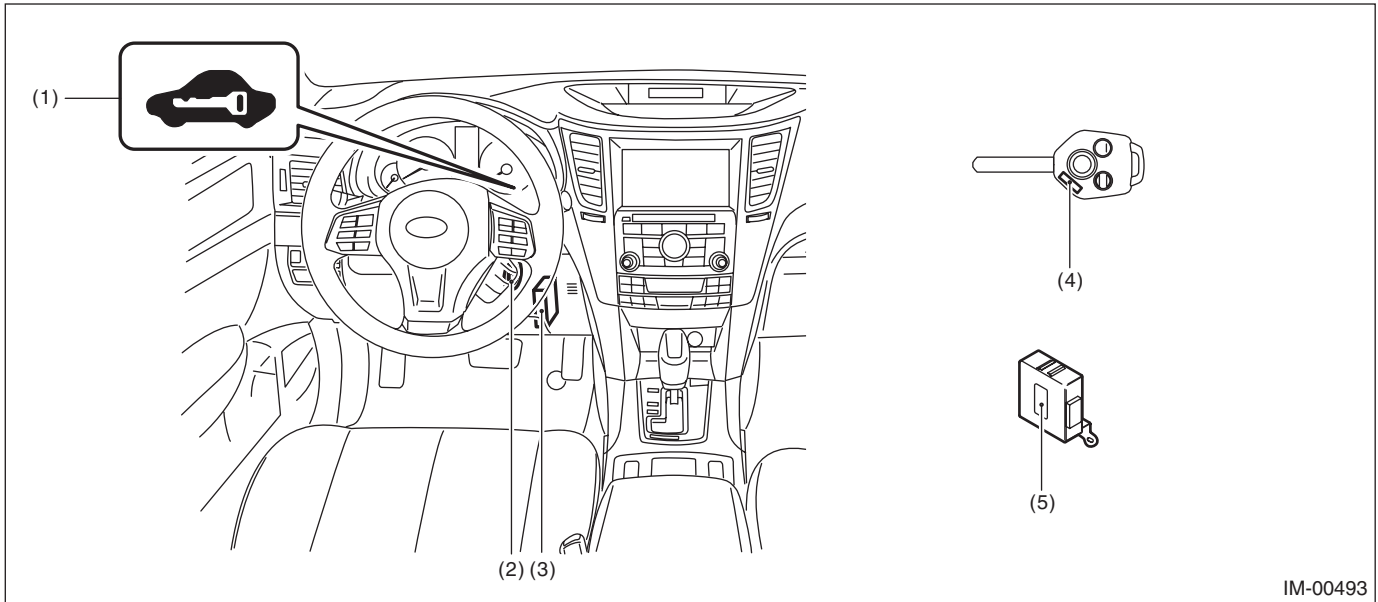

IM-00493

(1) Security indicator light

(3) Body integrated unit

(5) Security control module (for C0 and C5 models)

(2) Antenna

(4) Transponder