

Engine Coolant Temperature Gauge

INSTRUMENTATION/DRIVER INFO

10.Engine Coolant Temperature Gauge

A: SPECIFICATION

NOTE:

Equipped on the model with luminescent meter.

Since the meter case assembly cannot be disassembled, do not remove or inspect the engine coolant temperature gauge alone. (Do not remove the cover on the back surface.)