


11. Multi Display

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Disconnect the claws and hooks and remove the center speaker cover.

NOTE:

If the cover is hard to remove, first remove the audio assembly or navigation assembly, and then push up the cover from the backside.

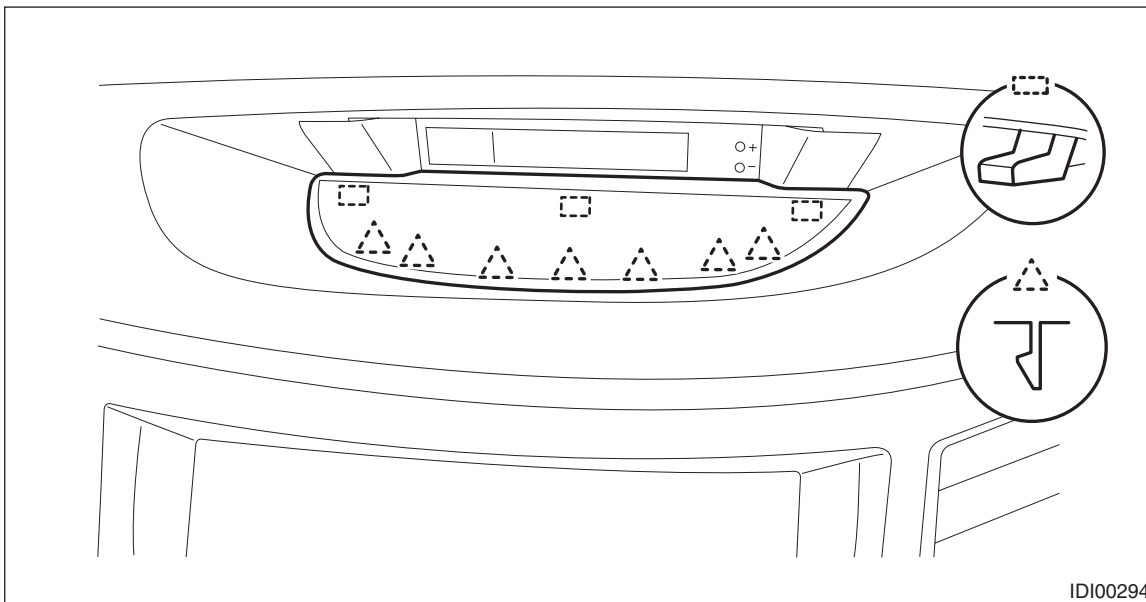

- 3) Remove the multi display.

CAUTION:


Be careful not to damage the multi display or instrument panel.

- (1) Release the clips and claws, detach the multi display panel LWR.

Multi Display

INSTRUMENTATION/DRIVER INFO

(2) Remove the screws and pull out the multi display toward you to disconnect the connectors.

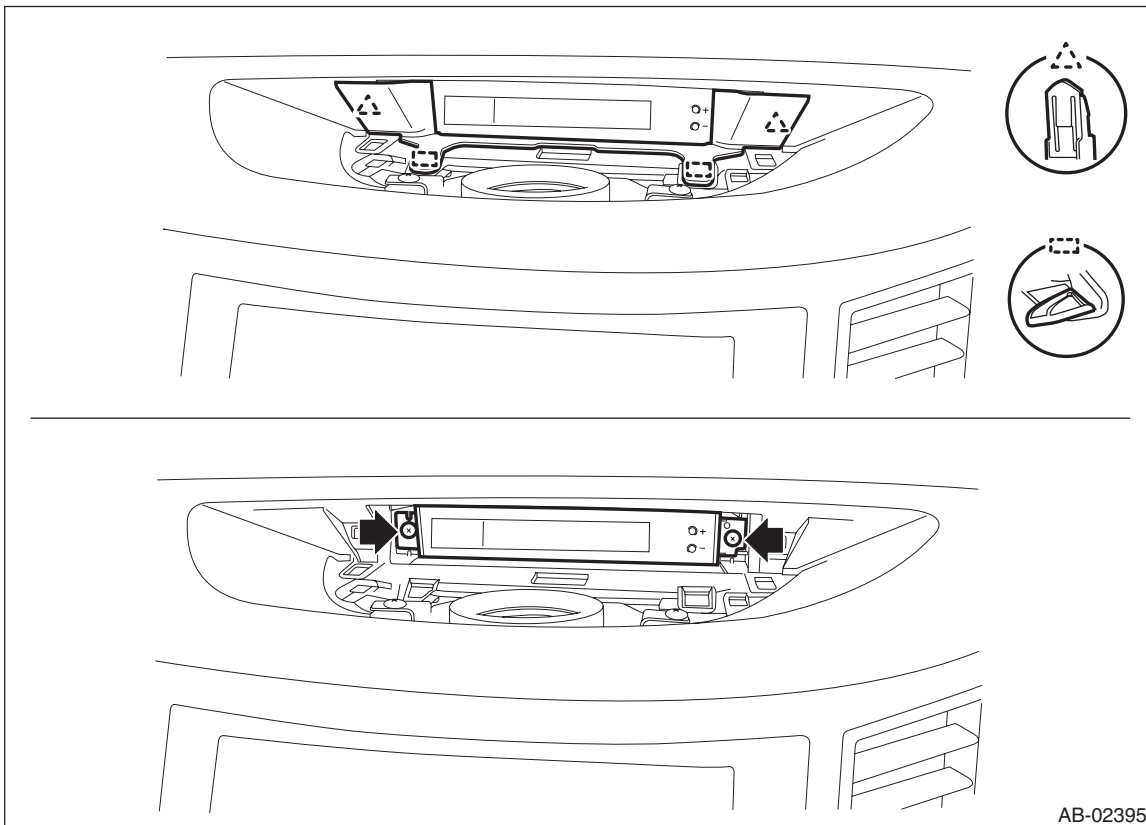

AB-02395

B: INSTALLATION

CAUTION:

- Make sure the electrical connector is connected securely.
- Make sure that the multi display operates normally.

Install each part in the reverse order of removal.