


Relay and Fuse

INSTRUMENTATION/DRIVER INFO

2. Relay and Fuse

A: LOCATION

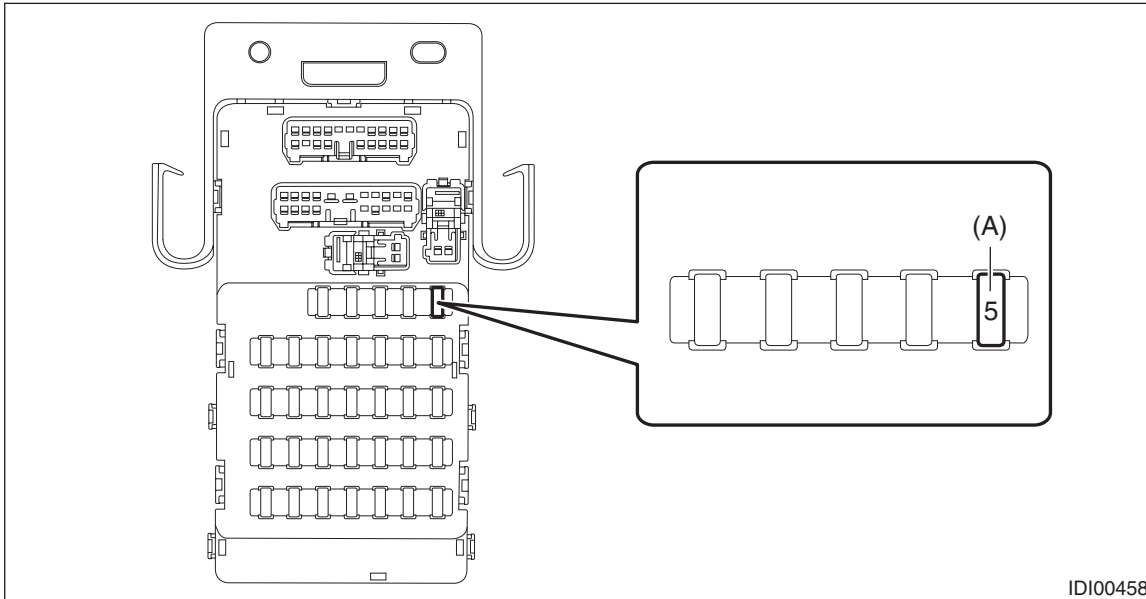

IDI00458

Relay & fuse box	Fuse 7.5A (combination meter, clock)	(A)
------------------	--------------------------------------	-----

NOTE:

For other related fuses, refer to the wiring diagram. <Ref. to WI-15, Power Supply Circuit.>

B: INSPECTION

1. CHECK FUSE

- 1) Remove the fuse and inspect visually.
- 2) If the fuse is blown out, replace the fuse.

NOTE:

If the fuse is blown again, check the system wiring harness.