

List of Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

DTC	Item	Content of diagnosis	Note
U0155	Lost Communication With Instrument Panel Cluster (IPC) Control Module	Data does not arrive from meter.	<Ref. to LAN(diag)-97, DTC U0155 LOST COMMUNICATION WITH INSTRUMENT PANEL CLUSTER (IPC) CONTROL MODULE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
U1235	Lost Communication With EyeSight	Data does not arrive from stereo camera.	<Ref. to LAN(diag)-98, DTC U1235 LOST COMMUNICATION WITH EyeSight, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
U0128	Lost Communication With Park Brake Control Module	Data does not arrive from electric parking.	<Ref. to LAN(diag)-95, DTC U0128 LOST COMMUNICATION WITH PARK BRAKE CONTROL MODULE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

1. DTC TABLE

NOTE:

When more than one DTC codes are recorded, referring to their combination and indicator display in the combination meter will make it easy to identify the possible cause. Refer to the list for typical examples.

Combination meter display	Diagnostic Code that was displayed						Portions with high rate of malfunction occurrence
	ECM	A/C	EPB (electronic parking brake)	Body integrated unit	TCM	VDC CM (Detailed code)	
CRUISE blink Check engine lit [S] lit [S] lit VDC OFF lit EPB operating light lit	U0122	Communication failure	Communication failure	U1222 U1223	P1718	5144 5143 5136	Hi-side circuit near the body integrated unit (VDC side) is open
CRUISE lit Check engine lit VDC lit [S] lit	U0122 (Past)	U0002 (Past)	C0264	U1201 U1222 U1223 (Past)	P1718 (Past)	5143 5144 5136	Hi-side circuit near the body integrated unit (VDC side) was open (restored)
CRUISE blink Check engine lit [S] lit VDC lit VDC OFF lit EPB operating light lit Shift indicator off	U0122	Communication failure	Communication failure	U1222 U1223	P1718	5144 5136	Lo-side circuit near the body integrated unit (VDC side) is open
CRUISE blink CHECK EGI [S] blink VDC VDC OFF ABS EPB operating light lit Shift indicator off	U0122 (Past)	U0002 (Past)	C0264	U1222 U1223 (Past)	U1718 (Past)	5143 5121 5144	Lo-side circuit near the body integrated unit (VDC side) was open (restored)
CRUISE blink CHECK EGI [S] blink VDC VDC OFF ABS EPB operating light lit Shift indicator off	U0122	Communication failure	Communication failure	U1222 U1223	P1718	5144 5136	Hi- and Lo-side circuits near the body integrated unit (VDC side) are open
CRUISE lit CHECK EGI VDC S blink	U0122 (Past)	U0002 (Past)	C0262 C0264	U1222 U1223 (Past)	P1718 (Past)	5143 5144 5136	Hi- and Lo-side circuits near the body integrated unit (VDC side) were open (restored)

List of Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Combination meter display	Diagnostic Code that was displayed						Portions with high rate of malfunction occurrence
	ECM	A/C	EPB (electronic parking brake)	Body integrated unit	TCM	VDC CM (Detailed code)	
EPB OFF VDC VDC OFF Coolant temperature blink (red/blue) FUEL blink ABS EPB operating light blink EPB warning light Door off [!] blink CRUISE/blink Shift indicator off	U0073	Communication failure	Communication failure	U1201 U1202 U1221 U1223 U1229 U122A U122B	P1718	5135 5121	Hi-side circuit near the body integrated unit (VDC side) is shorted to ground
EPB OFF VDC VDC OFF Coolant temperature blink (red/blue) FUEL blink ABS EPB operating light blink EPB warning light Door off [!] blink CRUISE/blink Shift indicator off	U0073 (Past)	U0002 (Past)	—	U1201 U1202 U1221 U1223 U1229 U122A U122B (Past)	P1718 (Past)	5143 5135 5121	Hi-side circuit near the body integrated unit (VDC side) was shorted to ground
Normal	—	—	—	—	—	—	Lo-side circuit near the body integrated unit (VDC side) is shorted to ground
Normal	—	—	—	—	—	—	Lo-side circuit near the body integrated unit (VDC side) was shorted to ground
CRUISE lit CHECK EGI [S] blink VDC Shift indicator off	U0073 U0140	Communication failure	Communication failure	U1201 U1202 U1221 U1223 U1229 U122A U122B	P1718	5135 5121	Hi- and Lo-side circuits near the body integrated unit (VDC side) are shorted
CRUISE lit CHECK EGI [S] blink VDC	U0073 U0140	U0002 (Past)	—	U1201 U1202 U1221 U1223 U1229 U122A U122B (Past)	P1718 (Past)	5143 5135 5121	Hi- and Lo-side circuits near the body integrated unit (VDC side) were shorted

List of Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Combination meter display	Diagnostic Code that was displayed						Portions with high rate of malfunction occurrence
	ECM	A/C	EPB (electronic parking brake)	Body integrated unit	TCM	VDC CM (Detailed code)	
CRUISE blink CHECK EGI [S] blink FUEL blink VDC VDC OFF ABS EPB operating light lit Shift indicator off	U0122	Communication failure	Communication failure	U1221 U1229 U122A U122B	P1718	5144 5136	Hi-side circuit near the body integrated unit (ECM side) is open
CRUISE lit CHECK EGI VDC S blink	U0122 (Past)	U0002 (Past)	C0262 C0263 C0264 C0265 C0266 C0267	U1221 (Past)	P1718 (Past)	5143 5144 5136	Hi-side circuit near the body integrated unit (ECM side) was open
CRUISE blink CHECK EGI [S] blink FUEL blink VDC VDC OFF ABS EPB operating light lit Shift indicator off	—	Communication failure	Communication failure	U1221	P1718	5144 5136	Lo-side circuit near the body integrated unit (ECM side) is open
CRUISE lit CHECK EGI VDC S blink	—	U0002 (Past)	—	U1221 (Past)	P1718 (Past)	5143 5144 5136	Lo-side circuit near the body integrated unit (ECM side) was open
CRUISE blink CHECK EGI [S] blink FUEL blink VDC VDC OFF ABS EPB operating light lit Shift indicator off	—	Communication failure	Communication failure	U1221	P1718	5144 5136	Hi- and Lo-side circuits near the body integrated unit (ECM side) are open
CRUISE lit CHECK EGI VDC S blink	—	U0002 (Past)	—	U1221 (Past)	P1718 (Past)	5143 5144 5136	Hi- and Lo-side circuits near the body integrated unit (ECM side) were open
EPB OFF VDC VDC OFF Coolant temperature blink (red/blue) FUEL blink ABS EPB operating light blink EPB warning light Door off [I] blink CRUISE/blink Shift indicator off	U0073	Communication failure	Communication failure	U1201 U1202 U1221 U1223 U1229 U122A U122B	P1718	5135 5121	Hi-side circuit near the body integrated unit (ECM side) is shorted to ground

List of Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Combination meter display	Diagnostic Code that was displayed						Portions with high rate of malfunction occurrence
	ECM	A/C	EPB (electronic parking brake)	Body integrated unit	TCM	VDC CM (Detailed code)	
EPB OFF VDC VDC OFF Coolant temperature blink (red/blue) FUEL blink ABS EPB operating light blink EPB warning light Door off [!] blink CRUISE/blink Shift indicator off	U0073 (Past)	U0002 (Past)	—	U1201 U1202 U1221 U1223 U1229 U122A U122B (Past)	P1718 (Past)	5143 5135 5121	Hi-side circuit near the body integrated unit (ECM side) was shorted to ground
Normal	—	—	—	—	—	—	Lo-side circuit near the body integrated unit (ECM side) is shorted to ground
Normal	—	—	—	—	—	—	Lo-side circuit near the body integrated unit (ECM side) was shorted to ground
CRUISE lit CHECK EGI [S] blink VDC Shift indicator off	U0073 U0140	Communication failure	Communication failure	U1201 U1202 U1221 U1223 U1229 U122A U122B	P1718	5135 5121	Hi- and Lo-side circuits near the body integrated unit (ECM side) are shorted
CRUISE lit CHECK EGI [S] blink VDC	U0073 U0140	U0002 (Past)	—	U1201 U1202 U1221 U1223 U1229 U122A U122B (Past)	P1718 (Past)	5143 5135 5121	Hi- and Lo-side circuits near the body integrated unit (ECM side) were shorted
CRUISE lit CHECK EGI [S] blink VDC Shift indicator off	U0101	—	C0262	U1222	P1718 or P1725	5143 5137	Hi-side circuit near TCM is open
CRUISE lit CHECK EGI [S] blink VDC	U0101 (Past)	—	C0262	U1222 (Past)	P1718 or P1725 (Past)	5143 5137	Hi-side circuit near TCM was open
CRUISE lit CHECK EGI [S] blink VDC Shift indicator off	U0101	—	C0262	U1222	P1718 or P1725	5143 5137	Lo-side circuit near TCM is open
CRUISE lit CHECK EGI [S] blink VDC	U0101 (Past)	—	C0262	U1222 (Past)	P1718 or P1725 (Past)	5143 5137	Lo-side circuit near TCM was open

List of Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Combination meter display	Diagnostic Code that was displayed						Portions with high rate of malfunction occurrence
	ECM	A/C	EPB (electronic parking brake)	Body integrated unit	TCM	VDC CM (Detailed code)	
CRUISE lit CHECK EGI [S] blink VDC Shift indicator off	U0101	—	C0262	U1222	P1718 or P1725	5143 5137	Hi- and Lo-side circuits near TCM are open
CRUISE lit CHECK EGI [S] blink VDC	U0101 (Past)	—	C0262	U1222 (Past)	P1718 or P1725 (Past)	5143 5137	Hi- and Lo-side circuits near TCM were open
EPB OFF VDC VDC OFF Coolant temperature blink (red/blue) FUEL blink ABS EPB operating light blink EPB warning light CHECK EGI Door off [I] blink CRUISE/blink Shift indicator off	U0073	Communi- cation fail- ure	Communi- cation fail- ure	U1201 U1202 U1221 U1223 U1229 U122A U122B	P1718 or P1725	5135 5136 5152	Hi-side circuit near TCM is shorted to ground
CRUISE lit CHECK EGI VDC S blink	U0073 (Past)	U0002 (Past)	—	U1201 U1202 U1221 U1223 U1229 U122A U122B (Past)	P1718 or P1725 (Past)	5143 5135 5136	Hi-side circuit near TCM was shorted to ground
Normal	—	—	—	—	—	—	Lo-side circuit near TCM is shorted to ground
Normal	—	—	—	—	—	—	Lo-side circuit near TCM was shorted to ground
EPB OFF VDC VDC OFF Coolant temperature blink (red/blue) FUEL blink ABS EPB operating light blink EPB warning light CHECK EGI Door off [I] blink CRUISE/blink Shift indicator off	U0073	Communi- cation fail- ure	Communi- cation fail- ure	U1201 U1202 U1221 U1223 U1229 U122A U122B	P1718 or P1725	5135 5121	Hi- and Lo-side circuits near TCM are shorted

List of Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Combination meter display	Diagnostic Code that was displayed						Portions with high rate of malfunction occurrence
	ECM	A/C	EPB (electronic parking brake)	Body integrated unit	TCM	VDC CM (Detailed code)	
CRUISE lit CHECK EGI VDC S blink	U0073 (Past)	U0001 U0002 (Past)	C0261	U1201 U1202 U1221 U1223 U1229 U122A U122B (Past)	U1718 or P1725 (Past)	5143 5135 5121	Hi- and Lo-side circuits near TCM were shorted
CRUISE lit	—	Communication failure	—	U122B	—	—	Hi-side circuit near A/C is open
Normal	—	U0001 U0002 (Past)	—	U122B (Past)	—	—	Hi-side circuit near A/C was open
AT_OIL blink VDC CRUISE lit	—	Communication failure	—	U122B U1201	P1718 or P1725	5135 5121	Lo-side circuit near A/C is open
Normal	—	U0001 U0002	—	U1201 U122B (Past)	P1718 or P1725 (Past)	5144 5135 5121	Lo-side circuit near A/C was open
CRUISE lit	—	Communication failure	—	U122B	—	—	Hi- and Lo-side circuits near A/C are open
Normal	—	U0002 (Past)	—	U122B (Past)	—	—	Hi- and Lo-side circuits near A/C were open
EPB OFF VDC VDC OFF Coolant temperature blink (red/blue) FUEL blink ABS EPB operating light blink EPB warning light CHECK EGI Door off [] blink CRUISE/blink Shift indicator off	U0073 U0122	Communication failure	Communication failure	U1201 U1202 U1221 U1223 U1229 U122A U122B	P1718 or P1725	5135 5137 5121	Hi-side circuit near A/C is shorted to ground
CRUISE lit CHECK EGI VDC S blink	—	U0001 U0002 (Past)	—	U1201 U1202 U1221 U1223 U1229 U122A U122B (Past)	P1718 or P1725 (Past)	5143 5135 5137	Hi-side circuit near A/C was shorted to ground
Normal	—	—	—	—	—	—	Lo-side circuit near A/C is shorted to ground
Normal	—	—	—	—	—	—	Lo-side circuit near A/C was shorted to ground

List of Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Combination meter display	Diagnostic Code that was displayed						Portions with high rate of malfunction occurrence
	ECM	A/C	EPB (electronic parking brake)	Body integrated unit	TCM	VDC CM (Detailed code)	
EPB OFF VDC VDC OFF Coolant temperature blink (red/blue) FUEL lit ABS EPB operating light blink EPB warning light CHECK EGI Door off [!] blink CRUISE/blink Shift indicator off	U0073	Communication failure	Communication failure	U1201 U1202 U1221 U1223 U1229 U122A U122B	P1718 or P1725	5135 5136 5152	Hi- and Lo-side circuits near A/C are shorted
CRUISE lit CHECK EGI VDC S blink	U0073 (Past)	U0001 U0002 (Past)	C0261	U1201 U1202 U1221 U1223 U1229 U122A U122B (Past)	P1718 or P1725 (Past)	5143 5135 5136	Hi- and Lo-side circuits near A/C were shorted
CRUISE lit Coolant temperature blink (red/blue) CHECK EGI ATOIL I blink FUEL blink VDC EPS warning light	U0073	Communication failure	C0261 C0263	U1201 U1202 U1221	P1718	5144 5135 5121	Hi-side circuit near ECM is open
CRUISE lit CHECK EGI VDC S blink	U0073 (Past)	U0001 U0002	—	U1201 U1202 U1221 (Past)	P1718 (Past)	5143	Hi-side circuit near ECM was open
CRUISE lit Coolant temperature blink (red/blue) CHECK EGI ATOIL blink I blink FUEL blink VDC	U0073	Communication failure	C0261 C0263	U1201 U1202 U1221	P1718	5144 5135 5136	Lo-side circuit near ECM is open
CRUISE lit CHECK EGI VDC S blink	U0073 (Past)	U0001 U0002 (Past)	C0261 C0263	U1201 U1202 U1221 (Past)	P1718 (Past)	5143 5144 5135	Lo-side circuit near ECM was open
CRUISE lit Coolant temperature blink (red/blue) CHECK EGI ATOIL blink I blink FUEL blink VDC	U0073	U0002	C0263	U1221 U1201	P1718	5144 5136	Hi- and Lo-side circuits near ECM are open

List of Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Combination meter display	Diagnostic Code that was displayed						Portions with high rate of malfunction occurrence
	ECM	A/C	EPB (electronic parking brake)	Body integrated unit	TCM	VDC CM (Detailed code)	
CRUISE lit CHECK EGI VDC S blink	U0073 (Past)	U0001 U0002 (Past)	C0263	U1201 U1221 (Past)	P1718 (Past)	5143 5144 5136	Hi- and Lo-side circuits near ECM were open
EPB OFF VDC VDC OFF Coolant temperature blink (red/blue) FUEL blink ABS EPB operating light blink EPB warning light CHECK EGI Door off [!] blink CRUISE/blink Shift indicator off	U0073	Communication failure	Communication failure	U1201 U1202 U1221 U1223 U1229 U122A U122B	P1718	5135 5121	Hi-side circuit near ECM is shorted to ground
CRUISE lit CHECK EGI VDC S blink	U0073 (Past)	U0001 U0002	—	U1201 U1202 U1221 U1223 U1229 U122A U122B (Past)	P1718 (Past)	5143 5135 5121	Hi-side circuit near ECM was shorted to ground
Normal	—	—	—	—	—	—	Lo-side circuit near ECM is shorted to ground
Normal	—	—	—	—	—	—	Lo-side circuit near ECM was shorted to ground
EPB OFF VDC VDC OFF Coolant temperature blink (red/blue) FUEL blink ABS EPB operating light blink EPB warning light CHECK EGI Door off [!] blink CRUISE/blink Shift indicator off	U0073 U0122	Communication failure	Communication failure	U1201 U1202 U1221 U1223 U1229 U122A U122B	P1718	5143 5135 5144	Hi- and Lo-side circuits near ECM are shorted
CRUISE lit CHECK EGI VDC S blink	U0073 U0122 (Past)	U0001 U0002 (Past)	C0261	U1201 U1202 U1221 U1223 U1229 U122A U122B (Past)	P1718 (Past)	5143 5135 5144	Hi- and Lo-side circuits near ECM were shorted

List of Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Combination meter display	Diagnostic Code that was displayed						Portions with high rate of malfunction occurrence
	ECM	A/C	EPB (electronic parking brake)	Body integrated unit	TCM	VDC CM (Detailed code)	
EPB OFF VDC VDC OFF Coolant temperature blink (red/blue) FUEL blink ABS EPB operating light blink EPB warning light Door off [!] blink CRUISE/blink Shift indicator off	—	U0002	C0267	U122A	—	—	Hi-side circuit near meter is open
Normal	—	U0002 (Past)	C0267	U122A (Past)	—	—	Hi-side circuit near meter was open
EPB OFF VDC VDC OFF Coolant temperature blink (red/blue) FUEL blink ABS EPB operating light blink EPB warning light Door off [!] blink CRUISE/blink Shift indicator off	—	U0002	C0267	U122A	—	—	Lo-side circuit near meter is open
Normal	—	U0002	C0267	U122A (Past)	—	—	Lo-side circuit near meter was open
EPB OFF VDC VDC OFF Coolant temperature blink (red/blue) FUEL blink ABS EPB operating light blink EPB warning light Door off [!] blink CRUISE/blink Shift indicator off	—	U0002	C0267	U122A	—	—	Hi- and Lo-side circuits near meter are open
Normal	—	U0002	C0267	U122A (Past)	—	—	Hi- and Lo-side circuits near meter were open
CRUISE lit CHECK EGI VDC S blink	U0122 U0073	Communication failure	Communication failure	U1201 U1202 U1221 U1223 U1229 U122A U122B	P1718 or P1725	5135 5137 5136	Hi-side circuit near meter is shorted to ground

List of Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Combination meter display	Diagnostic Code that was displayed						Portions with high rate of malfunction occurrence
	ECM	A/C	EPB (electronic parking brake)	Body integrated unit	TCM	VDC CM (Detailed code)	
CRUISE lit CHECK EGI VDC S blink	U0122 U0073 (Past)	U0001 U0002 (Past)	C0261	U1201 U1202 U1221 U1223 U1229 U122A U122B (Past)	P1718 or P1725 (Past)	5143 5135 5137	Hi-side circuit near meter was shorted to ground
Normal	—	—	—	—	—	—	Lo-side circuit near meter is shorted to ground
Normal	—	—	—	—	—	—	Lo-side circuit near meter was shorted to ground
EPB OFF VDC VDC OFF Coolant temperature blink (red/blue) FUEL blink ABS EPB operating light blink EPB warning light CHECK EGI Door off [!] blink CRUISE/blink Shift indicator off	U0073	Communication failure	Communication failure	U1201 U1202 U1221 U1223 U1229 U122A U122B	P1718 or P1725	5135 5121	Hi- and Lo-side circuits near meter are shorted
CRUISE lit CHECK EGI VDC S blink	U0073 (Past)	U0001 U0002 (Past)	C0261	U1201 U1202 U1221 U1223 U1229 U122A U122B (Past)	P1718 or P1725 (Past)	5134 5135 5121	Hi- and Lo-side circuits near meter were shorted
EPB OFF EPB operating light blink EPB warning light CRUISE/lit	—	—	Communication failure	U1229	—	—	Hi-side circuit near electronic parking brake is open
Normal	—	—	C0261	U1229	—	—	Hi-side circuit near electronic parking brake was open
EPB OFF EPB operating light blink EPB warning light CRUISE/lit	—	—	Communication failure	U1229	—	—	Lo-side circuit near electronic parking brake is open
Normal	—	—	C0261	U1229	—	—	Lo-side circuit near electronic parking brake was open
EPB OFF EPB operating light blink EPB warning light CRUISE/lit	—	—	Communication failure	U1229	—	—	Hi- and Lo-side circuits near electronic parking brake are open

List of Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Combination meter display	Diagnostic Code that was displayed						Portions with high rate of malfunction occurrence
	ECM	A/C	EPB (electronic parking brake)	Body integrated unit	TCM	VDC CM (Detailed code)	
Normal	—	—	C0261	U1229	—	—	Hi- and Lo-side circuits near electronic parking brake were open
EPB OFF VDC VDC OFF Coolant temperature blink (red/blue) FUEL blink ABS EPB operating light blink EPB warning light CHECK EGI Door off [!] blink CRUISE/blink Shift indicator off	U0073 U0122	Communication failure	Communication failure	U1201 U1202 U1221 U1229 U122A U122B	P1718 or P1725	51335 5137 5121	Hi-side circuit near electronic parking brake is shorted to ground
CRUISE lit CHECK EGI VDC S blink	U0073 U0122 (Past)	U0001 U0002 (Past)	C0261	U1201 U1202 U1221 U1223 U1229 U122A U122B (Past)	P1718 or P1725 (Past)	5143 5135 5137	Hi-side circuit near electronic parking brake was shorted to ground
Normal	—	—	—	—	—	—	Lo-side circuit near electronic parking brake is shorted to ground
Normal	—	—	—	—	—	—	Lo-side circuit near electronic parking brake was shorted to ground
EPB OFF VDC VDC OFF Coolant temperature blink (red/blue) FUEL blink ABS EPB operating light blink EPB warning light CHECK EGI Door off [!] blink CRUISE/blink Shift indicator off	U0073	Communication failure	Communication failure	U1201 U1202 U1221 U1223 U1229 U122A U122B	P1718 or P1725	5135 5121	Hi- and Lo-side circuits near electronic parking brake are shorted
CRUISE lit CHECK EGI VDC S blink	U0073 (Past)	U0001 U0002 (Past)	C0261	U1201 U1202 U1221 U1223 U1229 U122A U122B (Past)	P1718 or P1725	5143 5135 5121	Hi- and Lo-side circuits near electronic parking brake were shorted

List of Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Combination meter display	Diagnostic Code that was displayed						Portions with high rate of malfunction occurrence
	ECM	A/C	EPB (electronic parking brake)	Body integrated unit	TCM	VDC CM (Detailed code)	
CRUISE lit VDC OFF CHECK EGI ATOIL blink VDC S blink EPS warning light ABS	U0122	U0002	C0264	U1223	P1718	5135 5136 5137	Hi-side circuit near VDC is open
CRUISE lit CHECK EGI VDC S blink	—	—	C0264	U1223 (Past)	—	5143	Hi-side circuit near VDC was open
CRUISE lit VDC OFF CHECK EGI ATOIL blink VDC S blink EPS warning light ABS	U0122	U0002	C0264	U1201 U1202 U1223	P1718	5135 5136 5152	Lo-side circuit near VDC is open
CRUISE lit CHECK EGI VDC S blink	—	—	C0264	U1201 U1202 U1223 (Past)	—	5143	Lo-side circuit near VDC was open
CRUISE lit VDC OFF CHECK EGI ATOIL blink VDC S blink EPS warning light ABS	U0122	U0002	C0264	U1223	P1718	5135 5136 5137	Hi- and Lo-side circuits near VDC are open
CRUISE lit CHECK EGI VDC S blink	—	—	C0264	U1223 (Past)	—	5143	Hi- and Lo-side circuits near VDC were open
EPB OFF VDC VDC OFF Coolant temperature blink (red/blue) FUEL blink ABS EPB operating light blink EPB warning light CHECK EGI Door off [!] blink CRUISE/blink Shift indicator off	U0073	Communication failure	Communication failure	U1201 U1202 U1221 U1223 U1229 U122A U122B	P1718	5135 5121	Hi-side circuit near VDC is shorted to ground

List of Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Combination meter display	Diagnostic Code that was displayed						Portions with high rate of malfunction occurrence
	ECM	A/C	EPB (electronic parking brake)	Body integrated unit	TCM	VDC CM (Detailed code)	
CRUISE lit CHECK EGI VDC S blink	—	U0001 U0002	C0261	U1201 U1202 U1221 U1223 U1229 U122A U122B (Past)	—	5143	Hi-side circuit near VDC was shorted to ground
Normal	—	—	—	—	—	—	Lo-side circuit near VDC is shorted to ground
Normal	—	U0028	—	—	—	—	Lo-side circuit near VDC was shorted to ground
EPB OFF VDC VDC OFF Coolant temperature blink (red/blue) FUEL blink ABS EPB operating light blink EPB warning light CHECK EGI Door off [!] blink CRUISE/blink Shift indicator off	U0073	Communication failure	Communication failure	U1201 U1202 U1221 U1223 U1229 U122A U122B	P1718	5135 5152 5136	Hi- and Lo-side circuits near VDC are shorted
CRUISE lit CHECK EGI VDC S blink	U0073 (Past)	U0028	—	U1201 U1202 U1221 U1223 U1229 U122A U122B (Past)	P1718 (Past)	5143	Hi- and Lo-side circuits near VDC were shorted
CRUISE lit VDC	—	—	—	U1201 U1202	—	5121	Hi-side circuit near steering angle sensor is open
Normal	—	—	—	U1201 U1202 (Past)	—	5121	Hi-side circuit near steering angle sensor was open
CRUISE lit VDC	—	—	—	U1201	—	5121	Lo-side circuit near steering angle sensor is open
Normal	—	—	—	U1201 (Past)	—	5121	Lo-side circuit near steering angle sensor was open
CRUISE lit VDC	—	U0028 (Past)	—	—	—	5121	Hi- and Lo-side circuits near steering angle sensor are open
Normal	—	U0028 (Past)	—	—	—	5121	Hi- and Lo-side circuits near steering angle sensor were open

List of Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

Combination meter display	Diagnostic Code that was displayed						Portions with high rate of malfunction occurrence
	ECM	A/C	EPB (electronic parking brake)	Body integrated unit	TCM	VDC CM (Detailed code)	
EPB OFF VDC VDC OFF Coolant temperature blink (red/blue) FUEL blink ABS EPB operating light blink EPB warning light CHECK EGI Door off [!] blink CRUISE/blink Shift indicator off	U0073	Communication failure	Communication failure	U1201 U1202 U1221 U1223 U1229 U122A U122B	P1718 or P1725	5135 5137	Hi-side circuit near steering angle sensor is shorted to ground
VDC CHECK EGI [S] blink CRUISE lit	U0073 (Past)	U0001 U0002 (Past)	C0261	U1201 U1202 U1221 U1223 U1229 U122A U122B (Past)	P1718 or P1725 (Past)	5143 5135	Hi-side circuit near steering angle sensor was shorted to ground
Normal	—	—	—	—	—	—	Lo-side circuit near steering angle sensor is shorted to ground
Normal	—	—	—	—	—	—	Lo-side circuit near steering angle sensor was shorted to ground
EPB OFF VDC VDC OFF Coolant temperature blink (red/blue) FUEL blink ABS EPB operating light blink EPB warning light CHECK EGI Door off [!] blink CRUISE/blink Shift indicator off	U0073	Communication failure	Communication failure	U1201 U1202 U1221 U1223 U1229 U122A U122B	P1718 or P1725	5135 5152 5136	Hi- and Lo-side circuits near steering angle sensor are shorted
VDC CHECK EGI [S] blink CRUISE lit	U0073 (Past)	U0001 U0002 (Past)	C0261	U1201 U1202 U1221 U1223 U1229 U122A U122B (Past)	P1718 or P1725 (Past)	5143 5135 5152	Hi- and Lo-side circuits near steering angle sensor were shorted