


# Front Turn Signal Light Bulb

LIGHTING SYSTEM


## 15. Front Turn Signal Light Bulb

### A: REMOVAL


- 1) Disconnect the ground cable from battery.
- 2) Remove the clips and remove the air intake duct. (When removing the front turn signal light bulb RH)

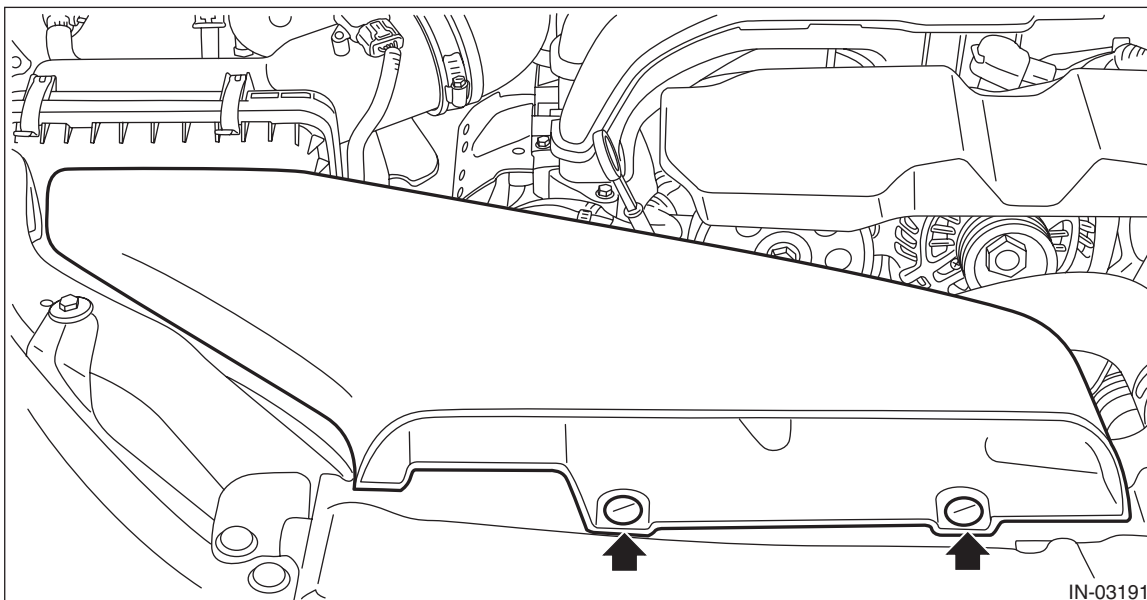

- 3) Remove the fender cover assembly UPR.
  - (1) Remove the clip.
  - (2) Release the claws of the fender cover assembly UPR by pulling it forward and remove the fender cover.

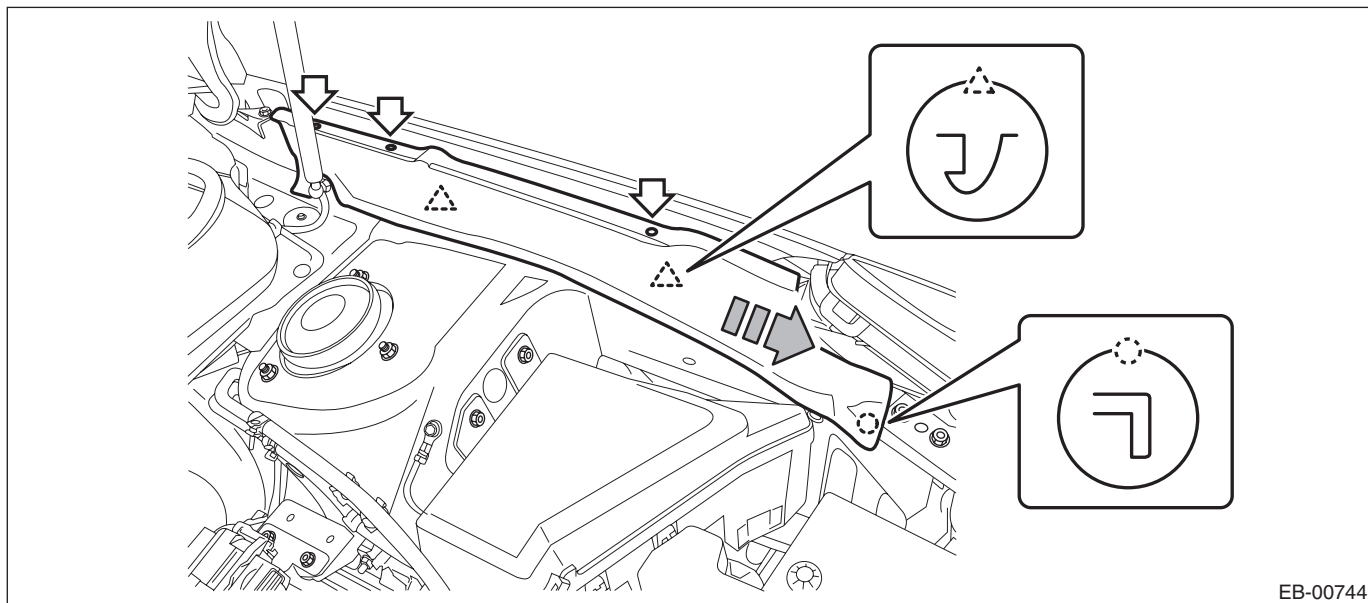

- 4) Remove the bulb socket and turn signal light bulb.

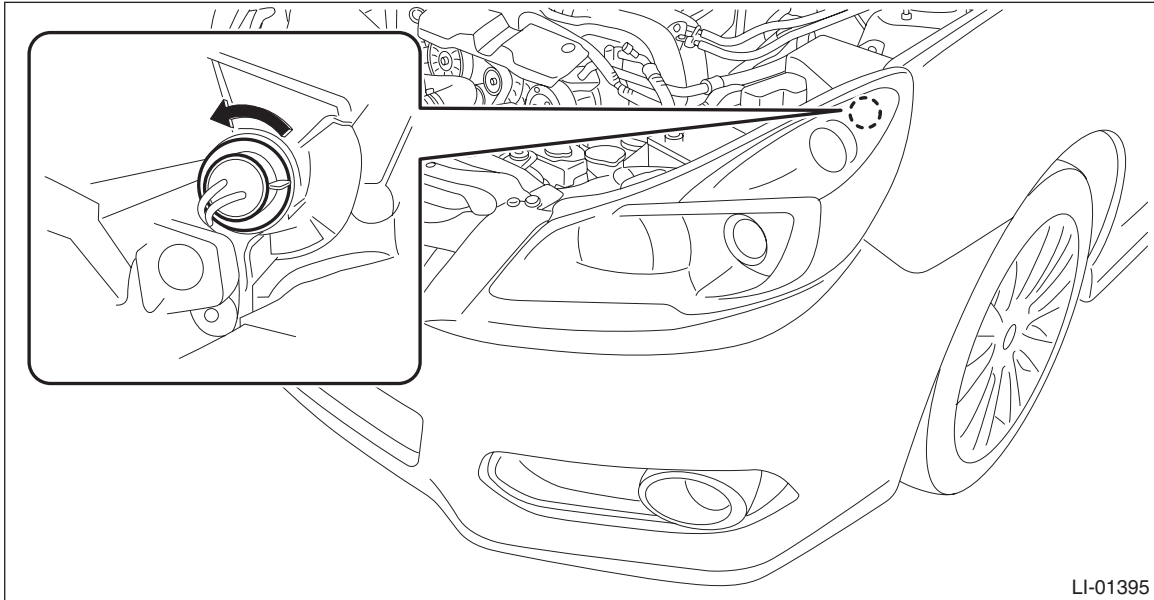

## **B: INSTALLATION**

Install each part in the reverse order of removal.

## **C: INSPECTION**

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) Replace the bulb if it is found defective.