


Clearance/Parking Light Bulb

LIGHTING SYSTEM

16. Clearance/Parking Light Bulb

A: REMOVAL


- 1) Disconnect the ground cable from battery.
- 2) Remove the clips and remove the air intake duct. (When removing the parking light bulb RH)

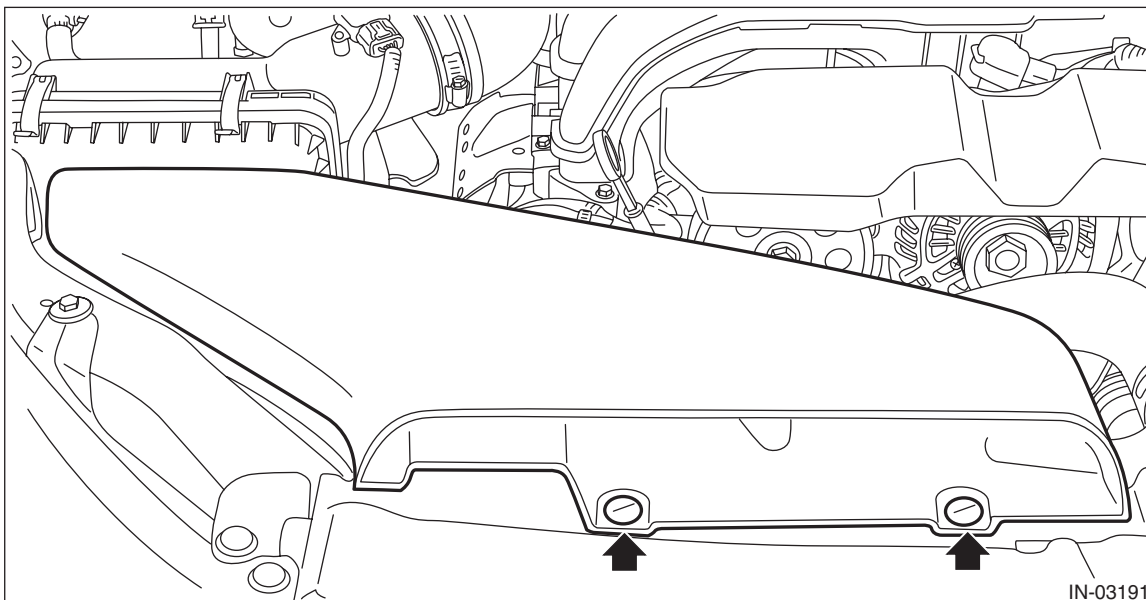

- 3) Remove the bulb socket and parking light bulb.

NOTE:

Move the battery rearward as required. (When removing the parking light bulb LH)

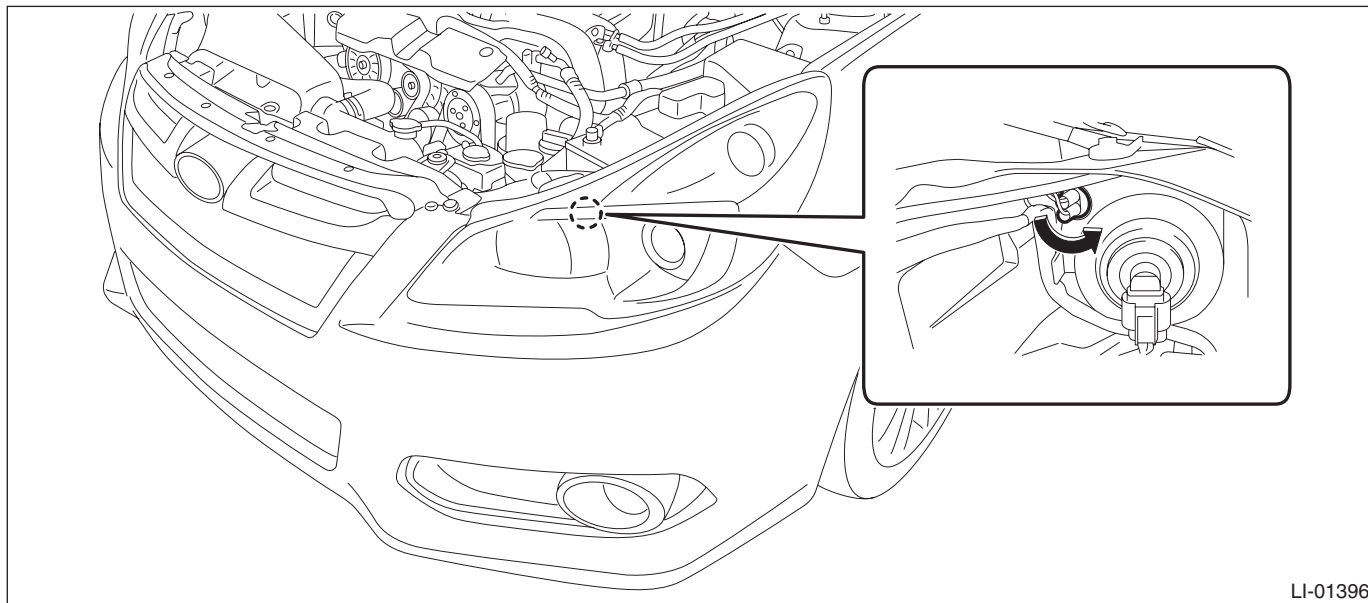

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) Replace the bulb if it is found defective.