
18. Front Fog Light Assembly


A: REMOVAL

1. SEDAN MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the clips and turn over the front end of front mud guard.

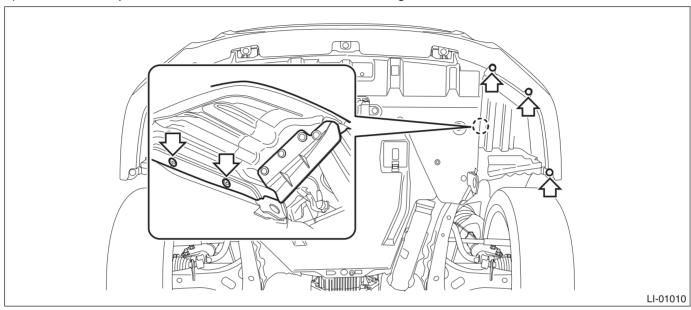


- 3) From the bottom of bumper face, remove the front fog light assembly.
 - (1) Disconnect the connector.
 - (2) Remove the screws, and remove the front fog light assembly.

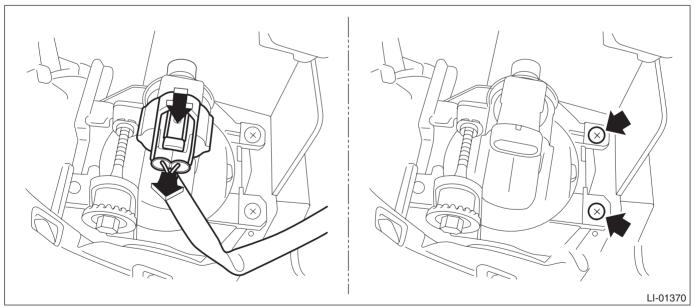


2. OUTBACK MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the clips and turn over the front end of front mud guard.

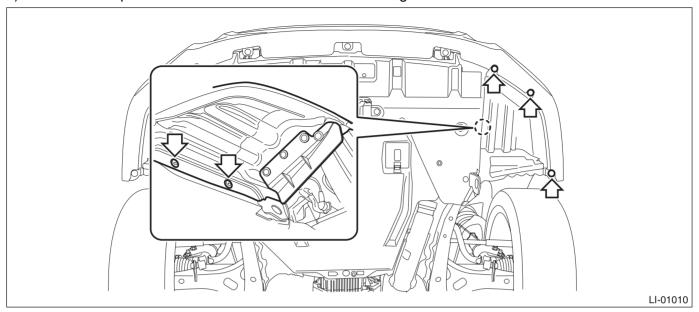

- 3) From the bottom of bumper face, remove the front fog light assembly.
 - (1) Disconnect the connector.
 - (2) Remove the nuts and clips, and remove the front fog light assembly.

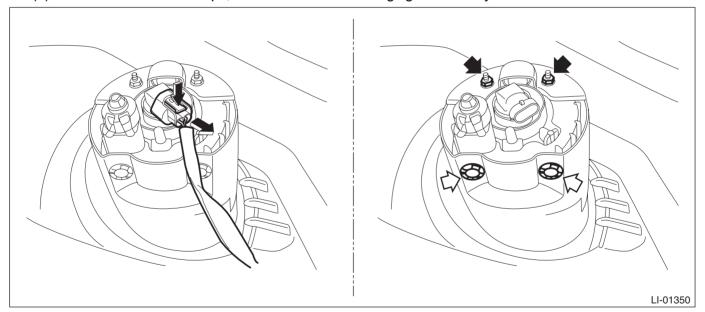

B: INSTALLATION

1) Install each part in the reverse order of removal.

Tightening torque:


Front fog light assembly: 7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

2) Adjust the fog light beam. <Ref. to LI-42, FOG LIGHT AIMING, ADJUSTMENT, Front Fog Light Assembly.>

C: ADJUSTMENT

1. FOG LIGHT AIMING

- 1) Before checking the fog light beam level, be sure of the following:
- The area around the fog light has not sustained any accident, damage or other type of deformation.
- Vehicle is parked on a level surface.
- The inflation pressure of tires is correct.
- Vehicle's fuel tank is fully filled.
- 2) Bounce the vehicle several times to normalize the suspension.
- 3) Make certain that someone is seated in the driver's seat.
- 4) Place the vehicle with the front end facing to the measurement panel.

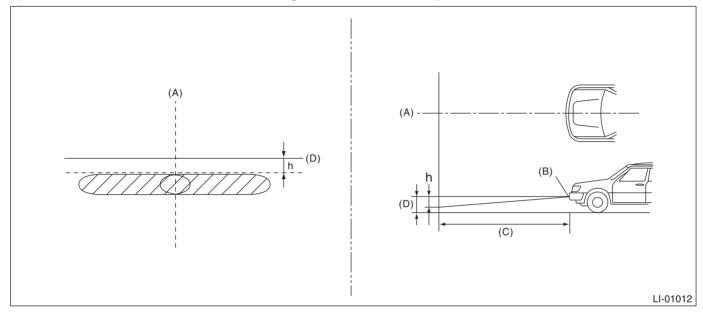

(A) Vehicle center


(C) 3 m (10 ft)

(D) Height of fog light center


(B)	Bulb center marking

h mm (in) at 3 m (10 ft)
40 (1.58)

- 5) Adjust the fog light beam.
 - (1) Remove the clips and turn over the front end of front mud guard.

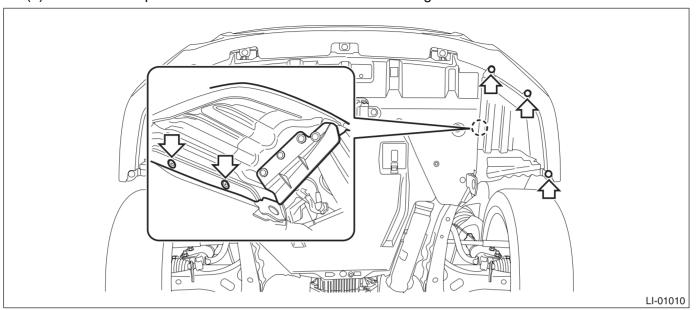

- (2) Adjust the beam direction by turning the aiming screw from the bottom of front bumper face.
- Sedan model

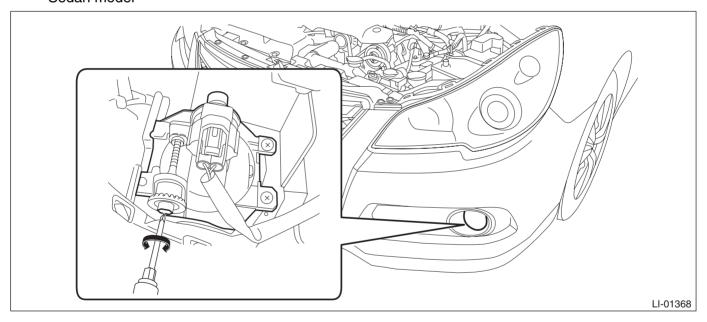

• OUTBACK model

