


24. Rear Finisher Light Assembly

A: REMOVAL

1. SEDAN MODEL


- 1) Disconnect the ground cable from battery.
- 2) Remove the trunk lid trim. <Ref. to EI-130, REMOVAL, Trunk Room Trim.>
- 3) Remove the rear finisher light assembly.
 - (1) Disconnect the connector.
 - (2) Remove the nuts and bolts and remove the rear finisher light assembly.

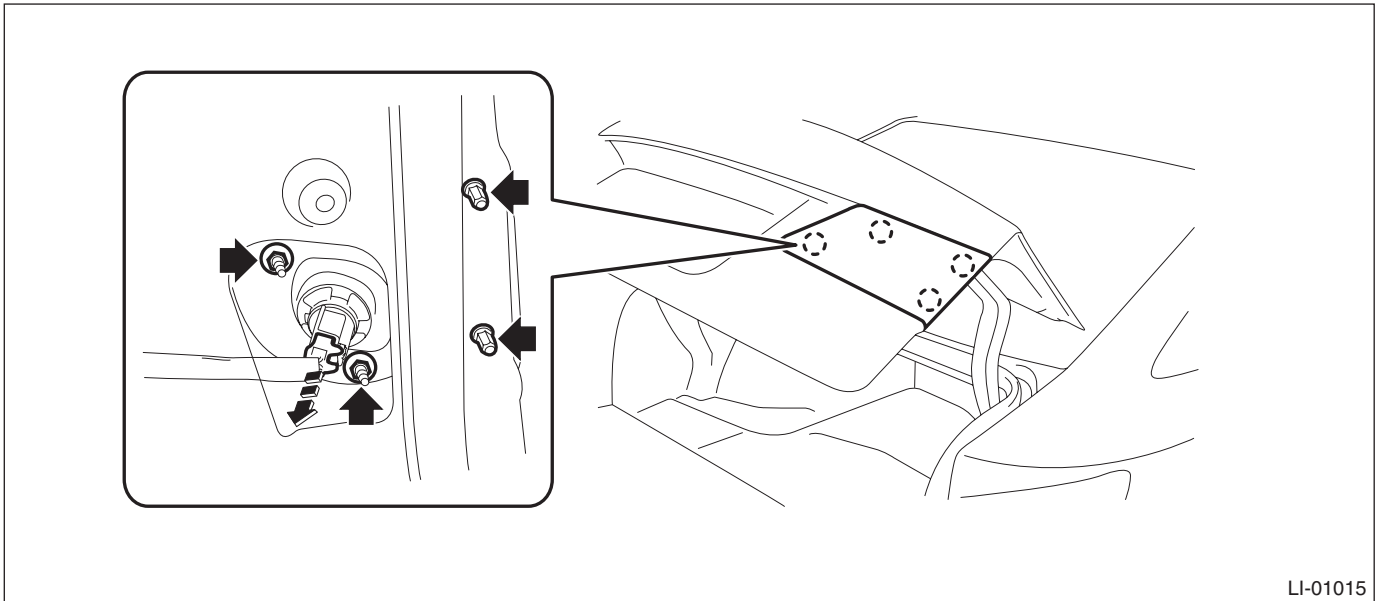

LI-01015

2. OUTBACK MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear gate trim. <Ref. to EI-166, REMOVAL, Rear Gate Trim.>
- 3) Remove the rear gate garnish. <Ref. to EI-171, REMOVAL, Rear Gate Garnish.>
- 4) Release the clips and claws, then detach the rear finisher light side cover.

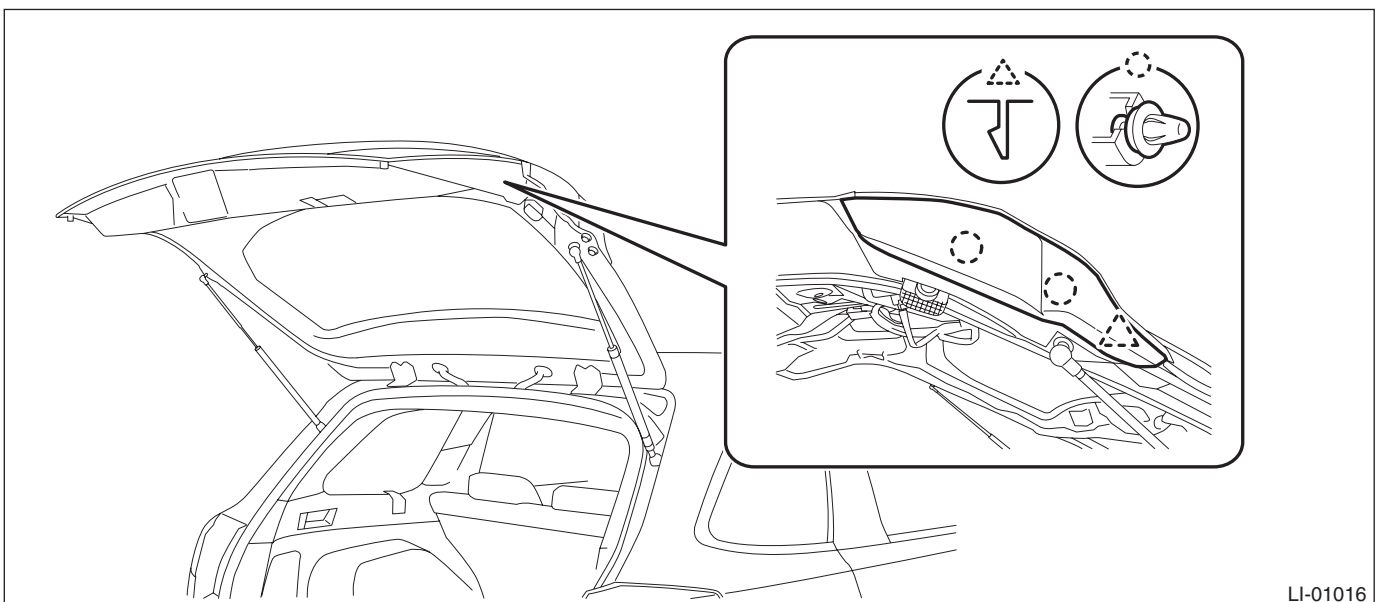


LI-01016

Rear Finisher Light Assembly

LIGHTING SYSTEM

- 5) Remove the rear finisher light assembly.
 - (1) Disconnect the connector.
 - (2) Remove the nuts and release the pin, then remove the rear finisher light assembly.

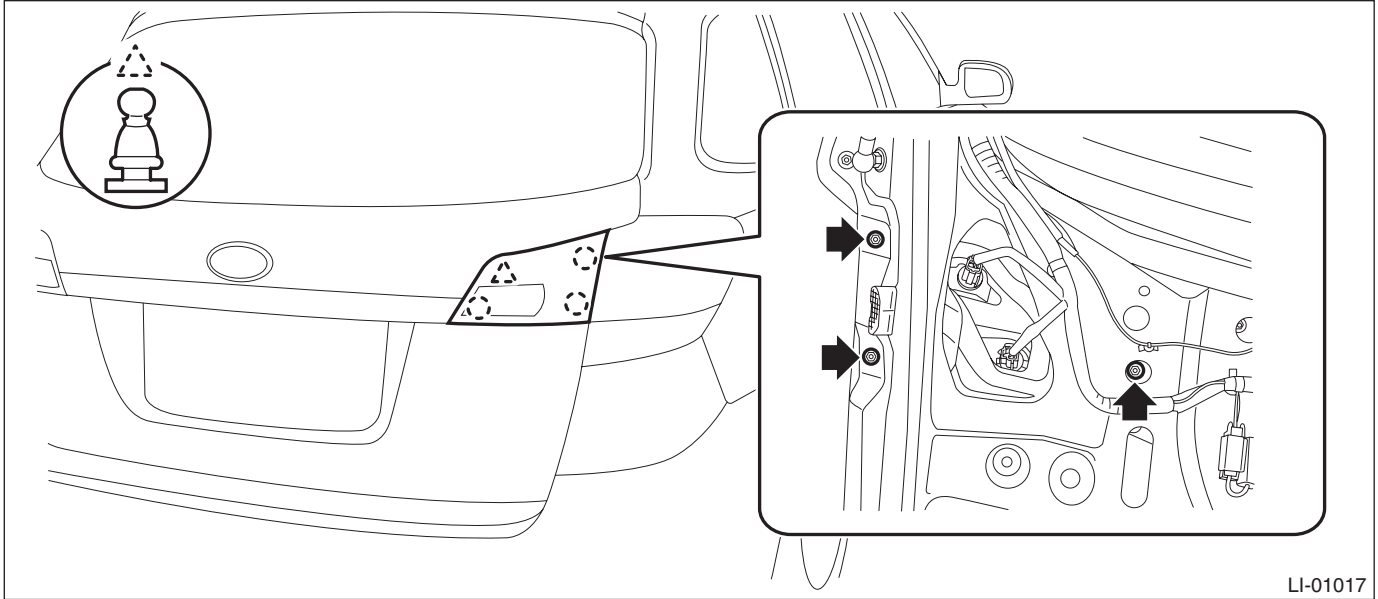

LI-01017

B: INSTALLATION

CAUTION:

Replace the body seal gasket with a new part.

Install each part in the reverse order of removal.

Tightening torque:

Rear finisher light assembly: 4.5 N·m (0.45 kgf·m, 3.3 ft·lb)