


# Ignition Switch Illumination

LIGHTING SYSTEM


## 34. Ignition Switch Illumination

### A: REMOVAL


- 1) Disconnect the ground cable from battery.
- 2) Remove the steering column cover.
  - (1) Remove the screws by turning the steering wheel to right and left.

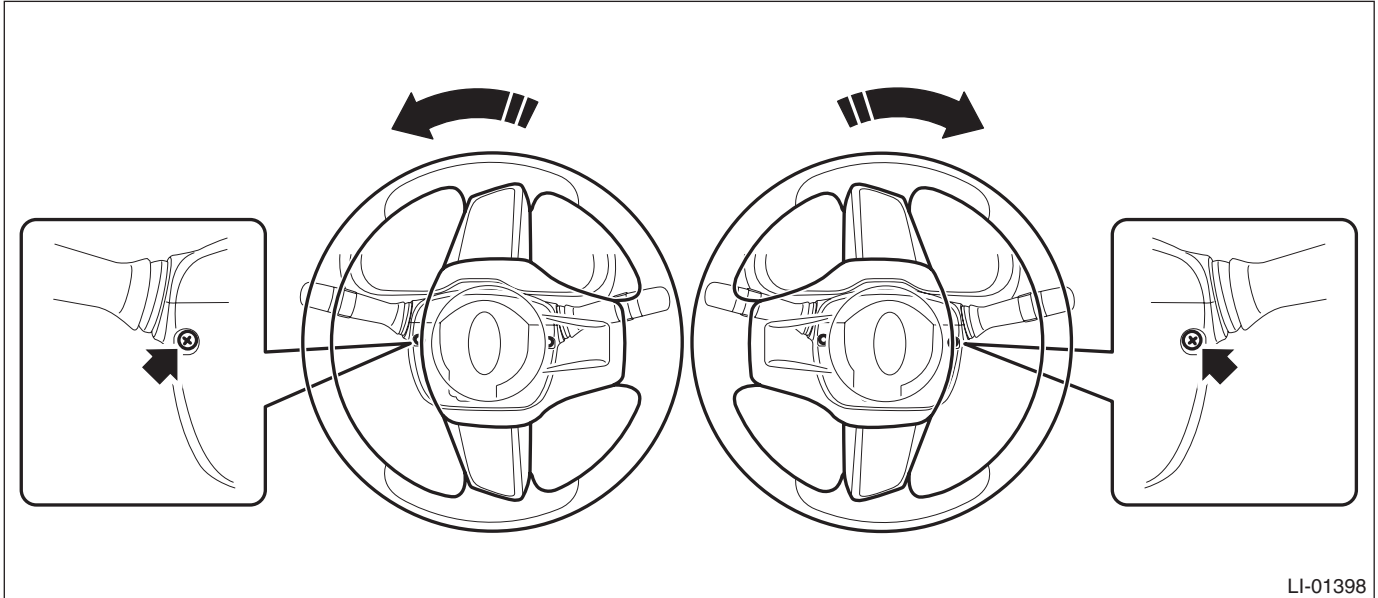


- (2) Release the claws and remove the steering column lower cover.

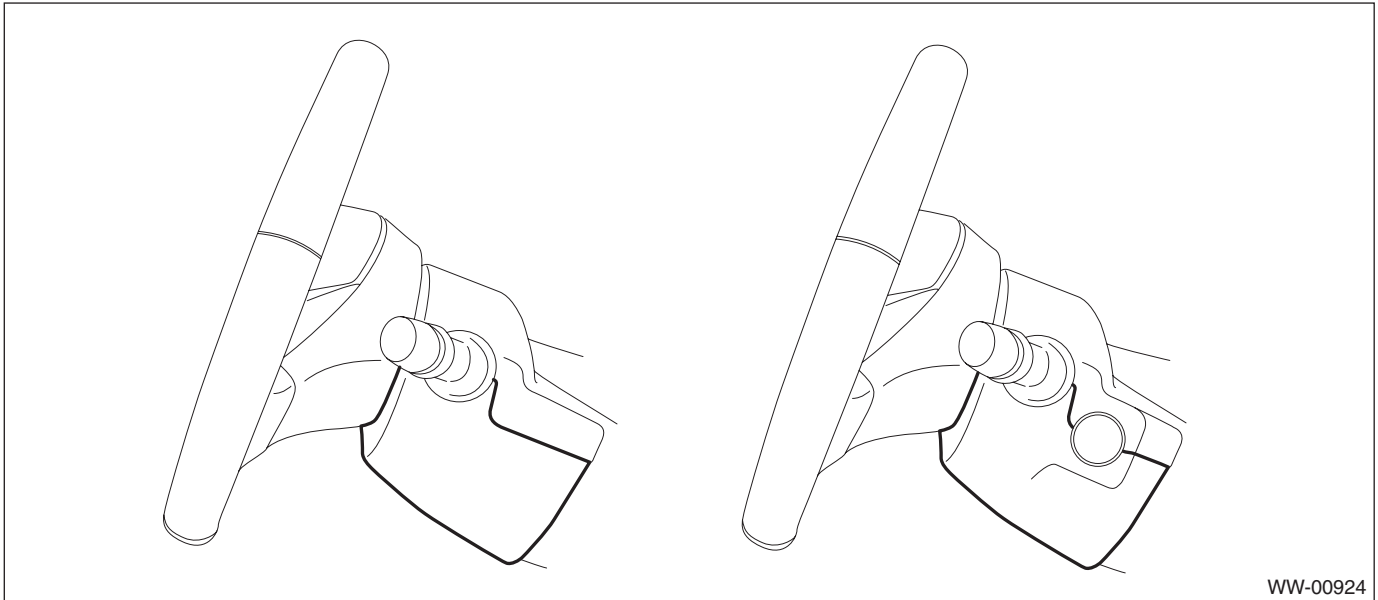

(3) Separate the steering column upper cover and steering upper cover, and remove the steering column upper cover.

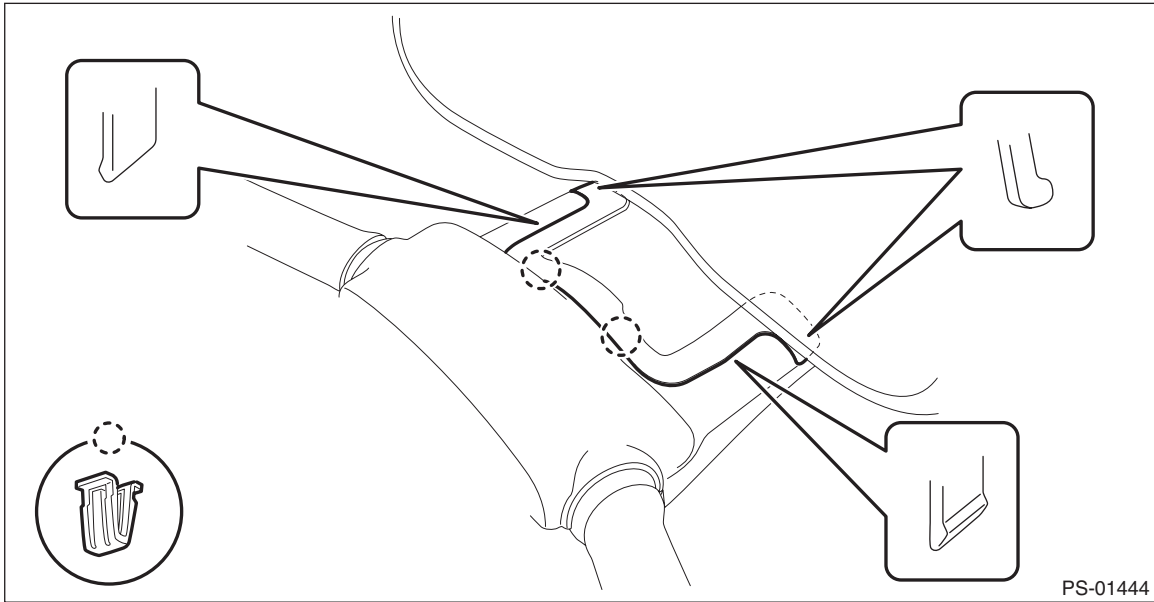

3) Remove the bulb socket and ignition switch illumination bulb.

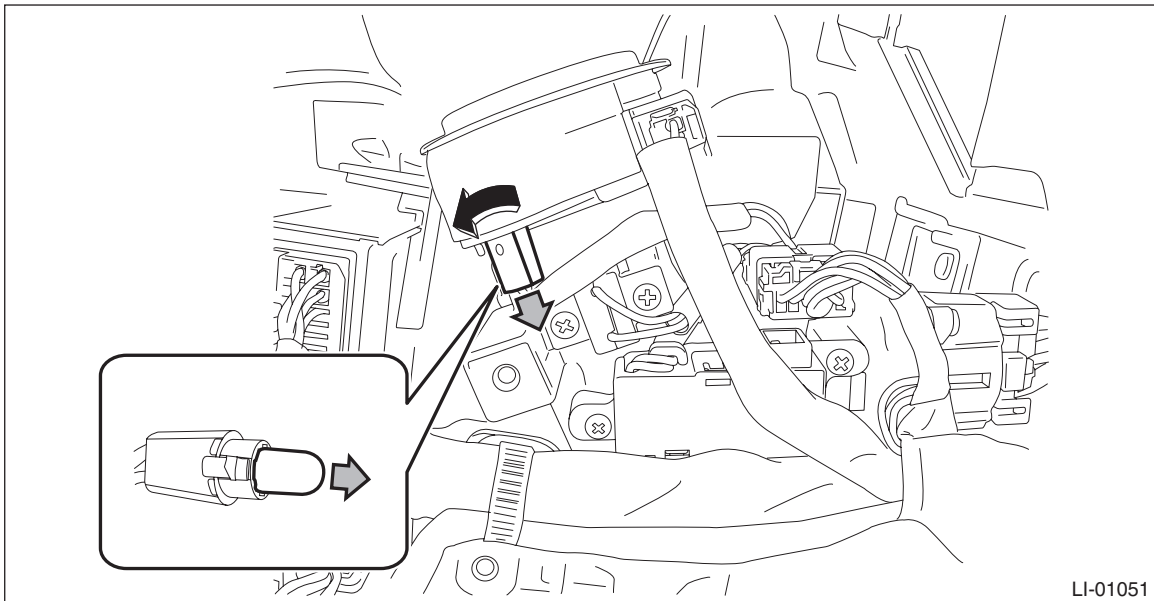

**NOTE:**

If the bulb socket is faulty, replace the ignition key lock. <Ref. to SL-67, Ignition Key Lock.>

**B: INSTALLATION**

Install each part in the reverse order of removal.

# Ignition Switch Illumination

LIGHTING SYSTEM

## C: INSPECTION

|   | Step  | Check   | Yes  | No   |
|---|---|---|--|--|
| 1 | <b>CHECK THE IGNITION SWITCH ILLUMINATION.</b><br>Make sure the ignition switch illumination illuminates when driver's side door is open.     | Does the ignition switch illumination illuminate? | Ignition switch illumination is normal.  | Go to step 2.  |
| 2 | <b>CHECK THE IGNITION SWITCH ILLUMINATION.</b><br>Make sure the ignition switch illumination blinks when the ignition switch is turned to ON. | Does the ignition switch illumination blink?      | Check the function setting of body integrated unit.<br><Ref. to BC(diag)-2, Basic Diagnostic Procedure.> | Check the ignition switch illumination circuit. <Ref. to SL-28, CHECK IGNITION SWITCH ILLUMINATION, INSPECTION, Keyless Entry System.> |