


## 35. Day Time Running Resistor

### A: REMOVAL

- 1) Remove the front bumper face assembly. <Ref. to EI-37, REMOVAL, Front Bumper.>
- 2) Remove the daytime running resistor.
  - (1) Disconnect the connector.
  - (2) Remove the bolt, and remove the daytime running resistor.

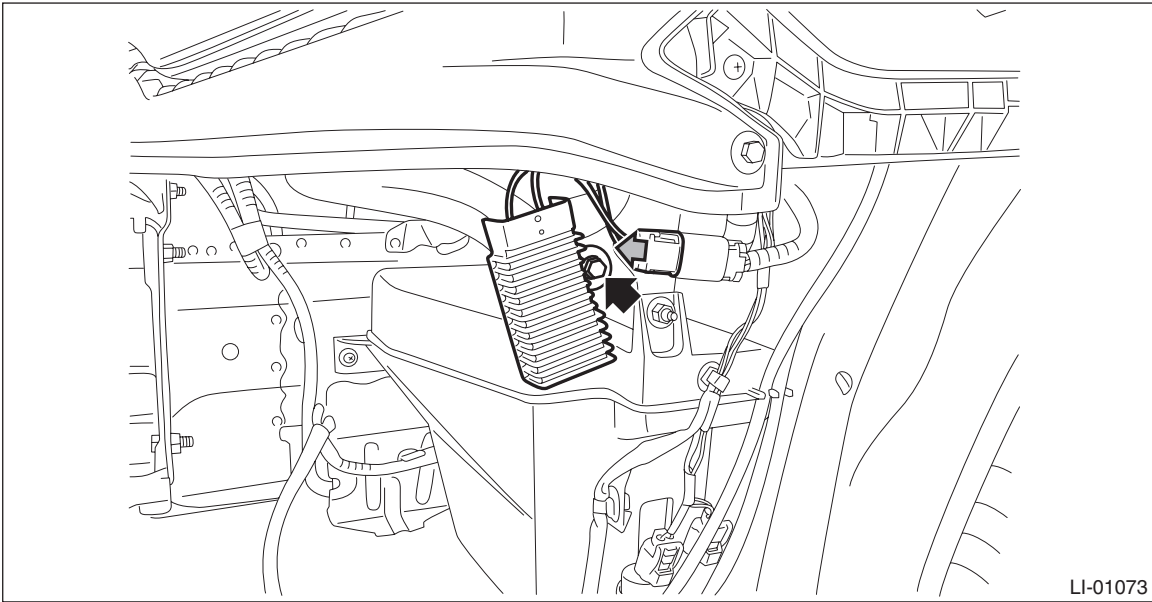

LI-01073

### B: INSTALLATION

- 1) Install each part in the reverse order of removal.

#### **Tightening torque:**

**Daytime running resistor: 7.5 N·m (0.76 kgf-m, 5.5 ft-lb)**

- 2) Adjust the fog light beam. (Model with fog light) <Ref. to LI-42, FOG LIGHT AIMING, ADJUSTMENT, Front Fog Light Assembly.>