


## 37. Door Switch

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the door switch.
  - (1) Remove the screws, and pull out the door switch.
  - (2) Disconnect the connector and remove the door switch.

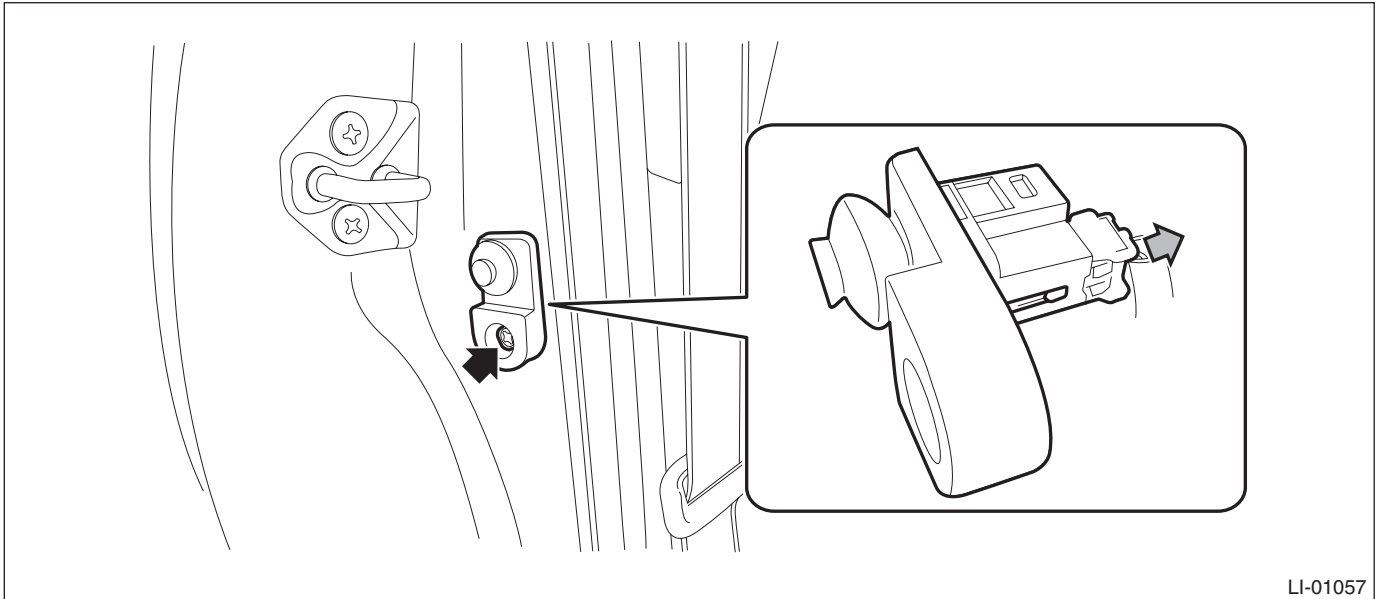

LI-01057

### B: INSTALLATION

Install each part in the reverse order of removal.

### C: INSPECTION

Refer to "CHECK DOOR SWITCH" of "Interior Light System". <Ref. to LI-16, CHECK DOOR SWITCH, INSPECTION, Interior Light System.>

# Door Switch

LIGHTING SYSTEM

---

# WIPER AND WASHER SYSTEMS



---

	<b>Page</b>
1. General Description .....	2
2. Wiper and Washer System .....	8
3. Combination Switch (Wiper) .....	9
4. Wiper Blade .....	16
5. Washer Tank and Motor .....	19
6. Front Wiper Arm .....	25
7. Front Wiper Motor and Link .....	27
8. Front Washer Nozzle .....	33
9. Rear Wiper Arm .....	38
10. Rear Wiper Motor .....	40
11. Rear Washer .....	45