

Display of Status Information

OCCUPANT DETECTION SYSTEM (DIAGNOSTICS)

11. Display of Status Information

A: OPERATION

Check the operating condition of each sensor in the event of malfunction in the seat belt buckle switch, or when the seat belt buckle switch has been replaced.

- 1) On «Main Menu» display, select {Each System Check}.
- 2) On «System Selection Menu» display, select {Airbag System}.
- 3) On «Airbag System» display, select {Current Data Display & Save}.

The following table is for support data.

Item	Display	Note
Trip Count	—	—
Count	—	—
Time Count	—	—
Belt Buckle Switch RH	Unbelted/Belted	“Belted” when passenger’s seat belt is fastened “Unbelted” when passenger’s seat belt is not fastened
Passenger Occupant Status	Adult/Child/Empty or CRS	“Adult” when the occupant is present “Child” or “Empty or CRS” when the seat is unoccupied or when child restraint seat is installed
Passenger Airbag Status	ON/OFF	“ON” when the passenger occupant status is “Occupied” “OFF” when the status is “Empty or CRS”

NOTE:

For detailed operation procedures, refer to “PC application help for Subaru Select Monitor”.