

List of Diagnostic Trouble Code (DTC)

OCCUPANT DETECTION SYSTEM (DIAGNOSTICS)

15. List of Diagnostic Trouble Code (DTC)

A: LIST

| DTC | Item | Content of diagnosis | Reference |
|-------|---|---|---|
| B1650 | Occupant Classification System Malfunction | <ul style="list-style-type: none"> • Occupant detection sensor is faulty. • Occupant detection control module is faulty. • Occupant detection harness is faulty. • Fuse is blown. | <Ref. to OD(diag)-23, DTC B1650 OCCUPANT CLASSIFICATION SYSTEM MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| B1655 | Front Buckle Switch RH Failure | <ul style="list-style-type: none"> • Passenger's buckle switch circuit is open, shorted or shorted to ground. • Occupant detection system is faulty. • Occupant detection harness is faulty. | <Ref. to OD(diag)-25, DTC B1655 FRONT BUCKLE SWITCH RH FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| B16EE | Occupant Detection System Calibration error | <ul style="list-style-type: none"> • Occupant detection control module is faulty. • Calibration of occupant detection control module is initial setting or faulty. | <Ref. to OD(diag)-26, DTC B16EE ODS CALIBRATION ERROR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |
| B16EF | Occupant Detection System wrong parts | <ul style="list-style-type: none"> • Specification of occupant detection control module is improper. • Occupant detection control module is faulty. | <Ref. to OD(diag)-26, DTC B16EF ODS SYSTEM WRONG PARTS, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> |